


# PIXXI Serial (SPE) Command Set

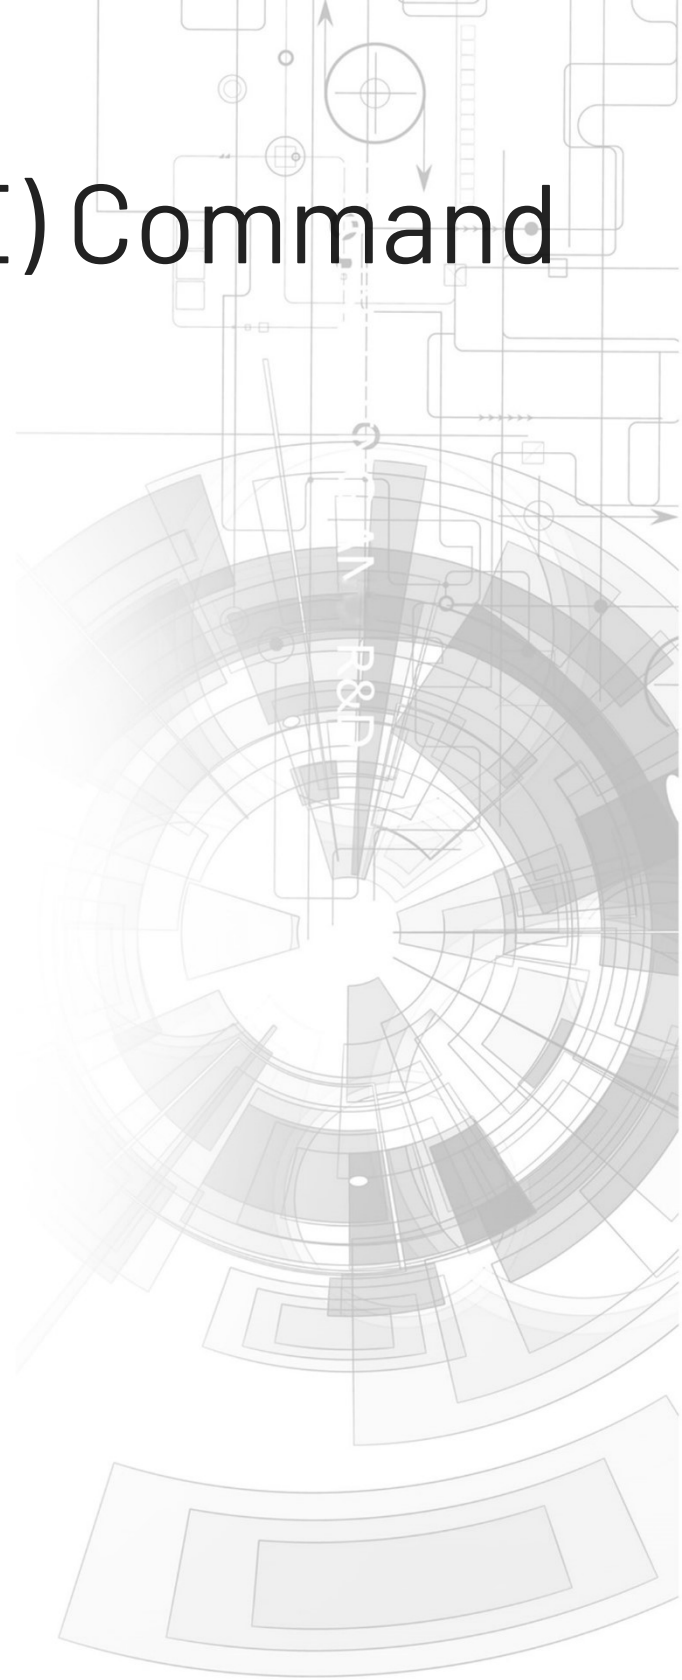

## Manual

Revision 1.3

Copyright © 2024 4D Systems

Content may change at any time. Please refer to the resource centre for latest documentation.

# Contents

---

1. Pixxi and Processor	9
2. Introduction to using Workshop4 in the Serial Environment	10
2.1. How to configure your Display Module as a Serial Slave	10
2.2. Additional configuration parameters for Serial Communication	11
2.3. Host Interface	12
2.4. Introduction and Guidelines to the Serial Protocol	12
2.5. Power-Up and Reset	12
2.6. Splash Screen	13
2.7. Power Supply	13
3. The Serial Command Set - Explained	14
3.1. Example 1 - Moving the Cursor	14
3.2. Example 2 - Drawing a Hollow Rectangle	14
4. Using Serial with a Library	16
4.1. Available Libraries	16
4.2. Benefits to using a Library	16
4.3. Basic Example of using a library	16
4.4. Library References	17
4.5. Arduino Specific library commands	17
4.5.1. print	17
4.5.2. println	19
5. PIXXI Serial Commands	20
5.1. Text and String Commands	20
5.1.1. Move Cursor	21
5.1.2. Put Character	22
5.1.3. Put String	23
5.1.4. Character Width	24
5.1.5. Character Height	25
5.1.6. Text Foreground Colour	26

5.1.7. Text Background Colour	27
5.1.8. Set Font	28
5.1.9. Text Width	29
5.1.10. Text Height	30
5.1.11. Text X-gap	31
5.1.12. Text Y-gap	32
5.1.13. Text Bold	33
5.1.14. Text Inverse	34
5.1.15. Text Italic	35
5.1.16. Text Opacity	36
5.1.17. Text Underline	37
5.1.18. Text Attributes	38
5.1.19. Text Wrap	39
5.2. Graphics Commands	40
5.2.1. Clear Screen	42
5.2.2. Change Colour	43
5.2.3. Draw Circle	44
5.2.4. Draw Filled Circle	45
5.2.5. Draw Line	46
5.2.6. Draw Rectangle	47
5.2.7. Draw Filled Rectangle	48
5.2.8. Draw Polyline	49
5.2.9. Draw Polygon	50
5.2.10. Draw Filled Polygon	51
5.2.11. Draw Triangle	52
5.2.12. Draw Filled Triangle	53
5.2.13. Calculate Orbit	54
5.2.14. Put pixel	55
5.2.15. Read Pixel	56
5.2.16. Move Origin	57
5.2.17. Draw Line & Move Origin	58

5.2.18. Clipping	59
5.2.19. Set Clip Window	60
5.2.20. Extend Clip Region	61
5.2.21. Draw Ellipse	62
5.2.22. Draw Filled Ellipse	63
5.2.23. Draw Button	64
5.2.24. Draw Panel	66
5.2.25. Draw Slider	67
5.2.26. Screen Copy Paste	69
5.2.27. Bevel Shadow	70
5.2.28. Bevel Width	71
5.2.29. Background Colour	72
5.2.30. Outline Colour	73
5.2.31. Contrast	74
5.2.32. Frame Delay	75
5.2.33. Line Pattern	76
5.2.34. Screen Mode	77
5.2.35. Transparency	78
5.2.36. Transparent Colour	79
5.2.37. Set Graphics Parameters	80
5.2.38. Get Graphics Parameters	81
5.2.39. Draw Scale	82
5.2.40. Draw Panel 2	83
5.2.41. Draw Button 4	84
5.2.42. Draw Switch	85
5.2.43. Draw Slider 5	86
5.2.44. Draw Dial	87
5.2.45. Draw Led	88
5.2.46. Draw Gauge	89
5.2.47. Draw Angular Meter	90
5.2.48. Draw Led Digit	91

5.2.49. Draw Led Digits	92
5.3. Media Commands (SD/SDHC Memory Cards)	93
5.3.1. Media Init	94
5.3.2. Set Byte Address	95
5.3.3. Set Sector Address	96
5.3.4. Read Sector	97
5.3.5. Write Sector	98
5.3.6. Read Byte	99
5.3.7. Read Word	100
5.3.8. Write Byte	101
5.3.9. Write Word	102
5.3.10. Flush Media	103
5.3.11. Display Image (RAW)	104
5.3.12. Display Video (RAW)	105
5.3.13. Display Video Frame (RAW)	106
5.4. Serial (UART) Communications Commands	107
5.4.1. Set Baud Rate	108
5.5. Timer Commands	110
5.5.1. Sleep	111
5.6. FAT16 File Commands	112
5.6.1. File Error	114
5.6.2. File Count	116
5.6.3. List Filenames	117
5.6.4. Find First File	118
5.6.5. Find First File and Report	119
5.6.6. Find Next File	120
5.6.7. Find Next File and Report	121
5.6.8. File Exists	122
5.6.9. File Open	123
5.6.10. File Close	125
5.6.11. File Read	126

5.6.12. File Seek	127
5.6.13. File Index	129
5.6.14. File Tell	131
5.6.15. File Write	132
5.6.16. File Size	133
5.6.17. Display Image (FAT)	134
5.6.18. Screen Capture	135
5.6.19. Write Character to the File	136
5.6.20. Read Character from the File	137
5.6.21. Write Word to the File	138
5.6.22. Read Word from the File	139
5.6.23. Write String to the File	140
5.6.24. Read String from the File	141
5.6.25. File Erase	142
5.6.26. File Rewind	143
5.6.27. File Load Function	144
5.6.28. File Call Function	146
5.6.29. File Run	149
5.6.30. File Execute	152
5.6.31. Load Image Control	155
5.6.32. File Mount	157
5.6.33. File Unmount	158
5.6.34. Play WAV File	159
5.6.35. To Load String for 4XE/4FN File	161
5.6.36. Read String for 4XE/4FN File	162
5.7. Sound Control Commands	164
5.7.1. Sound Volume	165
5.7.2. Sound Pitch	166
5.7.3. Sound Buffer	167
5.7.4. Sound Stop	168
5.7.5. Sound Pause	169

5.7.6. Sound Continue	170
5.7.7. Sound Playing	171
5.8. Touch Screen Commands	172
5.8.1. Touch Detect Region	173
5.8.2. Touch Set	174
5.8.3. Touch Get	175
5.9. Image Control Commands	176
5.9.1. Image Set Position	177
5.9.2. Image Enable	178
5.9.3. Image Disable	179
5.9.4. Image Darken	180
5.9.5. Image Lighten	181
5.9.6. Set Image Parameters	182
5.9.7. Get Image Parameters	184
5.9.8. Show Image	185
5.9.9. Set Image Attributes	186
5.9.10. Clear Image Attributes	187
5.9.11. Image Touched	189
5.9.12. Blit Com to Display	190
5.10. Widget Control Commands	191
5.10.1. Create Widget Handle	192
5.10.2. Add Widget to Handle	193
5.10.3. Delete Widget from Handle	194
5.10.4. Reallocate Widget Handle	195
5.10.5. Set Widget Word	196
5.10.6. Get Widget Word	198
5.10.7. Set Widget Position	200
5.10.8. Enable Widget	201
5.10.9. Disable Widget	202
5.10.10. Set Widget Attributes	203
5.10.11. Clear Widget Attributes	204


5.10.12. Widget Touched	205
5.10.13. Initialize Widget Gradient RAM	206
5.10.14. Call Inherent Function from Flash	207
5.11. System Commands	209
5.11.1. Memory Allocation	210
5.11.2. Memory Release	211
5.11.3. Memory Status	212
5.11.4. Send Word Array to RAM	213
5.11.5. Send Byte Array to RAM	214
5.11.6. Get Display Model	215
5.11.7. Get SPE Version	216
5.11.8. Get PmmC Version	217
5.11.9. Peek Memory	218
5.11.10. Poke Memory	219
5.12. I/O Commands	220
5.12.1. Pin HI	221
5.12.2. Pin LO	223
5.12.3. Pin Read	225
5.12.4. Pin Set	227
6. Revision History	229
7. Legal Notice	230
7.1. Proprietary Information	230
7.2. Disclaimer of Warranties & Limitations of Liabilities	230



# 1. Pixxi and Processor

The PIXXI processors by 4D Labs are in a family of embedded graphics processors powered by a highly optimised soft-core virtual engine, E.V.E. (Extensible Virtual Engine).

EVE is a proprietary, high performance virtual processor with an extensive byte-code instruction set optimised to execute compiled 4DGL programs. 4DGL (4D Graphics Language) was specifically developed from ground up for the EVE engine core. It is a high-level language which is easy to learn and simple to understand yet powerful enough to tackle many embedded graphics applications.

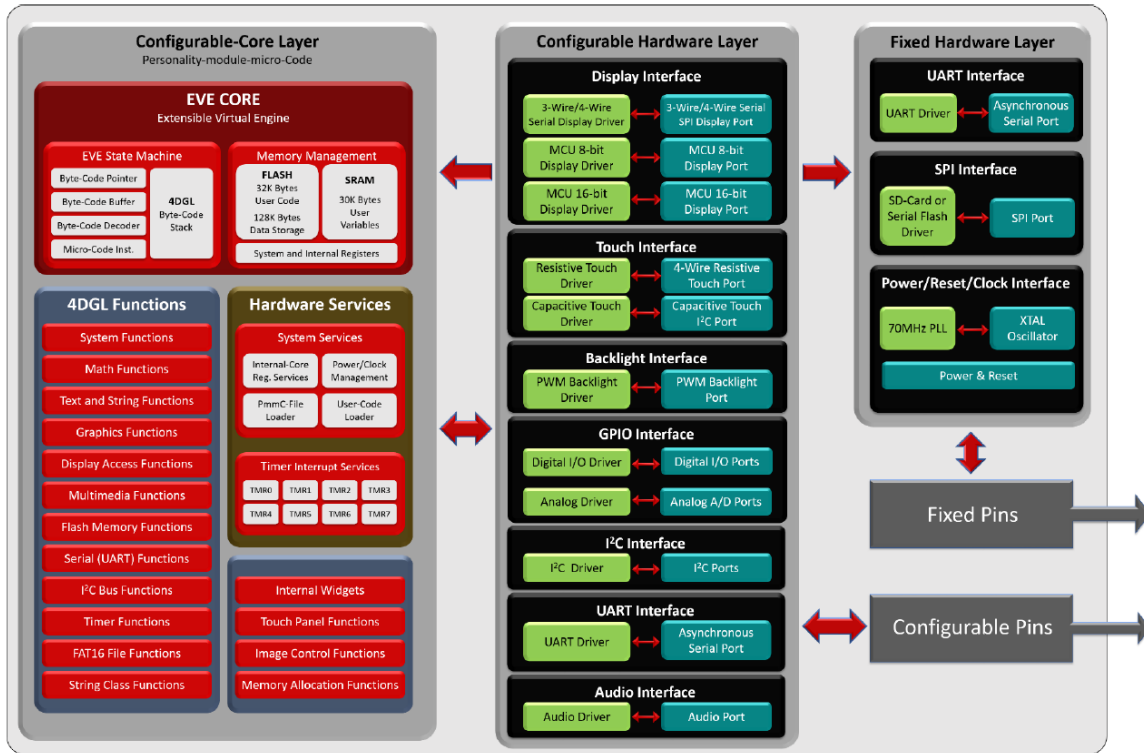

PIXXI Internal Block Diagram

The PIXXI processors can be configured in a number of ways, depending on the needs of the user. Using the Workshop4 IDE by 4D Labs, the user has the choice of 4 programming environments, Designer, ViSi, ViSi-Genie and the Serial Environment.

This document targets the Serial Environment, how to configure a PIXXI display module to be 'Serial Ready', and all the commands available in the Serial Environment to send the display from your host controller of choice.

For more information on Workshop4 in general or the other Environments available in Workshop4, please refer to the Workshop4 User Guide, available from the [4D Systems website](#).

## 2. Introduction to using Workshop4 in the Serial Environment

The PIXXI processors can be programmed to act as a ‘serial slave’ device, responding to the serial commands sent from virtually any host controller.


### 2.1. How to configure your Display Module as a Serial Slave

To set up your display module to be a serial display is a very simple process. It basically requires the user to download a program to the flash memory of the processor.

When a user starts the Workshop4 IDE, starts a new project, selects their module of choice, and then selects the Serial Environment, the user is presented with a basic environment to get them started using their chosen display as a Serial Slave.




Create New Project

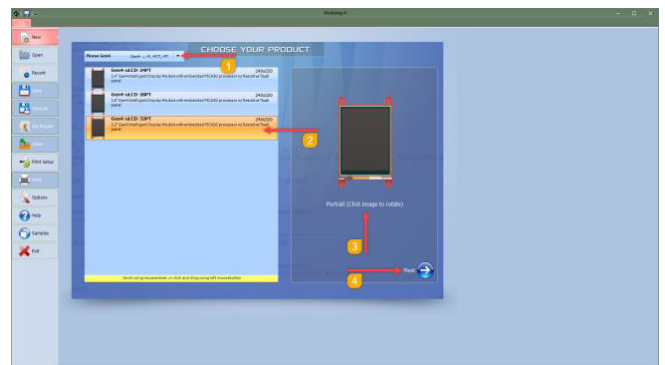

Select a Display module



Select Serial Environment

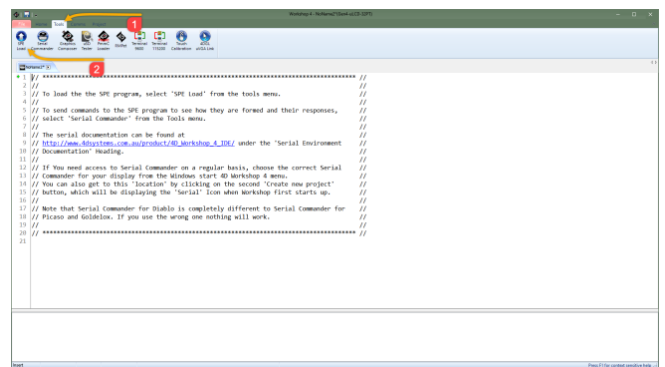

Serial Environment

In the ‘Tools’ menu of the Serial Environment, is a button called ‘SPE Load’. SPE stands for “Serial Platform Environment”. If your display module is connected to the PC via the 4D Systems Programming Cable, clicking this button will load a special 4DGL application onto your module. This application is known as the SPE Application, and will enable your chosen module to run as a Serial Slave.

**Note**


Display Modules from 4D Systems are **SPE READY** by default, meaning the SPE Application has been loaded to each of the modules at the 4D Systems Factory. The user can reload the **SPE** Application if required, to update the **SPE Application** on board OR to move over to the **Serial Environment** from another Workshop4 Environment such as Designer, ViSi or ViSi-Genie.

Once the chosen display module is 'SPE READY', either brand new out of the box, or programmed to have the SPE application via the above instructions, the user can begin programming their host of choice to communicate to the 4D Systems display module.

## 2.2. Additional configuration parameters for Serial Communication

When the SPE Application is loaded to the Display Module from the 4D Systems factory, the Baud Rate is set to the initial default of 9600. This initial Baud Rate can be modified, so when the Display Module starts up, it is at the desired Baud Rate without having to send commands to change it from the Host.

To change the default Baud Rate, click on the Option button on the buttons down the left hand side of the Workshop4 IDE, click on the Serial tab, and change the 'Serial Environment Initial Baud Rate' to be whatever is suitable for your application.

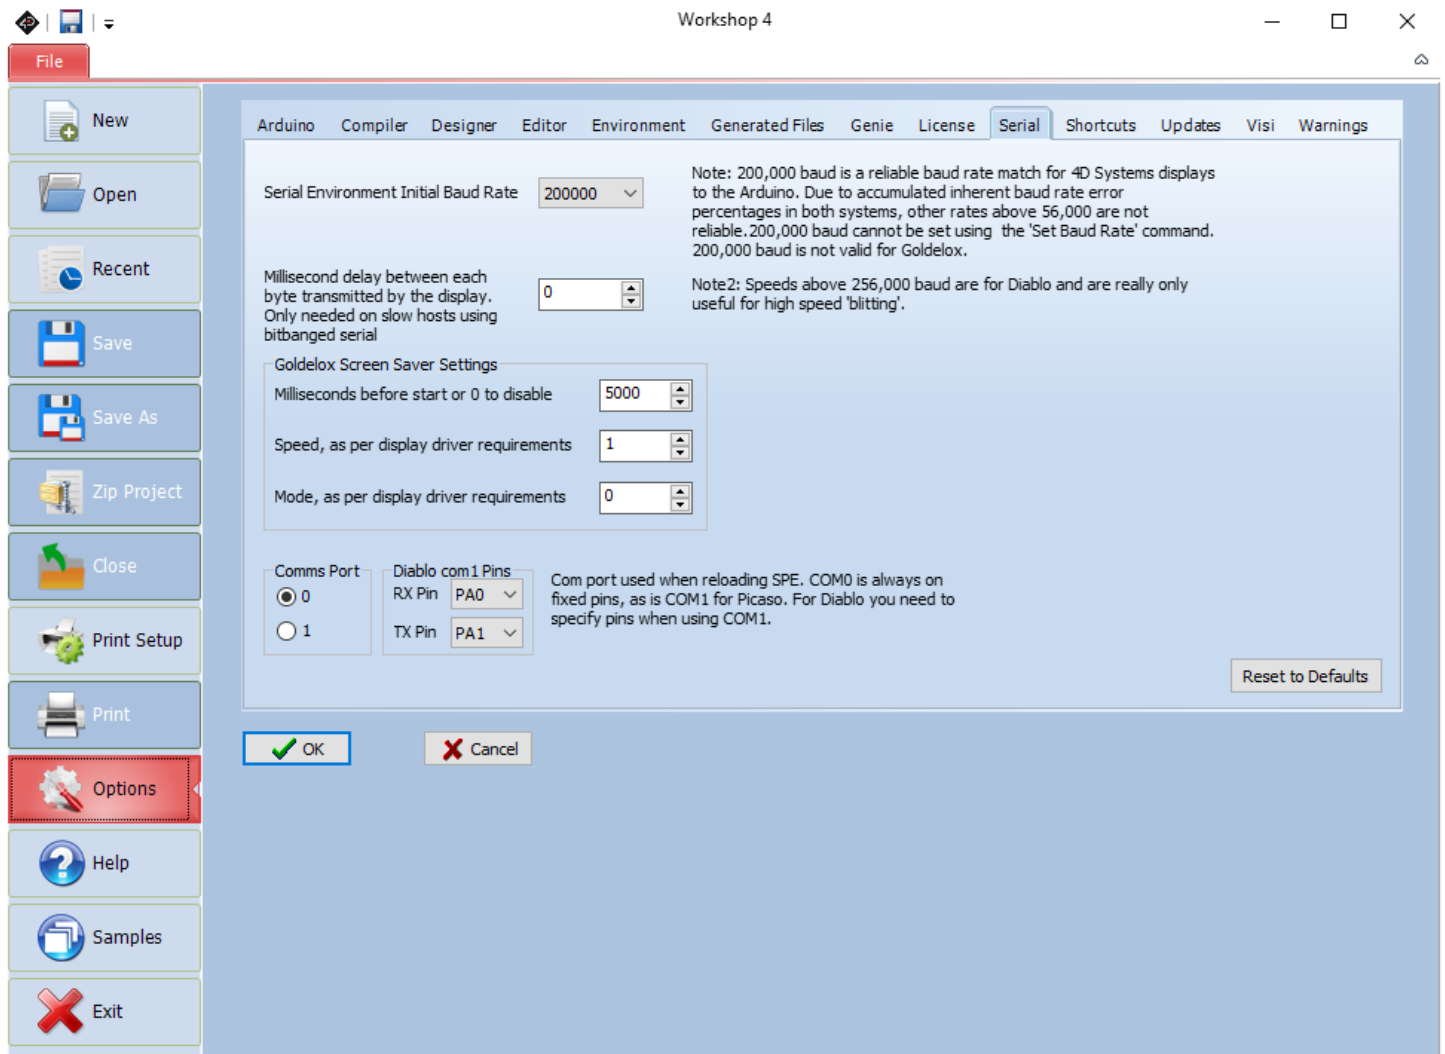

**Note**

The initial Baud rate and 'slowdown' settings for slow systems can be set under 'options', 'serial' before loading SPE.

Once the desired Baud Rate has been set, along with any 'Slowdown' delay (where required), the Display Module needs to have the SPE Application loaded once again, so these settings can take effect. Simply follow the instructions in [How to configure your Display Module as a Serial Slave](#), to load the updated SPE Application onto the Display Module.

## 2.3. Host Interface

When a Display Module is loaded with the SPE Application, it enables communication to a Serial Host over a bidirectional serial interface via its Serial UART. All communications between the host and the device occur over this serial interface. The protocol is simple and easy to implement.

**Note**

Serial Data Format: 8 Bits, No Parity, 1 Stop Bit. Serial data is true and not inverted.

## 2.4. Introduction and Guidelines to the Serial Protocol

The Serial Protocol used with the SPE Application is a set of commands with associated parameters, to enable the Host Controller to display primitives, text, images, play audio, video or data log to micro-SD card, receive touch events etc on the 4D Systems Display Module, in the simplest manner available.

The Serial Protocol is made up of commands and parameters, sent over the Serial Port in byte format to the Display Module. Each command is unique and has a specific set of parameters associated with it. Each command that is sent to the Display Module is replied to with a response. Some commands do not specifically require a response, so for these commands the Display will reply with an Acknowledge once successfully executed.

Commands that require a specific response may send back a varying number of bytes, depending on the command and what the response is.

Each Command sent to the display will require a certain amount of time before the response is sent, again dependent on the command and the operation that must be performed.

Commands should only be sent, and their response received, before another command is sent. If two commands are sent before the first response is received, incorrect operation may follow.

## 2.5. Power-Up and Reset

When the display module come out of a power-up or external reset, a sequence of events is executed internally. The user should wait at least 3 seconds for the start-up to take place before attempting to communicate with the module.

## 2.6. Splash Screen

The splash screen appears on the screen 5 seconds after the start-up routines have been executed, provided there has been no serial activity.

The Splash screen can be customised if required. Please contact the 4D Systems Support team for more information on how this is done. This can be useful when integrating a 4D Systems product into a custom product, and SPE will be used, so it can be customised for your company/product requirements.

## 2.7. Power Supply

When powering 4D System display modules, odd behaviour can be experienced if they are not supplied enough current. This is especially noticeable when powering the Host Controller board and the Display Module from the same USB port of your computer.

Please ensure you power your 4D System display from a suitable power supply, based on the requirements of the display module, specified in the individual datasheets.

---

### 3. The Serial Command Set - Explained

The Serial Protocol and associated Commands enable the user to send bytes serially from the chosen Host Controller, to the 4D Display module loaded with the SPE Application, and control or receive information from, the Display Module.

In the Pixxi Serial Protocol Command Set, there are currently 135 Commands available to the user. Each command send to the Display Module will incur a response of some description from the Display Module. This may be in the form of data, or a simple ACK that the command has been received. Here are examples to better illustrate a few commands.

#### 3.1. Example 1 – Moving the Cursor

Aim: Moving the Cursor to a specific location on the display, so text can originate from that point.

*MoveCursor Command:* HEX 0xFFE9 (2 bytes) – (Library Function txt\_MoveCursor)

*MoveCursor Parameters:* Line Number (2 bytes), Row Number (2 bytes)

*MoveCursor Returns:* Acknowledge HEX 0x06

To Move the Cursor to Line Number=7, Row Number=12, firstly the 7 and 12 need to be converted into bytes. 7 is 0x7 and 12 is 0x0C. Because the command requires 2 bytes for each of these parameters to be sent, the first byte in this example will be 0x00 for both the Line and the Row.

*The Bytes that will need to be sent will be: 0xFF, 0xE9, 0x00, 0x07, 0x00, 0x0C*

*The Bytes that will be received back from the display will be: 0x06*

#### 3.2. Example 2 – Drawing a Hollow Rectangle

Aim: Draw a Hollow Rectangle at a specific location on the display, with a specific outline colour

*Rectangle Command:* HEX 0xFFC5 (2 bytes) – (Library Function gfx\_Rectangle)

*Rectangle Parameters:* X1 Position (2 bytes), Y1 Position (2 bytes), X2 Position (2 bytes), Y2 Position (2 bytes), Colour(2 bytes)

*Rectangle Returns:* Acknowledge HEX 0x06

To draw a Blue rectangle starting with the top left corner at X=100, Y=100 and the bottom right corner at X=200, Y=250, firstly the 100, 200 and 250 numbers need to be converted into bytes.

100 is 0x64, 200 is 0xC8 and 300 is 0x012C. Because the command requires 2 bytes for each of these parameters to be sent, the first byte in this example will be 0x00 for X1, Y1, and X2. Y2 utilises 2 bytes.

Finally, the colour needs to be sent as 2 bytes. The colour Blue is 0x001F.

*The Bytes to be sent will be: 0xFF, 0xC5, 0x00, 0x64, 0x00, 0x64, 0x00, 0xC8, 0x01, 0x2C, 0x00, 0x1F*

*The Bytes that will be received back from the display will be: 0x06*

**Note**

Separation commas ',' between bytes that are shown in the Bytes to Send, and the Bytes Received syntax are purely for legibility purposes in this document and must not be considered as part of any transmitted/received data unless specifically stated.

---

## 4. Using Serial with a Library

### 4.1. Available Libraries

4D Labs has created a set of libraries suitable for a range of microcontrollers on the market to use and communicate with Pixxi display modules, when configured to be Serial Slaves using the SPE application and the Serial Environment in Workshop4.

The following libraries have been created and are **available from the Samples menu inside the Workshop4 IDE Software**, where the Workshop4 software is available from the 4D Labs website.

- Arduino Library
- C Library

These libraries enable the programmer to have access to all of the Serial Commands, but in a format that is more suited for High Level Programming, such as the Arduino IDE.

These are also available on [Github](#).

### 4.2. Benefits to using a Library

The libraries created by 4D Labs enable the user to simply include the library file in the code of their chosen Host Controller, and call high level functions (very similar and often equivalent to the 4DGL set of functions) instead of having to deal with the low level serial data bytes.

Please refer to the individual application notes on each of the libraries (as they become available), for a better understanding of what they include and how they are used in a Host controller. Refer to the Workshop4 product page on the 4D Labs website for more information, along with the modules product page.

### 4.3. Basic Example of using a library

If using the Arduino as the host controller of choice, by simply copying the library into the appropriate libraries folder for the Arduino IDE, and including the library in your sketch, the Arduino user will then have access to high level functions which provide many benefits over using the low level byte commands.

For example, to clear the display, and draw a rectangle from X1=10, Y1=110 to X2=200, Y2=220 in Red on the display, the following byte commands are required:

**Send to the display:** 0xFF, 0xCD

**Receive from the display:** 0x06

**Send to the display:** 0xFF, 0xC5, 0x00, 0x0A, 0x00, 0x6E, 0x00, 0xC8, 0x00, 0xDC, 0xF8, 0x00

**Receive from the display:** 0x06

Sending these commands from the Arduino would require each byte to be sent over the serial port to the display. 4D Labs has created a library to do this for you.



Using the Arduino library for example, the following functions would be required:

```
Display.gfx_Cls();
Display.gfx_Rectangle(10, 110, 200, 220, RED);
```

## 4.4. Library References

While this document is specifically for the Serial Command bytes, at the bottom of each command table is a reference to the relevant function that would be called if using the 4D Labs Serial Library.

## 4.5. Arduino Specific library commands

The following library commands are available to enable easy access to print formatting and display along the lines of their standard Arduino equivalents:

- print
- println

### 4.5.1. print

The **print** command converts the supplied parameter into standard ASCII text and calls the **Put string** command to print it to the screen in the current location and font.

**Library Function:** `print`

**Syntax:** `print(val, format)`

Commands	Description
val	The value to print, any format
format	Specifies the optional number base, for integer types, or the number of decimal places, for float types.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
print(F("Hello World")) ;
print(int) ;
print(int, OCT) ;
print(int, HEX) ;
print(float, 2) ;

// The Response will be 0x06 if the command is successfully executed
// Print needs to be prefixed with the library identifier. Eg Display.print(int) ;
```

**See also**

See the **Put String** command in the text and string Commands section. This is what is ultimately called to produce the displayed output from this command.

## 4.5.2. println

The **println** command converts the supplied parameter into standard ASCII text, appends a newline character (“\n”) and calls the **Put string** command to print it to the screen in the current location and font.

**Library Function:** println

**Syntax:** println(val, format)

Commands	Description
val	The value to print, any format
format	Specifies the optional number base, for integer types, or the number of decimal places, for float types.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
println(F("Hello World")) ;
println(int) ;
println(int, OCT) ;
println(int, HEX) ;
println(float, 2) ;

// The Response will be 0x06 if the command is successfully executed

// println needs to be prefixed with the library identifier. Eg Display.println(int) ;
```

#### See also

See the **Put String** command in the text and string Commands section. This is what is ultimately called to produce the displayed output from this command.

## 5. PIXXI Serial Commands

The following sections detail each of the commands available in the 4D Labs Serial Environment, when communicating to a 4D Systems Display Module loaded with the SPE Application. Please refer to [Introduction to using Workshop4 in the Serial Environment](#) for more information on how to do this.

### 5.1. Text and String Commands

The following is a summary of the commands available to be used for Text and Strings:

- Move Cursor
- Put Character
- Put String
- Character Width
- Character Height
- Text Foreground Colour
- Text Background Colour
- Set Font
- Text Width
- Text Height
- Text X-gap
- Text Y-gap
- Text Bold
- Text Inverse
- Text Italic
- Text Opacity
- Text Underline
- Text Attributes
- Text Wrap

### 5.1.1. Move Cursor

The **Move Cursor** command moves the text cursor to a screen position set by line and column parameters. The line and column position is calculated, based on the size and scaling factor for the currently selected font. When text is outputted to screen it will be displayed from this position. The text position could also be set with **Move Origin** command if required to set the text position to an exact pixel location. Note that lines and columns start from 0, so line 0, column 0 is the top left corner of the display.

**Library Function:** `txt_MoveCursor`

**Syntax:** `cmd (word), line (word), column (word)`

Commands	Description
cmd	0xFFE9
line	Holds a positive value for the required line position.
column	Holds a positive value for the required column position.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), line(MSB), line(LSB), column(MSB), column(LSB)

0xFF, 0xE9, 0x00, 0x05, 0x00, 0x03

// This will move the cursor to Line=5, Column=3
// Where 5 as 2 bytes is 0x00 and 0x05, and 3 as 2 bytes is 0x00 and 0x03

// The Response will be 0x06 if the command is successfully executed
```

#### See also

The **Move Origin** command in the Graphics Commands section to move the origin to an exact pixel on the screen, which is suitable for both text and graphics.

## 5.1.2. Put Character

The **Put Character** command prints a single character to the display

**Library Function:** `putCH`

**Syntax:** `cmd (word), character (word)`

Commands	Description
<code>cmd</code>	0xFFFE
<code>character</code>	Holds a positive value for the required character.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), character(MSB), character(LSB)  
  
0xFF, 0xFE, 0x00, 0x39  
  
// This will send the character '9' (0x00, 0x39) to the display  
// The response will be 0x06 assuming the command was successful executed
```

#### See also

The **Move Origin** command in the Graphics Commands section to move the origin to an exact pixel on the screen, which is suitable for both text and graphics.

### 5.1.3. Put String

The **Put String** command prints a string to the display. The argument can be a string constant or a pointer to a string.

A string needs to be terminated with a NULL.

**Library Function:** `putstr`

**Syntax:** `cmd (word), string (string)`

Commands	Description
cmd	0x0018
string	Holds a Null terminated string. char0, char1, char2, ..., charN, NULL <b>NOTE:</b> Maximum characters in the string is 511 + NULL

**Returns:** `acknowledge (byte), stringlength (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *stringlength*: Length of the string printed

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, ..., charN, NULL

0x00, 0x18, 0x48, 0x65, 0x6C, 0x6C, 0x6F, 0x00

// This will send the string "Hello" to the display, as H = 0x48, e = 0x65, l = 0x6C
// and o = 0x6F, followed by a NULL = 0x00.
// The response will be 0x06, 0x00, 0x05 indicating ACK followed by the number 5 for
// length expressed as 2 bytes (1 word).
```

#### **i** See also

The **Move Origin** command in the Graphics Commands section to move the origin to an exact pixel on the screen, which is suitable for both text and graphics.

### 5.1.4. Character Width

The **Character Width** command is used to calculate the width in pixel units for a character, based on the currently selected font. The font can be proportional or mono-spaced. If the total width of the character exceeds 255 pixel units, the function will return the 'wrapped' (modulo 8) value.

**Library Function:** `charwidth`

**Syntax:** `cmd (word), char (byte)`

Commands	Description
<code>cmd</code>	0x001E
<code>char</code>	The ASCII character for the width calculation.

**Returns:** `acknowledge (byte), width (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *width*: Width of a single character in pixel units.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char

0x00, 0x1E, 0x65

// This is requesting the width in pixels of the character 'e', as ASCII 'e' is Hex 0x65
// Assuming for example the selected font is FONT3
// The response will be 0x06, 0x00, 0x08 where 0x00, 0x08 is Decimal 8 (FONT 3 is a 12x8
// font)
```



## 5.1.5. Character Height

The **Character Height** command is used to calculate the height in pixel units for a character, based on the currently selected font. The font can be proportional or mono-spaced. If the total height of the character exceeds 255 pixel units, the function will return the 'wrapped' (modulo 8) value.

**Library Function:** `charheight`

**Syntax:** `cmd (word), char (byte)`

Commands	Description
<code>cmd</code>	0x001D
<code>char</code>	The ascii character for the height calculation.

**Returns:** `acknowledge (byte), height (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *height*: Height of a single character in pixel units.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char

0x00, 0x1D, 0x65

// This is requesting the height in pixels of the character 'e', as ASCII 'e' is Hex 0x65
// Assuming for example the selected font is FONT3
// The response will be 0x06, 0x00, 0x0C where 0x00, 0x0C is Decimal 12 (FONT 3 is a 12x8
// font)
```

## 5.1.6. Text Foreground Colour

The **Text Foreground Colour** command sets the text foreground colour, and reports back the previous foreground colour.

**Library Function:** `txt_FGcolour`

**Syntax:** `cmd (word), colour (word)`

Commands	Description
<code>cmd</code>	0xFFE7
<code>colour</code>	Specifies the colour to be set.

**Returns:** `acknowledge (byte), colour (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *colour*: Previous Text Foreground Colour.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), colour(MSB), colour(LSB)  
  
0xFF, 0xE7, 0x00, 0x10  
  
// This is setting the Foreground colour to Navy, which is Hex 0x00, 0x10  
// The Response will be 0x06, 0x04, 0x00 assuming the previous colour was Green,  
// which is 0x04, 0x00
```

### 5.1.7. Text Background Colour

The **Text Background Colour** command sets the text background colour, and reports back the previous background colour.

**Library Function:** `txt_BGcolour`

**Syntax:** `cmd (word), colour (word)`

Commands	Description
<code>cmd</code>	0xFFE6
<code>colour</code>	Specifies the colour to be set.

**Returns:** acknowledge (byte), colour (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *colour*: Previous Text Background Colour.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), colour(MSB), colour(LSB)  
  
0xFF, 0xE6, 0xF8, 0x00  
  
// This is setting the Background colour to Red, which is Hex 0xF8, 0x00  
// The Response will be 0x06, 0x00, 0x10 assuming the previous colour was Navy,  
// which is 0x00, 0x10
```

### 5.1.8. Set Font

The **Set Font** command sets the required font using its ID, and report back the previous Font ID used.

**Library Function:** `txt_FontID`

**Syntax:** `cmd (word), id (word)`

Commands	Description
cmd	0xFFE5
id	<p>0 for FONT1 = System font            1 for FONT2            2 for FONT3 = Default font</p> <p><b>NOTE:</b> The value could also be the handle of a uSD based font obtained using <code>file_LoadImageControl()</code>. The font would generally have been generated using a Strings object in ViSi (easy) or from a the FONT TOOL (harder). (Please refer to the application Notes).</p> <p>Preferably use the FONT1, FONT2 and FONT3 predefined constants.</p>

**Returns:** (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Font ID.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), id(MSB), id(LSB)

0xFF, 0xE5, 0x00, 0x02

// This will set the font to be FONT3 which is 0x00, 0x02
// The response will be 0x06, 0x00, 0x00 assuming the previous font was FONT1,
// where FONT1 is 0x00, 0x00
```

## 5.1.9. Text Width

The **Text Width** command sets the text width multiplier between 1 and 16, and returns the previous multiplier.

**Library Function:** `txt_Width`

**Syntax:** `cmd (word), multiplier (word)`

Commands	Description
<code>cmd</code>	0xFFE4
<code>multiplier</code>	Width multiplier 1 to 16 (Default =1)

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Multiplier value.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), multiplier(MSB), multiplier (LSB)  
  
0xFF, 0xE4, 0x00, 0x05  
  
// This will set the Text Width to be 5x that of the default  
// The response will be 0x06, 0x00, 0x01 assuming the previous Text width multiplier was 1  
// (0x00, 0x01)
```

### 5.1.10. Text Height

The **Text Height** command sets the text height multiplier between 1 and 16, and returns the previous multiplier.

**Library Function:** `txt_Height`

**Syntax:** `cmd (word), multiplier (word)`

Commands	Description
<code>cmd</code>	0xFFE3
<code>multiplier</code>	Height multiplier. 1 to 16 (Default =1)

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Multiplier value.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), multiplier(MSB), multiplier (LSB)  
  
0xFF, 0xE3, 0x00, 0x02  
  
// This will set the Text Height to be 2x that of the default  
// The response will be 0x06, 0x00, 0x01 assuming the previous Text height multiplier was 1  
// (0x00, 0x01)
```

### 5.1.11. Text X-gap

The **Text X-gap** command sets the pixel gap between characters (x-axis), where the gap is in pixel units, and the response is the previous pixelcount value.

**Library Function:** `txt_Xgap`

**Syntax:** `cmd (word), pixelcount (word)`

Commands	Description
<code>cmd</code>	0xFFE2
<code>pixelcount</code>	0 to 32(Default =0)

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous pixelcount value.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), pixelcount(MSB), pixelcount(LSB)

0xFF, 0xE2, 0x00, 0x02

// This will set the text X-Gap to be 2 pixels, where 2 pixels is 0x00, 0x02
// The response will be 0x06, 0x00, 0x00 assuming the previous text X-gap was 0
```

### 5.1.12. Text Y-gap

The **Text Y-gap** command sets the pixel gap between characters (y-axis), where the gap is in pixel units, and the response is the previous pixelcount value.

This command is required to be used if setting text to have an 'Underline' using the **Text Underline** command, or **Text Attributes** command with the suitable bits set. See these command for further information.

**Library Function:** `txt_Ygap`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFFE1
<code>pixelcount</code>	0 to 32(Default =0)

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous pixelcount value.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), pixelcount(MSB), pixelcount(LSB)

0xFF, 0xE1, 0x00, 0x05

// This will set the text Y-Gap to be 5 pixels, where 5 pixels is 0x00, 0x05
// The response will be 0x06, 0x00, 0x00 assuming the previous text Y-gap was 0
```



### 5.1.13. Text Bold

The **Text Bold** command sets the Bold attribute for the text and report back the previous bold status.

**Library Function:** `txt_Bold`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFFDE
<code>mode</code>	1 for ON. 0 for OFF.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Bold status.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)  
  
0xFF, 0xDE, 0x00, 0x01  
  
// This will set the text to be bold, Bold = ON  
// The response will be 0x06, 0x00, 0x00 assuming the previous bold status was OFF  
// which is 0x00, 0x00
```

### 5.1.14. Text Inverse

The **Text Inverse** command sets the text to be inverse, and return the previous inverse status.

**Library Function:** `txt_Inverse`

**Syntax:** `cmd (word), mode (word)`

Commands	Description
<code>cmd</code>	0xFFDC
<code>mode</code>	1 for ON. 0 for OFF.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous 'Text Inverse' status.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)  
  
0xFF, 0xDC, 0x00, 0x01  
  
// This will set the text to be inverse, where inverse = ON = 0x00, 0x01  
// The response will be 0x06, 0x00, 0x00 assuming the previous inverse status was OFF,  
// which is 0x00, 0x00
```

### 5.1.15. Text Italic

The **Text Italic** command sets the text to italic, and return the previous text italic status.

**Library Function:** `txt_Italic`

**Syntax:** `cmd (word), mode (word)`

Commands	Description
<code>cmd</code>	0xFFDD
<code>mode</code>	1 for ON. 0 for OFF.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Italic Text status.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)  
  
0xFF, 0xDD, 0x00, 0x01  
  
// This will set the text to be italic, where italic = ON = 0x00, 0x01  
// The response will be 0x06, 0x00, 0x00 assuming the previous italic status was OFF,  
// which is 0x00, 0x00
```

### 5.1.16. Text Opacity

The Text Opacity command selects whether or not the 'background' pixels are drawn, and returns the previous text opacity status. (Default mode is OPAQUE with BLACK background.)

**Library Function:** `txt_Opacity`

**Syntax:** `cmd (word), mode (word)`

Commands	Description
<code>cmd</code>	0xFFDF
<code>mode</code>	1 for ON. (Opaque) 0 for OFF. (Transparent)

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Text Opacity status.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)

0xFF, 0xDF, 0x00, 0x00

// This will set the text to be transparent, where Opacity = OFF = 0x00, 0x00
// The response will be 0x06, 0x00, 0x01 assuming the previous opacity status was ON,
// which is 0x00, 0x01
```

### 5.1.17. Text Underline

The **Text Underline** command sets the text to underlined, and return the previous text underline status.

**Note:** The **Text Y-gap** command is required to be at least 2 for the underline to be visible, please refer to the **Text Y-gap** command for further information.

**Library Function:** `txt_Underline`

**Syntax:** `cmd (word), mode (word)`

Commands	Description
cmd	0xFFDB
mode	1 for ON. 0 for OFF.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Text Underline status.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)  
  
0xFF, 0xDB, 0x00, 0x01  
  
// This will set the text to be underlined, where Underline = ON = 0x00, 0x01  
// The response will be 0x06, 0x00, 0x00 assuming the previous underline status was OFF,  
// which is 0x00, 0x00
```

### 5.1.18. Text Attributes

The **Text Attributes** command controls the following functions grouped,

- Text Bold
- Text Italic
- Text Inverse
- Text Underlined

Returns the previous Text Attributes status

#### Note

**Text Y-gap** command is required to be at least 2 for the underline (Text Underlined attribute) to be visible, please refer to the **Text Y-gap** command for further information.

**Library Function:** `txt_Attributes`

**Syntax:** `cmd (word), value (word)`

Commands	Description
<code>cmd</code>	0xFFDA
<code>value</code>	(bit 5 or) DEC 16 for BOLD (bit 6 or) DEC 32 for ITALIC (bit 7 or) DEC 64 for INVERSE (bit 8 or) DEC 128 for UNDERLINED  Set or Clear the relevant bits to set the attributes for the text to be written.  (bits can be combined by using logical 'OR' of bits) <b>NOTE:</b> bits 0-3 and 8-15 are reserved.

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Text Attributes status.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB)

0xFF, 0xDA, 0x00, 0x90

// This will set the Text Attributes to be Bold and Underlined. Where Bold has the value 16
// and Underlined has the value 128, so 16+128=144 which is 0x90 in Hex.
// The response will be 0x06, 0x00, 0x00 assuming the previous attributes
// were No Bold, No Italic, No Inverse and No Underline.
```

### 5.1.19. Text Wrap

The **Text Wrap** command sets the pixel position where text wrap will occur at RHS.

The feature automatically resets when screen mode is changed. The value is in pixel units. Default value is 0.

**Library Function:** `txt_Wrap`

**Syntax:** `cmd (word), value (word)`

Commands	Description
<code>cmd</code>	0xFFD9
<code>value</code>	0 for OFF. 1 to N for ON, in Pixels.

**Returns:** acknowledge (byte), previous (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *previous*: Returns the previous wrap position

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)

0xFF, 0xD9, 0x01, 0xA4

// This will set the wrap position to be at Pixel 420 from the left of the display,
// where Wrap = ON at pixel 420 = 0x01, 0xA4
// The response will be 0x06, 0x00, 0x00 assuming the previous wrap position was OFF,
// which is 0x00, 0x00
```

## 5.2. Graphics Commands

The following is a summary of the commands available to be used for Graphics:

- Clear Screen
- Change Colour
- Draw Circle
- Draw Filled Circle
- Draw Line
- Draw Rectangle
- Draw Filled Rectangle
- Draw Polyline
- Draw Polygon
- Draw Filled Polygon
- Draw Triangle
- Draw Filled Triangle
- Calculate Orbit
- Put Pixel
- Read Pixel
- Move Origin
- Draw Line and Move Origin
- Clipping
- Set Clip Window
- Extend Clip Region
- Draw Ellipse
- Draw Filled Ellipse
- Draw Button
- Draw Panel
- Draw Slider
- Screen Copy Paste
- Bevel Shadow



- Bevel Width
- Background Colour
- Outline Colour
- Contrast
- Frame Delay
- Line Pattern
- Screen Mode
- Transparency
- Transparent Colour
- Set Graphics Parameters
- Get Graphics Parameters

### 5.2.1. Clear Screen

The **Clear Screen** command clears the screen using the current background colour. This command brings some of the settings back to default; such as,

- Transparency turned OFF
- Outline colour set to BLACK
- Opacity set to OPAQUE
- Pen set to OUTLINE
- Line patterns set to OFF
- Right text margin set to full width
- Text magnifications set to 1
- All origins set to 0:0

The alternative to maintain settings and clear screen is to draw a filled rectangle with the required background colour.

**Library Function:** `gfx_Cls`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0xFFCD</code>

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0xFF, 0xCD  
  
// The following will clear the display and restore the settings back to their defaults.  
// The response will be 0x06 if the command is successful
```

## 5.2.2. Change Colour

The **Change Colour** command changes all **oldColour** pixels to **newColour** within the clipping window area.

**Library Function:** `gfx_ChangeColour`

**Syntax:** `cmd (word), oldColour (word), newColour (word)`

Commands	Description
<code>cmd</code>	<code>0xFFB4</code>
<code>oldColour</code>	Specifies the sample colour to be changed within the clipping window.
<code>newColour</code>	Specifies the new colour to change all occurrences of old colour within the clipping window.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), oldColour(MSB), oldColour (LSB), newColour(MSB), newColour (LSB)

0xFF, 0xB4, 0x00, 0x00, 0x00, 0x1F

// This will change all pixels coloured Black (0x00, 0x00) to be coloured Blue
// (0x00, 0x1F) within the clipping area.
// (Refer to the Clip Window command for more information on this.)
// The Response will be 0x06 if the command is successful
```

### 5.2.3. Draw Circle

The **Draw Circle** command draws a circle with centre point x, y with radius r using the specified colour.

**Library Function:** `gfx_Circle`

**Syntax:** `cmd (word), x (word), y (word), rad (word), colour (word)`

Commands	Description
cmd	0xFFC3
x, y	Specifies the centre of the circle.
rad	Specifies the radius of the circle.
colour	Specifies the colour of the circle.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), rad(MSB), rad(LSB), colour(MSB),  
// colour(LSB)  
  
0xFF, 0xC3, 0x00, 0x64, 0x01, 0x2C, 0x00, 0x14, 0x80, 0x10  
  
// This will draw a Circle at X=100 (Hex 0x00, 0x64), Y=300 (Hex 0x01, 0x2C),  
// of Radius=20 (0x00, 0x14), and of Colour=Purple (0x80, 0x10).  
  
// The response will be 0x06 if the command is successful
```

### 5.2.4. Draw Filled Circle

The **Draw Circle** command draws a solid circle with centre point x1, y1 with radius using the specified colour.

The outline colour can be specified with the **Outline Colour** command.

If **Outline Colour** is set to 0, no outline is drawn.

**Library Function:** `gfx_CircleFilled`

**Syntax:** `cmd (word), x (word), y (word), rad (word), colour (word)`

Commands	Description
cmd	0xFFC2
x, y	Specifies the centre of the circle.
rad	Specifies the radius of the circle.
colour	Specifies the colour of the circle.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), rad(MSB), rad(LSB), colour(MSB),
// colour(LSB)

0xFF, 0xC2, 0x00, 0x96, 0x00, 0xE6, 0x00, 0x32, 0x84, 0x10

// This will draw a Solid Filled Circle at X=150 (Hex 0x00, 0x96), Y=230 (Hex 0x00, 0xE6),
// of Radius=50 (0x00, 0x32), and of Colour=Grey (0x84, 0x10).

// The response will be 0x06 if the command is successful
```

## 5.2.5. Draw Line

The **Draw Line** command draws a line from  $x_1, y_1$  to  $x_2, y_2$  using the specified colour. The line is drawn using the current object colour. The current origin is not altered. The line may be tessellated with the [Line Pattern](#) command.

**Library Function:** `gfx_Line`

**Syntax:** `cmd (word), x1 (word), y1 (word), x2 (word), y2 (word), colour (word)`

Commands	Description
<code>cmd</code>	0xFFC8
<code>x1, y1</code>	Specifies the starting coordinates of the line.
<code>x2, y2</code>	Specifies the ending coordinates of the line.
<code>colour</code>	Specifies the colour of the line.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x1(MSB), x1(LSB), y1(MSB), y1(LSB), x2(MSB), x2(LSB), y2(MSB),
// y2(LSB), colour(MSB), colour(LSB)

0xFF, 0xC8, 0x00, 0x0A, 0x00, 0x0F, 0x00, 0x28, 0x00, 0x50, 0x04, 0x10

// This will Line from X1=10 (Hex 0x00, 0x0A), Y1=15 (Hex 0x00, 0x0F), to X2=40 (0x00,
0x28),
// Y2=80 (0x00, 0x50) of Colour=Teal (0x04, 0x10).

// The response will be 0x06 if the command is successful
```

## 5.2.6. Draw Rectangle

The **Draw Rectangle** command draws a rectangle from x1, y1 to x2, y2 using the specified colour. The line may be tessellated with the [Line Pattern](#) command.

**Library Function:** `gfx_Rectangle`

**Syntax:** `cmd (word), x1 (word), y1 (word), x2 (word), y2 (word), colour (word)`

Commands	Description
cmd	0xFFC5
x1, y1	Specifies the top left corner of the rectangle.
x2, y2	Specifies the bottom right corner of the rectangle.
colour	Specifies the colour of the rectangle.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x1(MSB), x1(LSB), y1(MSB), y1(LSB), x2(MSB), x2(LSB), y2(MSB),
// y2(LSB), colour(MSB), colour(LSB)

0xFF, 0xC5, 0x00, 0x0A, 0x00, 0x6E, 0x00, 0xC8, 0x00, 0xDC, 0xF8, 0x00

// The will draw a Rectangle from X1=10 (0x00, 0x0A), Y1=110 (0x00, 0x6E),
// to X2=200 (0x00, 0xC8), Y2=220 (0x00, 0xDC), of colour=Red (0xF8, 0x00).

// The response will be 0x06 if the command is successful
```

### 5.2.7. Draw Filled Rectangle

The **Draw Filled Rectangle** command draws a solid rectangle from x1, y1 to x2, y2 using the specified colour. The line may be tessellated with the [Line Pattern](#) command.

The outline colour can be specified with the [Outline Colour](#) command. If [Outline Colour](#) is set to 0, no outline is drawn.

**Library Function:** `gfx_RectangleFilled`

**Syntax:** `cmd (word), x1 (word), y1 (word), x2 (word), y2 (word), colour (word)`

Commands	Description
cmd	0xFFC4
x1, y1	Specifies the top left corner of the rectangle.
x2, y2	Specifies the bottom right corner of the rectangle.
colour	Specifies the colour of the rectangle.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x1(MSB), x1(LSB), y1(MSB), y1(LSB), x2(MSB), x2(LSB), y2(MSB),
// y2(LSB), colour(MSB), colour(LSB)

0xFF, 0xC4, 0x00, 0x32, 0x00, 0x3C, 0x00, 0x5A, 0x00, 0x64, 0x07, 0xE0

// The will draw a Solid Filled Rectangle from X1=50 (0x00, 0x32), Y1=60 (0x00, 0x3C),
// to X2=90 (0x00, 0x5A), Y2=100 (0x00, 0x64), of colour=Lime (0x07, 0xE0).

// The response will be 0x06 if the command is successful
```



### 5.2.8. Draw Polyline

The **Draw Polyline** command plots lines between points specified by a pair of arrays using the specified colour. The lines may be tessellated with the **Line Pattern** command. The **Draw Polyline** command can be used to create complex raster graphics by loading the arrays from serial input or from MEDIA with very little code requirement.

**Library Function:** `gfx_Polyline`

**Syntax:** `cmd (word), n (word), vx1 (word) ... vxN (word), vy1 (word) ... vyN (word), colour (word)`

Commands	Description
cmd	0x0015
n	Specifies the number of elements in the x and y arrays specifying the vertices for the polyline.
vx, vy	Specifies the array of elements for the x/y coordinates of the vertices. vx1, vx2, ..., vxN, vy1, vy2, ..., vyN
colour	Specifies the colour of the polyline.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), n(MSB), n(LSB), vx1(MSB), vx1(LSB), vx2(MSB), vx2(LSB), vx3(MSB),
// vx3(LSB), vy1(MSB), vy1(LSB), vy2(MSB), vy2(LSB), vy3(MSB), vy3(LSB), colour(MSB),
// colour(LSB)

0x00, 0x15, 0x00, 0x03, 0x00, 0x0A, 0x00, 0x50, 0x00, 0xB4, 0x00, 0x05, 0x00, 0xC8,
0x00, 0x50, 0x80, 0x00

// The following will draw a 3 point Polyline from X1=10 (0x00, 0x0A), Y1=5 (0x00, 0x05),
// to X2=80 (0x00, 0x50), Y2=200 (0x00, 0xC8), and finally to X3=180 (0x00, 0xB4),
// Y3=80 (0x00, 0x50) of Colour=Maroon (0x80, 0x00)

// The response will be 0x06 if the command is successful
```

### 5.2.9. Draw Polygon

The **Draw Polygon** command plots lines between points specified by a pair of arrays using the specified colour. The last point is drawn back to the first point, completing the polygon. The lines may be tessellated with **Line Pattern** command. The **Draw Polygon** command can be used to create complex raster graphics by loading the arrays from serial input or from MEDIA with very little code requirement.

**Library Function:** `gfx_Polygon`

**Syntax:** `cmd (word), n (word), vx1 (word) ... vxN (word), vy1 (word) ... vyN (word), colour (word)`

Commands	Description
cmd	0x0013
n	Specifies the number of elements in the x and y arrays specifying the vertices for the polygon.
vx, vy	Specifies the array of elements for the x/y coordinates of the vertices. vx1, vx2, ..., vxN, vy1, vy2, ..., vyN
colour	Specifies the colour of the polygon.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), n(MSB), n(LSB), vx1(MSB), vx1(LSB), vx2(MSB), vx2(LSB), vx3(MSB),
// vx3(LSB), vx4(MSB), vx4(LSB), vy1(MSB), vy1(LSB), vy2(MSB), vy2(LSB), vy3(MSB),
// vy3(LSB),
// vy4(MSB), vy4(LSB), colour(MSB), colour(LSB)

0x00, 0x13, 0x00, 0x04, 0x00, 0x0A, 0x00, 0x50, 0x00, 0xB4, 0x00, 0xDC, 0x00, 0x05, 0x00,
0xC8, 0x00, 0x50, 0x00, 0x04, 0xFF, 0xE0

// The following will draw a 4 point Polyline from X1=10 (0x00, 0x0A), Y1=5 (0x00, 0x05),
// to X2=80 (0x00, 0x50), Y2=200 (0x00, 0xC8), to X3=180 (0x00, 0xB4), Y3=80 (0x00, 0x50),
// and finally to X4=220 (0x00, 0xDC), Y4=4 (0x00, 0x04) of Colour=Yellow (0xFF, 0xE0)

// The response will be 0x06 if the command is successful
```

## 5.2.10. Draw Filled Polygon

The **Draw Filled Polygon** command draws a solid Polygon between specified vertices:  $x_1, y_1, x_2, y_2, \dots, x_n, y_n$  using the specified colour. The last point is drawn back to the first point, completing the polygon. Vertices must be a minimum of 3 and can be specified in any fashion.

**Library Function:** `gfx_PolygonFilled`

**Syntax:** `cmd (word), n (word), vx1 (word) ... vxN (word), vy1 (word) ... vyN (word), colour (word)`

Commands	Description
cmd	0x0014
n	Specifies the number of elements in the x and y arrays specifying the vertices for the polygon.
vx, vy	Specifies the array of elements for the x/y coordinates of the vertices. vx1, vx2, ..., vxN, vy1, vy2, ..., vyN
colour	Specifies the colour of the polygon.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), n(MSB), n(LSB), vx1(MSB), vx1(LSB), vx2(MSB), vx2(LSB), vx3(MSB),
// vx3(LSB), vx4(MSB), vx4(LSB), vy1(MSB), vy1(LSB), vy2(MSB), vy2(LSB), vy3(MSB),
// vy3(LSB),
// vy4(MSB), vy4(LSB), colour(MSB), colour(LSB)

0x00, 0x14, 0x00, 0x04, 0x00, 0x0A, 0x00, 0x50, 0x00, 0xB4, 0x00, 0xDC, 0x00, 0x05, 0x00,
0xC8, 0x00, 0x50, 0x00, 0x04, 0x04, 0x00

// The following will draw a 4 point Polyline from X1=10 (0x00, 0x0A), Y1=5 (0x00, 0x05),
// to X2=80 (0x00, 0x50), Y2=200 (0x00, 0xC8), to X3=180 (0x00, 0xB4), Y3=80 (0x00, 0x50),
// and finally to X4=220 (0x00, 0xDC), Y4=4 (0x00, 0x04) of Colour=Green (0x04, 0x00)

// The response will be 0x06 if the command is successful
```

### 5.2.11. Draw Triangle

The **Draw Triangle** command draws a triangle outline between vertices  $x_1, y_1$ ,  $x_2, y_2$  and  $x_3, y_3$  using the specified colour. The line may be tessellated with the **Line Pattern** command.

**Library Function:** `gfx_Triangle`

**Syntax:** `cmd (word), x1 (word), y1 (word), x2 (word), y2 (word), x3 (word), y3 (word), colour (word)`

Commands	Description
<code>cmd</code>	0xFFBF
<code>x1, y1</code>	Specifies the first vertice of the triangle.
<code>x2, y2</code>	Specifies the second vertice of the triangle.
<code>x3, y3</code>	Specifies the third vertice of the triangle.
<code>colour</code>	Specifies the colour of the triangle.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x1(MSB), x1(LSB), y1(MSB), y1(LSB), x2(MSB), x2(LSB), y2(MSB),
// y2(LSB), x3(MSB), x3(LSB), y3(MSB), y3(LSB), colour(MSB), colour(LSB)

0xFF, 0xBF, 0x00, 0x32, 0x00, 0x3C, 0x00, 0x14, 0x00, 0xAA, 0x00, 0x46, 0x00, 0xAA, 0x07,
0xFF

// This will draw a Triangle from X1=50 (0x00, 0x32), Y1=60 (0x00, 0x3C), to X2=20
// (0x00, 0x14), Y2=170 (0x00, 0xAA), to X3=70 (0x00, 0x46), Y3=170 (0x00, 0xAA) of colour
// Aqua (0x07, 0xFF)

// The response will be 0x06 if the command is successful
```

## 5.2.12. Draw Filled Triangle

The **Draw Filled Triangle** command draws a solid triangle between vertices x1, y1, x2, y2 and x3, y3 using the specified colour.

**Library Function:** gfx\_TriangleFilled

**Syntax:** cmd (word), x1 (word), y1 (word), x2 (word), y2 (word), x3 (word), y3 (word), colour (word)

Commands	Description
cmd	0xFFA9
x1, y1	Specifies the first vertice of the triangle.
x2, y2	Specifies the second vertice of the triangle.
x3, y3	Specifies the third vertice of the triangle.
colour	Specifies the colour of the triangle.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x1(MSB), x1(LSB), y1(MSB), y1(LSB), x2(MSB), x2(LSB), y2(MSB),
// y2(LSB), x3(MSB), x3(LSB), y3(MSB), y3(LSB), colour(MSB), colour(LSB)

0xFF, 0xA9, 0x00, 0x32, 0x00, 0x3C, 0x00, 0x14, 0x00, 0xAA, 0x00, 0x46, 0x00, 0xAA, 0x00,
0x1F

// This will draw a Triangle from X1=50 (0x00, 0x32), Y1=60 (0x00, 0x3C), to X2=20
// (0x00, 0x14), Y2=170 (0x00, 0xAA), to X3=70 (0x00, 0x46), Y3=170 (0x00, 0xAA) of colour
// Blue (0x00, 0x1F)

// The response will be 0x06 if the command is successful
```

### 5.2.13. Calculate Orbit

The **Calculate Orbit** command calculates the x, y coordinates of a distant point relative to the current origin, where the only known parameters are the **angle** and the **distance** from the current origin. The new coordinates are calculated and then placed in the destination variables Xdest and Ydest.

**Library Function:** gfx\_Orbit

**Syntax:** cmd (word), angle (word), distance (word)

Commands	Description
cmd	0x0012
angle	Specifies the angle from the origin to the remote point. The angle is specified in degrees.
distance	Specifies the distance from the origin to the remote point in pixel units.

**Returns:** acknowledge (byte), Xdist (word), Ydist (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *Xdist*: X coordinate from the current origin.
- *Ydist*: Y coordinate from the current origin.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), angle(MSB), angle(LSB), distance(MSB), distance(LSB)

0x00, 0x12, 0x00, 0x28, 0x00, 0x3C

// This will calculate the x and y coordinates based on the Angle=40 degrees (0x00, 0x28)
// and the Distance=60 pixels (0x00, 0x3C) from the current origin.

// The response will be 0x06, 0x00, 0x2D, 0x00, 0x25 assuming the origin is at X=0, Y=0.
// New coordinates are X=45 (0x00, 0x2D) and Y=37 (0x00, 0x25)
```

## 5.2.14. Put pixel

The **Put Pixel** command draws a pixel at position x, y using the specified colour.

**Library Function:** `gfx_PutPixel`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0xFFC1</code>
<code>x, y</code>	Specifies the pixel x, y coordinates.
<code>colour</code>	Specifies the colour of the pixel.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), colour(MSB), colour(LSB)

0xFF, 0xC1, 0x00, 0x28, 0x00, 0x64, 0xFF, 0xE0

// This will put a pixel at X=40 (0x00, 0x28), Y=100 (0x00, 0x64), and colour the pixel
// Yellow (0xFF, 0xE0).

// The response will be 0x06 if the command is successful
```

## 5.2.15. Read Pixel

The **Read Pixel** command reads the colour value of the pixel at position x,y.

**Library Function:** `gfx_GetPixel`

**Syntax:** `cmd (word) x (word), y (word)`

Commands	Description
<code>cmd</code>	<code>0xFFC0</code>
<code>x, y</code>	Specifies the pixel x, y coordinates.

**Returns:** `acknowledge (byte), colour (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *colour*: 16bit colour of the pixel.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB)  
  
0xFF, 0xC0, 0x00, 0x28, 0x00, 0x64  
  
// This will read the colour of a pixel at X=40 (0x00, 0x28), Y=100 (0x00, 0x64)  
  
// The response will be 0x06, 0xFF, 0xE0 if the command is successful,  
// assuming the pixel being read is coloured Yellow (0xFF, 0xE0)
```



## 5.2.16. Move Origin

The **Move Origin** command moves the origin to a new position, which is suitable for specifying the location for both graphics and text.

**Library Function:** `gfx_MoveTo`

**Syntax:** `cmd (word), xpos (word), ypos (word)`

Commands	Description
<code>cmd</code>	<code>0xFFCC</code>
<code>xpos, ypos</code>	Specifies the horizontal and vertical position of the new origin.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), xpos(MSB), xpos(LSB), ypos(MSB), ypos(LSB)

0xFF, 0xCC, 0x00, 0x32, 0x00, 0x5A

// This will move the Origin to be X=50 (0x00, 0x32), Y=90 (0x00, 0x5A)
// The response will be 0x06 if the command is successful
```

## 5.2.17. Draw Line & Move Origin

The **Draw Line & Move Origin** command draws a line from the current origin to a new position. The Origin is then set to the new position. The line is drawn using the current object colour, using the [Set Graphics Parameters - Object Colour](#) command. The line may be tessellated with the [Line Pattern](#) command.

### Note

This command is mostly useful with the [Calculate Orbit](#) command, and usually the [Draw Line](#) command would be used

**Library Function:** `gfx_LineTo`

**Syntax:** `cmd (word), xpos (word), ypos (word)`

Commands	Description
<code>cmd</code>	<code>0xFFCA</code>
<code>xpos, ypos</code>	Specifies the horizontal and vertical position of the line end as well as the new origin.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), xpos(MSB), xpos(LSB), ypos(MSB), ypos(LSB)

0xFF, 0xCA, 0x00, 0xC8, 0x00, 0xFA

// This will draw a line from the current origin (assuming this is X=0,
// Y=0 for this example) to X=200 (0x00, 0xC8), Y=250 (0x00, 0xFA) and set the
// origin to be this point (X=200, Y=250).

// The response will be 0x06 if the command is successful
```

## 5.2.18. Clipping

The **Clipping** command Enables or Disables the ability for Clipping to be used. The clipping points are set with **Set Clip Window** and must be set first.

**Library Function:** `gfx_Clipping`

**Syntax:** `cmd (word), value (word)`

Commands	Description
cmd	0xFFA2
value	0 = Clipping Disabled, 1 = Clipping Enabled

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB)

0xFF, 0xA2, 0x00, 0x01

// This will Enable Clipping
// The response will be 0x06 if the command is successful
```

## 5.2.19. Set Clip Window

The **Set Clip Window** command specifies a clipping window region on the screen such that any objects and text placed onto the screen will be clipped and displayed only within that region. For the clipping window to take effect, the clipping setting must be enabled separately using the **Clipping** command.

**Library Function:** `gfx_ClipWindow`

**Syntax:** `cmd (word), x1 (word), y1 (word), x2 (word), y2 (word)`

Commands	Description
<code>cmd</code>	0xFFB5
<code>x1, y1</code>	Specifies the horizontal and vertical position of the top left corner of the clipping window.
<code>x2, y2</code>	Specifies the horizontal and vertical position of the bottom right corner of the clipping window.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x1(MSB), x1(LSB), y1(MSB), y1(LSB), x2(MSB), x2(LSB),
// y2(MSB), y2(LSB)

0xFF, 0xB5, 0x00, 0x00, 0x00, 0x00, 0x00, 0x28, 0x00, 0x28

// This will set the top left of the Clipping Window Region to be X1=0 (0x00, 0x00),
// Y1=0 (0x00, 0x00), and bottom right to be X2=40 (0x00, 0x28), Y2=40 (0x00, 0x28)

// The response will be 0x06 if the command is successful
```

## 5.2.20. Extend Clip Region

The **Extend Clip Region** command forces the clip region to the extent of the last text that was printed, or the last image that was shown.

**Library Function:** `gfx_SetClipRegion`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0xFFB3</code>

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0xFF, 0xB3  
  
// This will extend the clip region to the extent of the last text or image that was shown.  
  
// The response will be 0x06 if the command is successful
```

### 5.2.21. Draw Ellipse

The **Draw Ellipse** command plots a coloured Ellipse on the screen at centre x, y with x-radius = xrad and y-radius = yrad.

**Library Function:** `gfx_Ellipse`

**Syntax:** `cmd (word), x (word), y (word), xrad (word), yrad (word), colour (word)`

Commands	Description
cmd	0xFFB2
x, y	Specifies the horizontal and vertical position of the centre of ellipse.
xrad	Specifies x-radius of the ellipse.
yrad	Specifies y-radius of the ellipse.
colour	Specifies the colour of the ellipse.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), xrad(MSB), xrad(LSB), yrad(MSB),
// yrad(LSB), colour(MSB), colour(LSB)

0xFF, 0xB2, 0x00, 0x5A, 0x00, 0x3C, 0x00, 0x14, 0x00, 0x0F, 0xFF, 0xDE

// This will draw an Ellipse at X=90 (0x00, 0x5A), Y=60 (0x00, 0x3C),
// where the x-Radius is 20 (0x00, 0x14), and the y-Radius is 15 (0x00, 0x0F),
// where the colour is Cream (0xFF, 0xDE)

// The response will be 0x06 if the command is successful
```

## 5.2.22. Draw Filled Ellipse

The **Draw Filled Ellipse** command plots a solid coloured Ellipse on the screen at centre x,y with x-radius = xrad and y-radius = yrad

**Library Function:** `gfx_EllipseFilled`

**Syntax:** `cmd (word), x (word), y (word), xrad (word), yrad (word), colour (word)`

Commands	Description
cmd	0xFFB1
x, y	Specifies the horizontal and vertical position of the centre of ellipse.
xrad	Specifies x-radius of the ellipse.
yrad	Specifies y-radius of the ellipse.
colour	Specifies the colour of the ellipse.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), xrad(MSB), xrad(LSB), yrad(MSB),
// yrad(LSB), colour(MSB), colour(LSB)

0xFF, 0xB1, 0x00, 0x5A, 0x00, 0x3C, 0x00, 0x14, 0x00, 0x0F, 0xFD, 0x20

// This will draw an Ellipse at X=90 (0x00, 0x5A), Y=60 (0x00, 0x3C),
// where the x-Radius is 20 (0x00, 0x14), and the y-Radius is 15 (0x00, 0x0F),
// where the colour is Orange (0xFD, 0x20)

// The response will be 0x06 if the command is successful
```

### 5.2.23. Draw Button

The **Draw Button** command draws a 3 dimensional Text Button at screen location defined by x, y parameters (top left corner). The size of the button depends on the font, width, height and length of the text. The button can contain multiple lines of text by having the \n character embedded in the string for the end of line marker. In this case, the widest text in the string sets the overall width, and the height of the button is set by the number of text lines. In the case of multiple lines, each line is left justified. If you wish to centre or right justify the text, you will need to prepare the text string according to your requirements.

**Library Function:** gfx\_Button

**Syntax:** cmd (word), state (word), x (word), y (word), buttoncolour (word), txtcolour (word), font (word), txtWidth (word), txtHeight (word), text (string)

Commands	Description
cmd	0x0011
state	Appearance of button, 0 = Button depressed; 1 = Button raised.
x, y	Specifies the top left corner position of the button on the screen.
buttonColour	Button colour.
txtColour	Text colour.
font	Specifies the Font ID.
txtWidth	Specifies the width of the text. This value is the font width multiplier and minimum value must be 1.
txtHeight	Specifies the height of the text. This value is the font height multiplier and minimum value must be 1.
text	Specifies the text string. The text string must be within the range of printable ASCII character set. The string may have \n characters embedded to create a multiline button.  String must be Null terminated. char0, char1, char2, ..., charN, NULL

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.



## Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), state(MSB), state(LSB), x(MSB), x(LSB), y(MSB), y(LSB),
// buttoncolour(MSB), buttoncolour(LSB), txtcolour(MSB), txtcolour(LSB), font(MSB),
// font(LSB), txtWidth(MSB), txtWidth(LSB), txtHeight(MSB), txtHeight(LSB), char0, char1,
// char2, char3, char4, char5, char6, char7, char8, NULL

0x00, 0x11, 0x00, 0x00, 0x00, 0x50, 0x00, 0x50, 0x07, 0xFF, 0x90, 0x1A, 0x00, 0x01, 0x00,
0x01, 0x00, 0x01, 0x50, 0x72, 0x65, 0x73, 0x73, 0x20, 0x4D, 0x65, 0x00

// This will create a Button with the Up State being OFF, positioned at X=80 (0x00, 0x50),
// Y=80 (0x00, 0x50), where the Button Colour is Aqua (0x07, 0xFF), and the Text Colour is
// Dark Violet (0x90, 0x1A), the text Font is FONT2 (0x00, 0x01), the Text Width multiplier
// is 1 (0x00, 0x01), and the Text Height multiplier is also 1 (0x00, 0x01), and the
// Text states "Press Me" and is Null Terminated.

// The response will be 0x06 if the command is successful
```

### 5.2.24. Draw Panel

The **Draw Panel** command draws a 3 dimensional rectangular panel at a screen location defined by x, y parameters (top left corner). The size of the panel is set with the width and height parameters. The colour is defined by colour. The state parameter determines the appearance of the panel, 0 = recessed, 1 = raised.

**Library Function:** gfx\_Panel

**Syntax:** cmd (word), state (word), x (word), y (word), Width (word), Height (word), colour (word)

Commands	Description
cmd	0xFFAF
state	Appearance of panel, 0 = recessed; 1 = raised.
x, y	Specifies the top left corner position of the panel on the screen.
Width	Specifies the width of the panel.
Height	Specifies the Height of the panel.
colour	Specifies the colour of the panel.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), state(MSB), state(LSB), x(MSB), x(LSB), y(MSB), y(LSB), Width(MSB),
// Width(LSB), Height(MSB), Height(LSB) colour(MSB), colour(LSB)

0xFF, 0xAF, 0x00, 0x01, 0x00, 0xC8, 0x00, 0xB4, 0x00, 0x01, 0x00, 0x01, 0xFF, 0x9C

// This will draw a Rectangular Panel which has a Raised Profile, located at
// X=200 (0x00, 0xC8), Y=180 (0x00, 0xB4), where the Text Width multiplier is 1 (0x00,
0x01)
// and the Text Height multiplier is 1 (0x00, 0x01), and the colour is Linen (0xFF, 0x9C).

// The response will be 0x06 if the command is successful
```

### 5.2.25. Draw Slider

The **Draw Slider** command draws a vertical or horizontal slider bar on the screen. The **Draw Slider** command has several different modes of operation. In order to minimise the amount of graphics functions we need, all modes of operation are selected naturally depending on the parameter values.

Selection rules:

1. a. If  $x_2 - x_1 > y_2 - y_1$  slider is assumed to be horizontal (ie: if width > height, slider is horizontal)
  - b. If  $x_2 - x_1 \leq y_2 - y_1$  slider is assumed to be vertical (ie: if height  $\leq$  width, slider is horizontal)
2. a. If value is positive, thumb is set to the position that is the proportion of value to the scale parameter.(used to set the control to the actual value of a variable)
  - b. If value is negative, thumb is driven to the graphics position set by the ABSolute of value. (used to set thumb to its actual graphical position (usually by touch screen))
3. The thumb colour is determine by the **Set Graphics Parameters - Object Colour** command, however, if the current object colour is BLACK, a darkened shade of the colour parameter is used for the thumb.

**Library Function:** `gfx_Slider`

**Syntax:** `cmd (word), mode (word), x1 (word), y1 (word), x2 (word), y2 (word), colour (word), scale (word), value (word)`

Commands	Description
cmd	0xFFAE
mode	mode = 0 : Slider Indented. mode = 1 : Slider Raised. mode 2, Slider Hidden (background colour).
x1, y1	Specifies the top left corner position of the slider on the screen.
x2, y2	Specifies the bottom right corner position of the slider on the screen.
colour	Specifies the colour of the Slider bar.
scale	scale = n : sets the full scale range of the slider for the thumb from 0 to n.
value	If value positive, sets the relative position of the thumb on the slider bar, else set thumb to ABS position of the negative number.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

## Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB), x1(MSB), x1(LSB), y1(MSB), y1(LSB), x2(MSB),
// x2(LSB), y2(MSB), y2(LSB), colour(MSB), colour(LSB), scale(MSB), scale(LSB), value(MSB),
// value(LSB)

0xFF, 0xAE, 0x00, 0x01, 0x00, 0x1E, 0x00, 0x28, 0x00, 0xD2, 0x00, 0x5A, 0x89, 0x5C, 0x00,
0x64, 0x00, 0x00

// This will create a Slider with a Raised Profile, with top left corner positioned at
// X1=30 (0x00, 0x1E), Y1=40 (0x00, 0x28), and bottom right corner positioned at X2=210
// (0x00, 0xD2), Y2=90 (0x00, 0x5A), where the slider colour is Blue Violet (0x89, 0x5C),
// Full scale is 100 (0x00, 0x64), and the value of the Thumb Slider is at 0 (0x00, 0x00)

// The response will be 0x06 if the command is successful
```

## 5.2.26. Screen Copy Paste

The **Screen Copy Paste** command copies an area of a screen from `xs`, `ys` of size given by `width` and `height` parameters and pastes it to another location determined by `xd`, `yd`.

**Library Function:** `gfx_ScreenCopyPaste`

**Syntax:** `cmd (word), xs (word), ys (word), xd (word), yd (word), width (word), height (word)`

Commands	Description
<code>cmd</code>	0xFFAD
<code>xs, ys</code>	Specifies the horizontal and vertical position of the top left corner of the area to be copied (source).
<code>xd, yd</code>	Specifies the horizontal and vertical position of the top left corner of where the paste is to be made (destination).
<code>width</code>	Specifies the width of the copied area.
<code>height</code>	Specifies the height of the copied area.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), xs(MSB), xs(LSB), ys(MSB), ys(LSB), xd(MSB), xd(LSB), yd(MSB),
// yd(LSB), width(MSB), width(LSB), height(MSB), height(LSB)

0xFF, 0xAD, 0x00, 0x0A, 0x00, 0x1E, 0x00, 0x5A, 0x01, 0x0E, 0x00, 0x5A, 0x00, 0x1E

// This will copy a section of the screen from X1=10 (0x00, 0x0A), Y1=30 (0x00, 0x1E)
// and paste it at X2=90 (0x00, 0x5A), Y2=270 (0x01, 0x0E), where the Width to copy/paste
// is 90 (0x00, 0x5A) and the Height is 30 (0x00, 0x1E)

// The response will be 0x06 if the command is successful
```

## 5.2.27. Bevel Shadow

The Bevel Shadow command changes the graphics **Draw Button** commands bevel shadow depth.

**Library Function:** `gfx_BevelShadow`

**Syntax:** `cmd (word), value (word)`

Commands	Description
<code>cmd</code>	0xFF98
<code>value</code>	0 = No Bevel Shadow 1-4 = Number of Pixels Deep (Default = 3)

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: Previous Bevel Shadow status.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), value(MSB), value(LSB)  
  
0xFF, 0x98, 0x00, 0x02  
  
// This will set the Bevel Shadow depth to be 2 pixels  
// The response will be 0x06, 0x00, 0x03 assuming the previous Bevel Shadow Depth was  
// set to 3 (0x00, 0x03) and if the command is successful
```

## 5.2.28. Bevel Width

The **Bevel Width** command changes the graphics **Draw Button** commands bevel width.

**Library Function:** `gfx_BevelWidth`

**Syntax:** `cmd (word), value (word)`

Commands	Description
cmd	0xFF99
value	0 = No Bevel 1-15 = Number of Pixels Wide (Default = 2)

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: Previous Bevel Width status. **Examples**

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB)

0xFF, 0x98, 0x00, 0x0B

// This will set the Bevel Width to be 11 pixels

// The response will be 0x06, 0x00, 0x02 assuming the previous Bevel Shadow Depth was
// set to 2 (0x00, 0x04) and if the command is successful
```

## 5.2.29. Background Colour

The **Background Colour** command sets the screen background colour.

**Library Function:** `gfx_BGcolour`

**Syntax:** `cmd (word), colour (word)`

Commands	Description
<code>cmd</code>	0xFFA4
<code>colour</code>	Specifies the colour to be set (0-65535 or HEX 0x0000-0xFFFF)

**Returns:** `acknowledge (byte), colour (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *colour*: Previous Background Colour.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), colour(MSB), colour(LSB)  
  
0xFF, 0xA4, 0x00, 0x10  
  
// This will set the Background Colour to be Navy (0x00, 0x10)  
  
// The response will be 0x06, 0x00, 0x00 assuming the previous Background Colour was  
// Black (0x00, 0x00) and if the command is successful
```



### 5.2.30. Outline Colour

The **Outline Colour** command sets the outline colour for rectangles and circles.

**Library Function:** `gfx_OutlineColour`

**Syntax:** `cmd (word), colour (word)`

Commands	Description
<code>cmd</code>	0xFF9D
<code>colour</code>	Specifies the colour to be set (0-65535 or HEX 0x0000-0xFFFF), set to 0 for no effect.

**Returns:** `acknowledge (byte), colour (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *colour*: Previous Outline Colour.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), colour(MSB), colour(LSB)  
  
0xFF, 0x9D, 0xF8, 0x1F  
  
// This will set the Outline Colour to be Fuchsia (0xF8, 0x1F)  
  
// The response will be 0x06, 0x00, 0x1F assuming the previous Outline Colour was  
// Blue (0x00, 0x1F) and if the command is successful
```

## 5.2.31. Contrast

The **Contrast** Command sets the contrast of the display, or turns it On/Off depending on display model

**Library Function:** `gfx_Contrast`

**Syntax:** `cmd (word), contrast (word)`

Commands	Description
cmd	0xFF9C
contrast	<p>Contrast 0 = display OFF, non-zero = display ON</p> <p><b>EXCEPTION:</b> uLCD-43 supports Contrast values from 1-15 and 0 to turn the Display off. 3202X-P1 supports Contrast values from 1 to 9 and 0 to turn the Display off.</p> <p><b>Note:</b> Does not apply to uVGA-II/III modules.</p>

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Contrast value.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), contrast(MSB), contrast(LSB)

0xFF, 0x9C, 0x00, 0x06

// This will set the Contrast of the display (example is a uLCD-43PT) to be 6

// The response will be 0x06, 0x00, 0x00 assuming the previous Contrast was
// Display Off (0x00, 0x00) and if the command is successful
```

### 5.2.32. Frame Delay

The **Frame Delay** command sets the inter frame delay for the **Media Video** command.

**Library Function:** `gfx_FrameDelay`

**Syntax:** `cmd (word), Msec (word)`

Commands	Description
<code>cmd</code>	0xFF9F
<code>Msec</code>	0-255 milliseconds

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Frame Delay value.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), Msec(MSB), Msec(LSB)  
  
0xFF, 0x9F, 0x00, 0x05  
  
// This will set the Contrast of the display (example is a uLCD-43PT) to be 5 milliseconds  
  
// The response will be 0x06, 0x00, 0x00 assuming the previous Frame Delay value was  
// 0 (0x00, 0x00) and if the command is successful
```

### 5.2.33. Line Pattern

The **Line Pattern** command sets the line draw pattern for line drawing. If set to zero, lines are solid, else each '1' bit represents a pixel that is turned off.

**Library Function:** `gfx_LinePattern`

**Syntax:** `cmd (word), pattern (word)`

Commands	Description
<code>cmd</code>	0xFF9B
<code>pattern</code>	0 = all line pixels are on (Default) 0-65535 (or HEX 0x0000-0xFFFF) = number of bits in the line are turned off to form a pattern.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Line Pattern value.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), pattern(MSB), pattern(LSB)

0xFF, 0x9B, 0x00, 0x08

// This will set the Line Pattern of the line to be drawn to have 8 bits out of the
// 65535 turned off.

// The response will be 0x06, 0x00, 0x00 assuming the previous Line Pattern value was
// 0 (0x00, 0x00) and if the command is successful
```

### 5.2.34. Screen Mode

The Screen Mode command alters the graphics orientation LANDSCAPE, LANDSCAPE\_R, PORTRAIT, PORTRAIT\_R.

**Library Function:** `gfx_ScreenMode`

**Syntax:** `cmd (word), mode (word)`

Commands	Description
<code>cmd</code>	0xFF9E
<code>mode</code>	0 = LANDSCAPE 1 = LANDSCAPE REVERSE 2 = PORTRAIT 3 = PORTRAIT REVERSE

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Screen Mode value.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)

0xFF, 0x9E, 0x00, 0x00

// This will set the Screen Mode of the display to be Landscape.

// The response will be 0x06, 0x00, 0x02 assuming the previous Screen Mode value was
// Portrait (0x00, 0x02) and if the command is successful
```

## 5.2.35. Transparency

The **Transparency** command turns the transparency ON or OFF. Transparency is automatically turned OFF after the next image or video command.

**Library Function:** `gfx_Transparency`

**Syntax:** `cmd (word), mode (word)`

Commands	Description
<code>cmd</code>	0xFFA0
<code>mode</code>	0 = Transparency OFF 1 = Transparency ON

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Transparency value.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)  
  
0xFF, 0xA0, 0x00, 0x01  
  
// This will set the Transparency of the display to be ON.  
  
// The response will be 0x06, 0x00, 0x00 assuming the previous Transparency value was  
// OFF (0x00, 0x00) and if the command is successful
```

## 5.2.36. Transparent Colour

The **Transparent Colour** command alters the colour that needs to be made transparent.

**Library Function:** `gfx_TransparentColour`

**Syntax:** `cmd (word), mode (word)`

Commands	Description
<code>cmd</code>	0xFFA1
<code>mode</code>	0-65535 (or HEX 0x0000-0xFFFF) = colour to make transparent.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Previous Transparent Colour value.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)  
  
0xFF, 0xA1, 0x84, 0x00  
  
// This will set the Transparent Colour of the display to be Olive (0x84, 0x00).  
  
// The response will be 0x06, 0x00, 0x00 assuming the previous Transparent Colour value was  
// Black (0x00, 0x00) and if the command is successful
```

## 5.2.37. Set Graphics Parameters

Returns various graphics parameters to the caller.

**Library Function:** `gfx_Set`

**Syntax:** `cmd (word), function (word), value (word)`

Commands	Description
cmd	0xFFCE
function	See the list below.
value	See the list below.

function	value
<b>Function = 18</b> Object Colour Sets the Object colour used in various functions such as Draw Slider and Draw Line & Move Origin	0 - 65535 or 0 - 0xFFFF
<b>Function = 32</b> Screen Resolution Set VGA Screen resolution. Applies to uVGA-II and uVGA-III only	0 for 320x240 1 for 640 x 480 2 for 800 x 480
<b>Function = 33</b> Page Display Choose Page to be displayed. Value depends on the resolution set. Applies to uVGA-II, uVGA-III and uLCD-43 range only.	e.g. 0-4 for 320x240 resolution on a uVGA-II and uVGA-III
<b>Function = 34</b> Page Read Choose the Page to be read. Value depends on the resolution set. Applies to uVGA-II, uVGA-III and uLCD-43 range only..	e.g. 0-4 for 320x240 resolution on a uVGA-II and uVGA-III
<b>Function = 35</b> Page Write Choose the Page to be written. Value depends on the resolution set. Applies to uVGA-II, uVGA-III and uLCD-43 range only.	e.g. 0-4 for 320x240 resolution on a uVGA-II and uVGA-III

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), function(MSB), function(LSB), value(MSB), value(LSB)

0xFF, 0xCE, 0x00, 0x12, 0x04, 0x00

// This will call the Object Colour command and set the object colour to be
// Green (0x04, 0x00)

// The response will be 0x06 if successful
```



### 5.2.38. Get Graphics Parameters

Returns various graphics parameters to the caller.

**Library Function:** `gfx_Get`

**Syntax:** `cmd (word), mode (word)`

Commands	Description
cmd	0xFFA6
mode	mode = 0 : Current orientations maximum X value (X_MAX) mode = 1 : Current orientations maximum Y value (Y_MAX) mode = 2 : Left location of last Object mode = 3 : Top location of Object mode = 4 : Right location of last Object mode = 5 : Bottom location of Object

**Returns:** `acknowledge (byte), value(word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*:
  - **Mode0**: Returns the maximum horizontal resolution of the display, minus 1. X\_MAX returns Horizontal Resolution - 1.
  - **Mode1**: Returns the maximum vertical resolution of the display, minus 1. Y\_MAX returns Vertical Resolution - 1.
  - **Mode2**: Returns the left location of the last drawn object.
  - **Mode3**: Returns the top location of the last drawn object.
  - **Mode4**: Returns the right location of the last drawn object.
  - **Mode5**: Returns the bottom location of the last drawn object.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)

0xFF, 0xA6, 0x00, 0x01

// This will request the display current maximum Y value based on the screens orientation.

// The response will be 0x06, 0x00, 0xEF which is ACK followed by 239 (0x00, 0xEF)
// assuming the display is in Landscape mode, with 239 Pixels in the Y Direction.
// The return is 0 based, so it's the resolution - 1.
```

## 5.2.39. Draw Scale

The **Draw Scale** command draws the Scale PmmC widget on the screen.

**Library Function:** `gfx_Scale`

**Syntax:** `cmd (word), handle (word), params (word)`

Commands	Description
cmd	0xFEAA
handle	A pointer to the memory block for widget variable utilization.
params	A pointer to the memory block holding the widget parameters.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle (LSB), params(MSB), params (LSB)

0xFF, 0xAE, 0x11, 0xB3, 0x01, 0x1E,

// This will draw a Scale using the memory block allocated for its variable utilization
// at handle=4531 (0x11, 0xB3) and its parameters located at params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### See also

The **Initialize Widget** function to setup the location handles for the required variable memory block and widget parameters.

## 5.2.40. Draw Panel 2

The **Draw Panel 2** command draws the Panel 2 PmmC widget on the screen.

**Library Function:** `gfx_Panel2`

**Syntax:** `cmd (word), options (word), x (word), y (word), width (word), height (word), width1 (word), width2 (word), maincolour (word), shadowcolour (word), fcolour (word)`

Commands	Description
cmd	0xFEC7
options	Bevel direction (0 - Inwards, 1 - Outwards) Additional bit for filling panel with fill color (0x8000 - <b>PANEL2_FILLED</b> ).
x, y	Specifies the Top-Left X-position, Top-Left Y-position.
width	Specifies the panel width.
height	Specifies the panel height.
width1	Outer bevel offset.
width2	Inner bevel offset.
maincolour	Main bevel colour.
shadowcolour	Shadow bevel colour.
fcolour	Fill colour.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB), x1(MSB), x1(LSB), y1(MSB), y1(LSB), x2(MSB),
// x2(LSB), y2(MSB), y2(LSB), colour(MSB), colour(LSB), scale(MSB), scale(LSB), value(MSB),
// value(LSB)

0xFF, 0xAE, 0x00, 0x01, 0x00, 0x1E, 0x00, 0x28, 0x00, 0xD2, 0x00, 0x5A, 0x89, 0x5C, 0x00,
0x64, 0x00, 0x00

// This will draw a Slider with a Raised Profile, with top left corner positioned at X1=30
// (0x00, 0x1E), Y1=40 (0x00, 0x28), and bottom right corner positioned at X2=210 (0x00,
0xD2),
// Y2=90 (0x00, 0x5A), where the slider colour is Blue Violet (0x89, 0x5C), Full scale is
100
// (0x00, 0x64), and the value of the Thumb Slider is at 0 (0x00, 0x00)

// The response will be 0x06 if the command is successful
```

## 5.2.41. Draw Button 4

The **Draw Button4** command draws the Button4 PmmC widget on the screen.

**Library Function:** `gfx_Button4`

**Syntax:** `cmd (word), value (word), handle(word), params(word)`

Commands	Description
cmd	0xFEAC
value	A value (usually a constant) specifying the current frame of the widget.
handle	A value (usually a constant) specifying the current frame of the widget.
params	A pointer to the memory block holding the widget parameters.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB) handle(MSB), handle (LSB), params(MSB),
// params (LSB)

0xFF, 0xAC, 0x00, 0x01, 0x11, 0xB3, 0x01, 0x1E,

// This will draw a Button with value=1 (0x00, 0x01) using the memory block allocated
// for its variable utilization at handle=4531 (0x11, 0xB3) and its parameters located
// at params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### See also

The **Initialize Widget** function to setup the location handles for the required variable memory block and widget parameters.

## 5.2.42. Draw Switch

The **Draw Switch** command draws the Switch PmmC widget on the screen.

**Library Function:** `gfx_Switch`

**Syntax:** `cmd (word), value (word), handle(word), params(word)`

Commands	Description
cmd	0xFEAD
value	A value (usually a constant) specifying the current frame of the widget.
handle	A pointer to the memory block for widget variable utilization.
params	A pointer to the memory block holding the widget parameters.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB) handle(MSB), handle (LSB), params(MSB),
// params (LSB)

0xFE, 0xAD, 0x00, 0x01, 0x11, 0xB3, 0x01, 0x1E,

// This will draw a Switch with value=1 (0x00, 0x01) using the memory block allocated for
// its variable utilization at handle=4531 (0x11, 0xB3) and its parameters located at
// params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### See also

The **Initialize Widget** function to setup the location handles for the required variable memory block and widget parameters.

### 5.2.43. Draw Slider 5

The **Draw Slider5** command draws the Slider5 PmmC widget on the screen.

**Library Function:** `gfx_Slider5`

**Syntax:** `cmd (word), value (word), handle(word), params(word)`

Commands	Description
cmd	0xFEAF
value	A value (usually a constant) specifying the current frame of the widget.
handle	A pointer to the memory block for widget variable utilization.
params	A pointer to the memory block holding the widget parameters.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB) handle(MSB), handle (LSB), params(MSB),
// params (LSB)

0xFE, 0xAF, 0x00, 0x32, 0x11, 0xB3, 0x01, 0x1E,

// This will draw a Slider with value=50 (0x00, 0x32) using the memory block allocated for
// its variable utilization at handle=4531 (0x11, 0xB3) and its parameters located at
// params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### **i** See also

The **Initialize Widget** function to setup the location handles for the required variable memory block and widget parameters.

## 5.2.44. Draw Dial

The **Draw Dial** command draws the Dial PmmC widget on the screen.

**Library Function:** `gfx_Dial`

**Syntax:** `cmd (word), value (word), handle(word), params(word)`

Commands	Description
cmd	0xFEC5
value	A value (usually a constant) specifying the current frame of the widget.
handle	A pointer to the memory block for widget variable utilization.
params	A pointer to the memory block holding the widget parameters.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB) handle(MSB), handle (LSB), params(MSB),
// params (LSB)

0xFE, 0xC5, 0x00, 0x32, 0x11, 0xB3, 0x01, 0x1E,

// This will draw a Dial with value=50 (0x00, 0x32) using the memory block allocated for
// its variable utilization at handle=4531 (0x11, 0xB3) and its parameters located at
// params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### See also

The **Initialize Widget** function to setup the location handles for the required variable memory block and widget parameters.

## 5.2.45. Draw Led

The **Draw Led** command draws the Led PmmC widget on the screen.

**Library Function:** `gfx_Led`

**Syntax:** `cmd (word), value (word), handle(word), params(word)`

Commands	Description
cmd	0xFEAB
value	A value (usually a constant) specifying the current frame of the widget.
handle	A pointer to the memory block for widget variable utilization.
params	A pointer to the memory block holding the widget parameters.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB) handle(MSB), handle (LSB), params(MSB),
// params (LSB)

0xFE, 0xAB, 0x00, 0x01, 0x11, 0xB3, 0x01, 0x1E,

// This will create a Led with value=1 (0x00, 0x01) using the memory block allocated for
// its variable utilization at handle=4531 (0x11, 0xB3) and its parameters located at
// params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### See also

The **Initialize Widget** function to setup the location handles for the required variable memory block and widget parameters.



## 5.2.46. Draw Gauge

The **Draw Gauge** command draws the Gauge PmmC widget on the screen.

**Library Function:** `gfx_Gauge`

**Syntax:** `cmd (word), value (word), handle(word), params(word)`

Commands	Description
cmd	0xFEC4
value	A value (usually a constant) specifying the current frame of the widget.
handle	A pointer to the memory block for widget variable utilization.
params	A pointer to the memory block holding the widget parameters.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB) handle(MSB), handle (LSB), params(MSB),
// params (LSB)

0xFE, 0xC4, 0x00, 0x32, 0x11, 0xB3, 0x01, 0x1E,

// This will draw a Gauge with value=50 (0x00, 0x32) using the memory block allocated for
// its variable utilization at handle=4531 (0x11, 0xB3) and its parameters located at
// params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### See also

The **Initialize Widget** function to setup the location handles for the required variable memory block and widget parameters.

## 5.2.47. Draw Angular Meter

The Draw Angular Meter command draws the Angular Meter PmmC widget on the screen.

**Library Function:** `gfx_AngularMeter`

**Syntax:** `cmd (word), value (word), handle(word), params(word)`

Commands	Description
cmd	0xFEC8
value	A value (usually a constant) specifying the current frame of the widget.
handle	A pointer to the memory block for widget variable utilization.
params	A pointer to the memory block holding the widget parameters.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB) handle(MSB), handle (LSB), params(MSB),
// params (LSB)

0xFE, 0xC8, 0x00, 0x32, 0x11, 0xB3, 0x01, 0x1E,

// This will draw an Angular Meter with value=50 (0x00, 0x32) using the memory block
// allocated for its variable utilization at handle=4531 (0x11, 0xB3) and its parameters
// located at params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### **See also**

The [Initialize Widget](#) function to setup the location handles for the required variable memory block and widget parameters.

## 5.2.48. Draw Led Digit

The **Draw Led Digit** command draws the Led Digit PmmC widget on the screen.

**Library Function:** `gfx_LedDigit`

**Syntax:** `cmd (word), x (word), y (word), digitSize (word), onColour (word), offColour (word), value (word)`

Commands	Description
cmd	0xFEC1
x, y	Specifies the top left corner position of the digit on the screen.
digitSize	Specifies the size of the digit.
onColour	Specifies the colour of the activate LED segments.
offColour	Specifies the colour of the inactive LED segments.
value	Value to be displayed by the widget.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), digitSize(MSB), digitSize(LSB),
// onColour(MSB), onColour (LSB), offColour(MSB), offColour (LSB), value(MSB), value(LSB)

0xFE, 0xC1, 0x00, 0x0A, 0x00, 0x0A, 0x00, 0x01, 0xF8, 0x00, 0x00, 0x00, 0x00, 0x09

// This will create a LED Digit with digit size=1 (0x00, 0x01), with top left corner
// positioned at X=10 (0x00, 0x0A), Y=10 (0x00, 0x0A), where the inactive segment colour is
// White (0xFF, 0xFF), where the inactive segment colour is Black (0x00, 0x00), and the
// value of the widget is at 9 (0x00, 0x09)

// The response will be 0x06 if the command is successful
```

## 5.2.49. Draw Led Digits

The **Draw Led Digits** command draws the Led Digits PmmC widget on the screen.

**Library Function:** `gfx_LedDigits`

**Syntax:** `cmd (word), value (word), handle(word), params(word)`

Commands	Description
cmd	0xFEC2
value	A value (usually a constant) specifying the current frame of the widget.
handle	A pointer to the memory block for widget variable utilization.
params	A pointer to the memory block holding the widget parameters

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB) handle(MSB), handle (LSB), params(MSB),
// params (LSB)

0xFE, 0xC2, 0x00, 0x32, 0x11, 0xB3, 0x01, 0x1E,

// This will draw a LED Digits with value=50 (0x00, 0x32) using the memory block allocated
// for its variable utilization at handle=4531 (0x11, 0xB3) and its parameters located at
// params=286 (0x01, 0x1E).

// The response will be 0x06 if the command is successful
```

#### See also

The **Initialize Widget** function to setup the location handles for the required variable memory block and widget parameters.

### 5.3. Media Commands (SD/SDHC Memory Cards)

The following is a summary of the commands available to be used for Media:

- Media Init
- Set Byte Address
- Set Sector Address
- Read Sector
- Write Sector
- Read Byte
- Read Word
- Write Byte
- Write Word
- Flush Media
- Display Image (RAW)
- Display Video (RAW)
- Display Video Frame (RAW)

### 5.3.1. Media Init

The **Media Init** command initialises a uSD/SD/SDHC memory card for further operations. The SD card is connected to the SPI (serial peripheral interface) of the Picaso-GFX2 chip.

**Library Function:** `media_Init`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFF89

**Returns:** acknowledge (byte), value(word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*:
  - **1** if memory card is present and successfully initialised.
  - **0** if no card is present or not able to initialise.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0xFF, 0x89  
  
// This command will initialize a uSD/SD/SDHC memory card so it can be used  
// for further operations.  
  
// The response will be 0x06 if the command is successful
```

### 5.3.2. Set Byte Address

The **Set Byte Address** command sets the media memory internal Address pointer for access at a non-sector aligned byte address.

**Library Function:** `media_SetAdd`

**Syntax:** `cmd (word), HIword (word), LOword (word)`

Commands	Description
<code>cmd</code>	<code>0xFF93</code>
<code>HIword</code>	Specifies the high word (upper 2 bytes) of a 4 byte media memory byte address location.
<code>LOword</code>	Specifies the low word (lower 2 bytes) of a 4 byte media memory byte address location.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), HIword(MSB), HIword(LSB), LOword(MSB), LOword(LSB)

0xFF, 0x93, 0x00, 0x00, 0x02, 0x01

// This will set the media address to byte 513 (0x00, 0x00, 0x02, 0x01)
// (which is sector #1, 2nd byte in sector) for subsequent operations.

// The response will be 0x06 if the command is successful
```

### 5.3.3. Set Sector Address

The **Set Sector Address** command sets the media memory internal Address pointer for sector access.

**Library Function:** `media_SetSector`

**Syntax:** `cmd (word), HIword (word), LOword (word)`

Commands	Description
<code>cmd</code>	<code>0xFF92</code>
<code>HIword</code>	Specifies the high word (upper 2 bytes) of a 4 byte media memory sector address location.
<code>LOword</code>	Specifies the low word (lower 2 bytes) of a 4 byte media memory sector address location.

**Returns:** `(0x06)` ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), HIword(MSB), HIword(LSB), LOword(MSB), LOword(LSB)

0xFF, 0x92, 0x00, 0x00, 0x00, 0x0A

// This will set the media address to the 11th (0x00, 0x00, 0x00, 0x0A)
// sector (which is also byte address 5120) for subsequent operations

// The response will be 0x06 if the command is successful
```



### 5.3.4. Read Sector

The **Read Sector** command reads and returns 512 bytes (256 words) pointed to by the internal Sector pointer, determined by the **Set Sector Address** command. After the read the Sector pointer is automatically incremented by 1.

**Library Function:** `media_RdSector`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0x0016

**Returns:** `acknowledge (byte)`, `status (word)`, `block (sector)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: 1 for successful media response. 0 for attempt failed.
- *block*: 512 bytes (256 words)

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0x00, 0x16  
  
// This will initiate the read and return of 512 bytes starting where the  
// Set Sector Address command was set to.  
  
// The response will be 0x06 if the command is successful
```

#### See also

The **Media Init** command to enable the media to be ready for access, and **Set Sector Address** command to define where reading is to occur.

### 5.3.5. Write Sector

The **Write Sector** command writes 512 bytes (256 words) from a source memory block into the uSD card. After the write the Sect pointer is automatically incremented by 1.

**Library Function:** `media_WrSector`

**Syntax:** `cmd (word) . block (sector)`

Commands	Description
<code>cmd</code>	0x0017
<code>block</code>	512 bytes (256 words) to be written to the media sector address.

**Returns:** `acknowledge (byte)`, `status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: 1 for successful media response. 0 for attempt failed.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), block(sector)

0x00, 0x17, 0x...(512 Bytes worth of data)...

// This will transfer a 512 bytes block of data to the address pointed to by the
// "Set Sector Address" command.

// The response will be 0x06 if the command is successful
```

#### See also

The **Media Init** command to enable the media to be ready for access, and **Set Sector Address** command to define where writing is to occur.

### 5.3.6. Read Byte

The **Read Byte** command returns the byte value from the current media address, set by the **Set Byte Address** command. The internal byte address will then be internally incremented by one.

**Library Function:** `media_ReadByte`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0xFF8F</code>

**Returns:** `acknowledge (byte)`, `value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Byte value in the LSB.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0xFF, 0x8F

// This will read and return the byte value from the media address set by the
// Set Byte Address command.

// The response will be 0x06, 0x00, 0xFF assuming the value being read was
// 255 (0x00, 0xFF).
// Due to the Picaso being a 16bit system, each byte is reported in word format
// (2 bytes).
```

#### See also

The **Media Init** command to enable the media to be ready for access, and **Set Byte Address** command to define where reading is to occur.

### 5.3.7. Read Word

The **Read Word** command returns the word value (2 bytes) from the current media address, set by the **Set Byte Address** command. The internal byte address will then be internally incremented by one. If the address is not aligned, the word will still be read correctly.

**Library Function:** `media_ReadWord`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFF8E

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Word value.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0xFF, 0x8E  
  
// This will read and return the byte value from the media address set by the  
// Set Byte Address command.  
  
// The response will be 0x06, 0x3B, 0xAF assuming the value being read was  
// 15279 (0x3B, 0xAF).
```

#### See also

The **Media Init** command to enable the media to be ready for access, and **Set Byte Address** command to define where reading is to occur.

### 5.3.8. Write Byte

Writes a byte to the current media address that was initially set with the **Set Sector Address** command.

#### Note

Writing bytes or words to a media sector must start from the beginning of the sector. All writes will be incremental until the **Flush Media** command is executed, or the sector address rolls over to the next sector. When the **Flush Media** command is called, any remaining bytes in the sector will be padded with 0xFF, destroying the previous contents. An attempt to use the **Set Byte Address** command will result in the lower 9 bits being interpreted as zero. If the writing rolls over to the next sector, the **Flush Media** command is issued automatically internally.

**Library Function:** `media_WriteByte`

**Syntax:** `cmd (word), value (word)`

Commands	Description
<code>cmd</code>	0xFF8D
<code>value</code>	Byte value, in the LSB, to be written at the current byte address location.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: Non Zero for successful media response. 0 for attempt failed.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB)

0xFF, 0x8D, 0x00, 0x61

// This will write the ASCII character 'a' (0x00, 0x61) as a byte to the media address
// set by Set Sector Address.

// The response will be 0x06, 0x00, 0x01 assuming the value being written was successful.
```

#### Note

See also the **Media Init** command to enable the media to be ready for access, and **Set Sector Address** command to define where writing is to occur.

### 5.3.9. Write Word

Writes a word to the current media address that was initially set with the [Set Sector Address](#) command.

#### Note

Writing bytes or words to a media sector must start from the beginning of the sector. All writes will be incremental until the [Flush Media](#) command is executed, or the sector address rolls over to the next sector. When [Flush Media](#) command is called, any remaining bytes in the sector will be padded with 0xFF, destroying the previous contents. An attempt to use the [Set Byte Address](#) command will result in the lower 9 bits being interpreted as zero. If the writing rolls over to the next sector, the [Flush Media](#) command is issued automatically internally.

**Library Function:** `media_WriteWord`

**Syntax:** `cmd (word), value (word)`

Commands	Description
<code>cmd</code>	0xFF8C
<code>value</code>	The 16 bit word to be written at the current media address location.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: Non Zero for successful media response. 0 for attempt failed.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), value(MSB), value(LSB)

0xFF, 0x8C, 0x00, 0x41

// This will write the ASCII character 'A' (0x00, 0x41) as a word to the media address
// set by Set Sector Address.

// The response will be 0x06, 0x00, 0x01 assuming the value being written was successful.
```

#### See also

The [Media Init](#) command to enable the media to be ready for access, and [Set Sector Address](#) command to define where writing is to occur.

### 5.3.10. Flush Media

After writing any data to a sector, the **Flush Media** command should be called to ensure that the current sector that is being written is correctly stored back to the media else write operations may be unpredictable.

**Library Function:** `media_Flush`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0xFF8A</code>

**Returns:** `acknowledge (byte)`, `status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: Non Zero for successful media response. 0 for attempt failed.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0xFF, 0x8A  
  
// This command will ensure data written to the current sector is correctly stored  
// to the media.  
  
// The response will be 0x06, 0xFF, 0xFF if the command is successful (see Status above)
```

### 5.3.11. Display Image (RAW)

Displays an image from the media storage at the specified co-ordinates. The image address is previously specified with the [Set Byte Address](#) command or [Set Sector Address](#) command. If the image is shown partially off screen, it may not be displayed correctly.

**Library Function:** `media_Image`

**Syntax:** `cmd (word), x (word), y (word)`

Commands	Description
<code>cmd</code>	0xFF8B
<code>x, y</code>	Specifies the top left position where the image will be displayed.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB)

0xFF, 0x8B, 0x00, 0x0A, 0x00, 0x14

// This will display an image at X=10 (0x00, 0x0A), Y=20 (0x00, 0x14) from the media
// storage location specified.

// The response will be 0x06 if the command is successful
```

#### **i** See also

The [Media Init](#) command to enable the media to be ready for access, and [Set Byte Address](#) or [Set Sector Address](#) commands to define where reading is to occur.



### 5.3.12. Display Video (RAW)

Displays a *video* clip from the media storage device at the specified co-ordinates. The *video* address location in the media is previously specified with the [Set Byte Address](#) or [Set Sector Address](#) commands. If the *video* is shown partially off screen, it may not be displayed correctly. Note that showing a *video* blocks all other processes until the video has finished showing. See the [Display Video Frame](#) command for alternatives.

**Library Function:** `media_Video`

**Syntax:** `cmd (word), x (word), y (word)`

Commands	Description
<code>cmd</code>	0xFF95
<code>x,y</code>	Specifies the top left position where the video clip will be displayed.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB)

0xFF, 0x95, 0x00, 0x32, 0x00, 0x0A

// This will display a video clip at X=50 (0x00, 0x32), Y=10 (0x00, 0x0A) from the
// media storage device location specified.

// The response will be 0x06 if the command is successful
```

#### See also

The [Media Init](#) command to enable the media to be ready for access, and [Set Byte Address](#) or [Set Sector Address](#) commands to define where reading is to occur. See the [Display Video Frames](#) command for an alternative.

### 5.3.13. Display Video Frame (RAW)

Displays a *video* from the media storage device at the specified co-ordinates. The *video* address is previously specified with the [Set Byte Address](#) command or [Set Sector Address](#) command. If the *video* is shown partially off it may not be displayed correctly. The frames can be shown in any order. This function gives you great flexibility for showing various icons from an image strip, as well as showing videos while doing other tasks.

The **Display Video Frame (RAW)** command will now show an error box for out of range video frames. Also, if frame is set to -1, just a rectangle will be drawn in background colour to blank an image. It applies to PmmC R29 or above.

**Library Function:** `media_VideoFrame`

**Syntax:** `cmd (word), x (word), y (word), frameNumber (word)`

Commands	Description
<code>cmd</code>	0xFF94
<code>x,y</code>	Specifies the top left position of the video frame to be displayed.
<code>frameNumber</code>	Specifies the required frame number to be displayed.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), frameNumber(MSB), frameNumber(LSB)

0xFF, 0x94, 0x00, 0x23, 0x00, 0x05, 0x00, 0x2D

// This will display frame number 45 (0x00, 0x2D) of the video clip stored at the address
// specified, and display it at location X=35 (0x00, 0x23), Y=5 (0x00, 0x05).

// The response will be 0x06 if the command is successful
```

#### See also

The [Media Init](#) command to enable the media to be ready for access, and [Set Byte Address](#) or [Set Sector Address](#) commands to define where reading is to occur.

## 5.4. Serial (UART) Communications Commands

The following is a summary of the commands available to be used for Serial (UART) Communications:

- Set Baud Rate

### 5.4.1. Set Baud Rate

The **Set Baud Rate** command is used to set the required baud rate. To set the default baud rate, please refer to the instructions in [Introduction to using Workshop4 in the Serial Environment](#).

**Library Function:** `setbaudWait`

**Syntax:** `cmd (word), index (word)`

Commands	Description
cmd	0x0026
index	Specifies the baud rate index value. Refer to the <a href="#">baud rate index table</a> below.

Baud Rate Index Table

index	Required Baud Rate	%Error	Actual Baud Rate
0	110	0.00%	110
1	300	0.00%	300
2	600	0.01%	600
3	1200	0.03%	1200
4	2400	0.07%	2402
5	4800	0.16%	4808
6	9600	0.33%	9632
7	14400	0.16%	14423
8	19200	0.33%	19264
9	31250	0.00%	31250
10	38400	0.33%	38527
11	56000	0.45%	56250
12	57600	1.73%	58594
13	115200	1.73%	117188
14	128000	4.63%	133929
15	256000	9.86%	281250
16	300000	4.17%	312500
17	375000	7.14%	401786
18	500000	12.50%	562500
19	600000	17.19%	703125

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

**Examples**

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), index(MSB), index(LSB)  
  
0x00, 0x26, 0x00, 0x0D  
  
// This will set the baud rate to be 115200, which is Index 13 (0x00, 0x0D)  
  
// The response will be 0x06 at the new baud rate set, 100ms after the command is sent
```

## 5.5. Timer Commands

The following is a summary of the commands available to be used for the Timers:

- Sleep

### 5.5.1. Sleep

The **Sleep** command puts the display and processor into low power mode for a period of time. If "units" is zero, the display goes into sleep mode forever and needs power cycling to re-initialize. If "units" is 1 to 65535, the display will sleep for that period of time, or will be woken when touch screen is touched. The function returns the count of "units" that are remaining when the screen was touched. When returning from sleep mode, the display and processor are restored from low power mode.

#### Note

Prior to PmmC R33, the Sleep command units were not approximately a second in length. This was fixed in R33.

**Library Function:** `sys_Sleep`

**Syntax:** `cmd (word), units (word)`

Commands	Description
<code>cmd</code>	0xFF3B
<code>units</code>	When in sleep mode, timing is controlled by an RC oscillator, therefore, timing is not totally accurate and should not be relied on for timing purposes. Sleep timer units may vary, however 1 unit is approximately 1 second.

**Returns:** `acknowledge (byte), units (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *units*: Remaining time units when touch screen is touched, else returns zero.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), units(MSB), units(LSB)

0xFF, 0x3B, 0x00, 0x0A

// This will put the display to sleep for 10 (0x00, 0x0A) 'units', or approximately
// 10 seconds.
// If the display is touched in this time, it will return the number of 'units'
// remaining in the timer.

// The response is 0x06, 0x00, 0x00 assuming the display was not touched during
// this period.
```

## 5.6. FAT16 File Commands

The following is a summary of the commands available to be used for FAT16:

- File Error
- File Count
- List Filenames
- Find First File
- Find First File and Report
- Find Next File
- Find Next File and Report
- Find Exists
- File Open
- File Close
- File Read
- File Seek
- File Index
- File Tell
- File Write
- File Size
- Display Image (FAT)
- Screen Capture
- Write Character to the File
- Read Character from the File
- Write Word to the File
- Read Word from the File
- Write String to the File
- Read String from the File
- File Erase
- File Rewind
- File Load Function



- File Call Function
- File Run
- File Execute
- Load Image Control
- File Mount
- File Unmount
- Play WAV File
- Load String for 4XE/4FN File
- Read String for 4XE/4FN File

### 5.6.1. File Error

Returns the most recent error code or 0 if there were no errors.

**Library Function:** `file_Error`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFF1F

**Returns:** `acknowledge (byte)`, `ErrorNumber (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *ErrorNumber*: Returns Error Number. Please refer to the error number table below.

Error number table

ErrorNumber	Description
1	IDE command execution error
2	CARD not present
3	WRONG partition type, not FAT16
4	MBR sector invalid signature
5	Boot Record invalid signature
6	Media not mounted
7	File not found in open for read
8	File not open
9	Fat attempt to read beyond EOF
10	Reached the end of file
11	Invalid cluster value > maxcls
12	All root dir entry are taken
13	All clusters in partition are taken
14	A file with same name exist already
15	Cannot init the CARD
16	Cannot read the MBR
17	Malloc could not allocate the FILE struct
18	Mode was not r.w.
19	Failure during FILE search
20	Invalid Filename
21	bad media
22	Sector Read fail
23	Sector write fail

**Examples**

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), line(MSB), line(LSB), column(MSB), column(LSB)  
  
0xFF, 0x1F  
  
// This will request the most recent error code from the display.  
  
// The response will be 0x06, 0x00, 0x02 assuming the most recent error was 2 (0x00, 0x02)  
// Card not Present.
```

## 5.6.2. File Count

Returns number of files found that match the criteria.

The wild card character '\*' matches up with any combination of allowable characters and '?' matches up with any single allowable character.

**Library Function:** `file_Count`

**Syntax:** `cmd (word). filename (string)`

Commands	Description
<code>cmd</code>	0x0001
<code>filename</code>	Name of the file(s) for the search (passed as a string). Filename must be 8.3 format.  char0, char1, char2, ..., charN, NULL

**Returns:** `acknowledge (byte), count (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *count*: Number of files that match the criteria.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, NULL

0x00, 0x01, 0x2A, 0x2E, 0x2A, 0x00

// This will request the display to return the number of files on the disk,
// by sending the string "*. *" (0x2A, 0x2E, 0x2A) followed by a NULL.

// The response will be 0x06, 0x00, 0x23 assuming there are 35 (0x00, 0x23)
// files located on the root of the micro SD card.
```

#### See also

The [File Mount](#) command, to initially mount the file system.

### 5.6.3. List Filenames

Lists the stream of file names that agree with the search key on the Display Screen. Returns number of files found that match the criteria. The wild card character "\*" matches up with any combination of allowable characters and "?" matches up with any single allowable character.

#### Note

[Find First File and Report](#) and [Find Next File and Report](#) are recommended alternatives in order to return the responses.

**Library Function:** `file_Dir`

**Syntax:** `cmd (word), filename (string)`

Commands	Description
<code>cmd</code>	0x0002
<code>filename</code>	Name of the file(s) for the search (passed as a string). Filename must be 8.3 format.  char0, char1, char2, ..., charN, NULL

**Returns:** `acknowledge (byte), count (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *count*: Number of files that match the criteria.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, NULL

0x00, 0x02, 0x2A, 0x2E, 0x34, 0x58, 0x45, 0x00

// This will list on the display all the files on the root of the uSD card that fall in the
// category of "*.4XE" (0x2A, 0x2E, 0x34, 0x58, 0x45) followed by a NULL.

// The response will be 0x06, 0x00, 0x03 assuming there are 3 (0x00, 0x03) files located on
// the root of the micro SD card with the extension *.4XE
// The listing of these 3 files will also be displayed on the screen.
```

#### See also

The [File Mount](#) command, to initially mount the file system.  
[Find First File and Report](#) and [Find Next File and Report](#) commands as alternatives which return the responses.

### 5.6.4. Find First File

Returns true if at least 1 file exists that satisfies the file argument.

Wildcards are usually used so if the **Find First File** command returns true, further tests can be made using the **Find Next File** command to find all the files that match the wildcard class. Note that the filename is printed on the screen.

#### Note

**Find First File and Report** and **Find Next File and Report** are recommended alternatives in order to return the responses.

**Library Function:** `file_FindFirst`

**Syntax:** `cmd (word), filename (string)`

Commands	Description
cmd	0x0006
filename	Name of the file(s) for the search (passed as a string). Filename must be 8.3 format. char0, char1, char2, ..., charN, NULL

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If at least one file exists that satisfies the criteria.
  - **0**: If no file satisfies the criteria.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, NULL
0x00, 0x06, 0x2E, 0x2A, 0x47, 0x43, 0x49, 0x00

// This will list on the display the first file on the root of the uSD card that falls in
// the category of "*.GCI" (0x2E, 0x2A, 0x47, 0x43, 0x49) followed by a NULL.

// The response will be 0x06, 0x00, 0x01 assuming there was at least 1 (0x00, 0x01)
// file located on the root of the micro SD card that satisfied this search.
// The listing of this file will also be displayed on the screen.
```

#### See also

The **File Mount** command, to initially mount the file system. **Find Next File** command, to find the next file which meets the criteria. **Find First File and Report** and **Find Next File and Report** commands as alternatives which return the responses.

### 5.6.5. Find First File and Report

The **Find First File and Report** command returns the length of the filename and the filename if at least 1 file exists that matches the criteria.

Wildcards are usually used so if **Find First File and Report** command returns the stringlength and filename, further tests can be made using **Find Next File** or **Find Next File and Report** commands to find all the files that match the wildcard class.

**Library Function:** `file_FindFirstRet`

**Syntax:** `cmd (word), filename (string)`

Commands	Description
cmd	0x0024
filename	Name of the file(s) for the search (passed as a string). Filename must be 8.3 format.  char0, char1, char2, ..., charN, NULL

**Returns:** `acknowledge (byte), stringlength (word), filename (string)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *stringlength*: Length of the File-name string.
- *filename*: Filename if it exists. Filename string is not NULL terminated.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, NULL

0x00, 0x24, 0x2E, 0x2A, 0x47, 0x43, 0x49, 0x00

// This will list on the display the first file on the root of the uSD card that falls in
// the category of "*.GCI" (0x2A, 0x2E, 0x47, 0x43, 0x49) followed by a NULL.

// The response will be 0x06, 0x00, 0x07, 0x42, 0x6F, 0x62, 0x2A, 0x47, 0x43, 0x49
// assuming there was a file in the root of the uSD card called "Bob.GCI",
// where the reported length of the filename was 7 (0x00, 0x07),
// and the filename was reported "Bob.GCI" (0x42, 0x6F, 0x62, 0x2E, 0x47, 0x43, 0x49)
```

#### See also

The **File Mount** command, to initially mount the file system. **Find Next File and Report** and **Find Next File** commands to find the next file which meets the criteria.

### 5.6.6. Find Next File

The **Find Next File** command returns true if more file exists that satisfies the file argument that was given for the **Find First File** or **Find First File and Report** commands. Wildcards must be used for the **Find First File** or **Find First File and Report** commands else this function will always return zero as the only occurrence will have already been found. Note that the filename is printed on the screen.

**Library Function:** `file_FindNext`

**Syntax:** `cmd (word)`

Commands	Description
cmd	0xFF1B

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If at least one file exists that satisfies the criteria.
  - **0**: If no file satisfies the criteria.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0xFF, 0x2B

// This will find the next file that meets the criteria specified in the Find First File or
// Find First File and Report commands used previously.

// The response will be 0x06, 0x00, 0x01 assuming there is another file found that matches
// the criteria.
```

#### Note

The **File Mount** command, to initially mount the file system. **Find First File** command, to find the first file which meets the criteria. **Find First File and Report** and **Find Next File and Report** commands as alternatives which return the responses.



### 5.6.7. Find Next File and Report

Returns length of the filename and the filename if at least 1 file exists that matches the criteria given for the **Find First File** or **Find First File and Report** commands. Wildcards must be used for the **Find First File** or **Find First File and Report** commands else this function will always return zero as the only occurrence will have already been found.

Wildcards are usually used, so if the **Find First File** or **Find First File and Report** commands return the stringlength and filename, further tests can be made using **Find Next File and Report** command to find all the files that match the wildcard class.

**Library Function:** `file_FindNextRet`

**Syntax:** `cmd (word)`

Commands	Description
cmd	0x0025

**Returns:** acknowledge (byte), stringlength (word), filename (string)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *stringlength*: Length of the File-name string.
- *filename*: Filename if it exists. Filename string is not NULL terminated.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0x00, 0x25

// This will find the next file that meets the criteria specified in the Find First File or
// Find First File and Report commands used previously.

// The response will be 0x06, 0x00, 0x07, 0x42, 0x6F, 0x62, 0x2E, 0x47, 0x43, 0x49 assuming
// there was a file in the root of the uSD card that matched the wild card search criteria
// used in the "Find First File" or "Find First File and Report" commands, where the
// reported
// length of the filename was 7 (0x00, 0x07), and the filename was reported
// "Bob.GCI" (0x42, 0x6F, 0x62, 0x2E, 0x47, 0x43, 0x49).
```

#### See also

The **File Mount** command, to initially mount the file system. **Find First File and Report** and **Find First File** commands to find the next file which meets the criteria.

### 5.6.8. File Exists

Tests for the existence of the file provided with the search key. Returns TRUE if found.

**Library Function:** `file_Exists`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0x0005
<code>filename</code>	Name of the file(s) for the search (passed as a string). Filename must be 8.3 format.  char0, char1, char2, ..., charN, NULL

**Returns:** `acknowledge` (byte), `status` (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: File found
  - **0**: File not found

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, char5, char6, char7, NULL
0x00, 0x05, 0x54, 0x45, 0x53, 0x54, 0x2E, 0x34, 0x58, 0x45, 0x00

// This will search for the file "TEST.4XE" (0x54, 0x45, 0x53, 0x54, 0x2E, 0x34, 0x58,
0x45)
// on the uSD card, the string is ended with a NULL (0x00).

// The response will be 0x06, 0x00, 0x01 assuming the file was found.
```

#### See also

The [File Mount](#) command, to initially mount the file system.

### 5.6.9. File Open

Returns handle if file exists. The file 'handle' that is created is now used as reference for 'filename' for further file commands such as **File Close**, etc. For File Write and File Append modes ('w' and 'a') the file is created if it does not exist. If the file is opened for append and it already exists, the file pointer is set to the end of the file ready for appending, else the file pointer will be set to the start of the newly created file.

If the file was opened successfully, the internal error number is set to 0 (i.e. no errors) and can be read with the **File Error** command. For File Read mode ('r') the file must exist else a null handle (0x00, 0x00) is returned and the 'file not found' error number is set which can be read with the **File Error** command.

#### Note

If a file is opened for File Write mode 'w', and the file already exists, the operation will fail. Unlike C and some other languages where the file will be erased ready for re-writing when opened for writing, 4DGL offers a simple level of protection that ensures that a file must be purposely erased before being re-written.

Beginning with the v4.0 PmmC a file opened with FILE\_APPEND may be randomly read and or written. Also any altered file will have the Archive bit set in the directory entry.

**Library Function:** file\_Open

**Syntax:** cmd (word), filename (string), mode (byte)

Commands	Description
cmd	0x000A
filename	Name of the file(s) for the search (passed as a string). Filename must be 8.3 format.  char0, char1, char2, ..., charN, NULL
mode	'r' or 0x72 for File Read 'w' or 0x77 for File Write 'a' or 0x61 for File Append

**Returns:** acknowledge (byte), handle (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *handle*: Returns handle if file exists. Sets internal file error number accordingly (0 if no errors).

## Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), line(MSB), line(LSB), column(MSB), column(LSB)

0x00, 0x0A, 0x54, 0x45, 0x53, 0x54, 0x2E, 0x54, 0x58, 0x54, 0x00, 0x72

// This will attempt to read (0x72) a file called "TEST.TXT" (0x54, 0x45, 0x53, 0x54, 0x2E,
// 0x54, 0x58, 0x54) followed by a NULL (0x00) from the uSD Card

// The response will be 0x06, 0x14, 0x65 assuming the command was a success and the handle
// that was created had the value of DEC 5221 (0x14, 0x65).
```

### See also

The **File Mount** command, to initially mount the file system. The **File Close** command, to close the file once opened with this command.

## 5.6.10. File Close

The **File Close** command will close the previously opened file.

**Library Function:** `file_Close`

**Syntax:** `cmd (word), handle (word)`

Commands	Description
<code>cmd</code>	0xFF18
<code>handle</code>	The file handle that was created by the <b>File Open</b> command which is now used as reference 'handle' for the filename, for further file functions such as in this function to close the file.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: File closed.
  - **0**: File not closed.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0xFF, 0x18, 0x14, 0x65

// This will close the file with the handle value of 5221 (0x14, 0x65) which was opened
// previously

// The response will be 0x06, 0x00, 0x01 assuming the command was a success and the file
// was successfully closed.
```

#### See also

The **File Mount** command, to initially mount the file system. The **File Open** command, to initially open the file.

### 5.6.11. File Read

Returns the number of bytes specified by **'size'** from the file referenced by **'handle'**.

**Library Function:** `file_Read`

**Syntax:** `cmd (word), size (word), handle (word)`

Commands	Description
<code>cmd</code>	0x000C
<code>size</code>	Number of bytes to be read.
<code>handle</code>	The handle that references the file to be read.

**Returns:** `acknowledge (byte), count (word), data (string)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *count*: Returns the number of bytes read.
- *data*: Data read from the file

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0x00, 0x0C, 0x00, 0x14, 0x14, 0x65

// This will read 20 bytes (0x00, 0x14) from the file with handle 5221 (0x14, 0x65)

// The response will be 0x06, 0x00, 0x14, 0x31, 0x32, 0x33, 0x34, 0x35, 0x36, 0x37, 0x38,
// 0x39, 0x30, 0x61, 0x62, 0x63, 0x64, 0x65, 0x66, 0x67, 0x68, 0x69, 0x6A assuming the
// command was a success, and 20 bytes (0x00, 0x14) were read.

// The File contained the following data: 1234567890abcdefghij
```

#### See also

The **File Mount** command, to initially mount the file system.

## 5.6.12. File Seek

The **File Seek** command places the file pointer at the required position in a file that has been opened in 'r' (read) or 'a' (append) mode. In append mode, **File Seek** does not expand a filesize, instead, the file pointer (handle) is set to the end position of the file, e.g. assuming the file size is 10000 bytes, the **File Seek** command with HiWord = 0x00 and LoWord = 0x1234 will set the file position to 0x00001234 (byte position 4660) for the file handle, so subsequent data may be read from that position onwards with **Read Character from the File**, **Read Word from the File**, **Read String from the File** commands, or an image can be displayed with the **Display Image (FAT)** command.

Conversely, **Write Character to the File**, **Write Word to the File**, **Write String to the File** commands can write to the file at the position. A FE\_EOF (end of file error) will occur if you try to write or read past the end of the file, visible from the **File Error** command.

**Library Function:** file\_Seek

**Syntax:** cmd (word), handle (word), HiWord (word), LoWord (word)

Commands	Description
cmd	0xFF16
handle	The handle that references the file.
HiWord	Contains the upper 16bits of the memory pointer into the file.
LoWord	Contains the lower 16bits of the memory pointer into the file.

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If Seek successful.
  - **0**: if attempt failed.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), HiWord(MSB), HiWord(LSB), LoWord(MSB),
// LoWord(LSB)

0xFF, 0x16, 0x10, 0xD5, 0x00, 0x00, 0x12, 0x34

// This will place a file pointer at the byte position 4660 (HiWord = 0x00, 0x00,
// LoWord = 0x12, 0x34) on the file with handle 4309 (0x10, 0xD5)

// The response will be 0x06, 0x00, 0x01 if the command was successful and the Seek was
// successful.
```

**See also**

The **File Mount** command, to initially mount the file system.

The **Read Character from the File**, **Read Word from the File**, **Read String from the File**, **Write Character to the File**, **Write Word to the File**, and **Write String to the File** commands.

**Display Image (FAT)** command for displaying the image from File. **File Error** command for retrieving any error which may have occurred.



### 5.6.13. File Index

Places the file pointer at the position in a file that has been opened in 'r' (read) or 'a' (append) mode. In append mode, **File Index** does not expand a filesize, instead, the file pointer (handle) is set to the end position of the file, e.g. assuming the record size is 100 bytes, the **File Index** command with HiSize = 0, LoSize = 100 and recordnum = 22 will set the file position to 2200 for the file handle, so subsequent data may be read from that position onwards with **Read Character from the File**, **Read Word from the File**, **Read String from the File** commands or an image can be displayed with the **Display Image (FAT)** command.

Conversely, the **Write Character to the File**, **Write Word to the File**, **Write String to the File** commands can write to the file at the position. A FE\_EOF (end of file error) will occur if you try to write or read past the end of the file, visible from the **File Error** command.

**Library Function:** file\_Index

**Syntax:** cmd (word), handle (word), HiSize (word), LoSize (word), recordnum (word)

Commands	Description
cmd	0xFF15
handle	The handle that references the file.
HiSize	Contains the upper 16bits of the size of the file records.
LoSize	Contains the lower 16bits of the size of the file records.
recordnum	The index of the required record.

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the index found successfully.
  - **0**: if the attempt failed.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), HiSize(MSB), HiSize(LSB), LoSize(MSB),
// LoSize(LSB), recordnum(MSB), recordnum(LSB)

0xFF, 0x15, 0x10, 0xD5, 0x00, 0x00, 0x00, 0x64, 0x00, 0x16

// This will place a file pointer at the end of the file records specified, 22 records
// where each record is of size 100, (HiSize = 0x00, 0x00, LoSize = 0x00, 0x64,
// recordnum = 0x00, 0x16) on the file with handle 4309 (0x10, 0xD5)

// The response will be 0x06, 0x00, 0x01 if the command was successful and the Index was
// successful.
```

**See also**

The **File Mount** command, to initially mount the file system.

The **Read Character from the File**, **Read Word from the File**, **Read String from the File**, **Write Character to the File**, **Write Word to the File**, and **Write String to the File** commands.

**Display Image (FAT)** command for displaying the image from File. **File Error** command for retrieving any error which may have occurred.

### 5.6.14. File Tell

The **File Tell** command returns the current value of the file pointer.

**Library Function:** `file_Tell`

**Syntax:** `cmd (word), handle (word)`

Commands	Description
<code>cmd</code>	0x000F
<code>handle</code>	The handle that references the file.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.
- *HiWord*: Contains the upper 16bits of the value of the pointer.
- *LoWord*: Contains the lower 16bits of the value of the pointer.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0x00, 0x0F, 0x10, 0xD5

// This will return the current value of the file pointer 4309 (0x10, 0xD5)

// The response will be 0x06, 0x00, 0x01, 0x00, 0x00, 0x08, 0x98 assuming the command
// was successful (0x06), the operation was successful (0x00, 0x01), and the file pointer
// had the value of 2200 (0x00, 0x00, 0x08, 0x98)
```

#### See also

The **File Mount** command, to initially mount the file system.

### 5.6.15. File Write

The **File Write** command writes the number of bytes specified by "**size**" from the source buffer into the file referenced by "**handle**".

**Library Function:** `file_Write`

**Syntax:** `cmd (word), size (word), source (string), handle (word)`

Commands	Description
cmd	0x0010
size	Number of bytes to be written. Maximum that can be written at one time is 512 bytes.
source	String of Data without Null terminator.
handle	The handle that references the file to write.

**Returns:** `acknowledge (byte), count (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *count*: Returns the number of bytes written.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), size(MSB), size(LSB), source(MSB), source(LSB), handle(MSB),
// handle(LSB)

0x00, 0x10, 0x00, 0x05, 0x48, 0x65, 0x6C, 0x6C, 0x6F, 0x0F, 0xB8

// This will write 5 bytes (0x00, 0x05) where the string of data is "Hello" (0x48, 0x65,
// 0x6C, 0x6C, 0x6F) to the file with the handle of 4024 (0x0F, 0xB8)

// The response will be 0x06, 0x00, 0x05 assuming the command was successful and 5 bytes
// (0x00, 0x05) were successfully written
```

#### See also

The [File Mount](#) command, to initially mount the file system.

## 5.6.16. File Size

The **File Size** command reads the 32 bit file size.

**Library Function:** `file_Size`

**Syntax:** `cmd (word), handle (word)`

Commands	Description
<code>cmd</code>	0x000E
<code>handle</code>	The handle that references the file to write.

**Returns:** `acknowledge (byte), status (word), HiWord (word), LoWord (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.
- *HiWord*: Contains the upper 16bits of the file size.
- *LoWord*: Contains the lower 16bits of the file size.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0x00, 0x0E, 0x0F, 0xB8

// This will request the size of the file with the handle 4024 (0x0F, 0xB8)

// The response will be 0x06, 0x00, 0x01, 0x00, 0x00, 0x00, 0xA7 assuming the command was
// successful (0x06), the operation was successful (0x00, 0x01), and the file size was
// 167 (0x00, 0x00, 0x00, 0xA7)
```

#### See also

The **File Mount** command, to initially mount the file system.

## 5.6.17. Display Image (FAT)

Display an image from the file stream at screen location specified by x, y (top left corner). If there is more than 1 image in the file, it can be accessed with the [File Seek](#) command.

**Library Function:** `file_Image`

**Syntax:** `cmd (word) , x (word) , y (word) , handle (word)`

Commands	Description
cmd	0xFF11
x	X-position of the image to be displayed.
y	Y-position of the image to be displayed.
handle	The handle that references the file containing the image(s).

### Returns:

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *error*: Returns a copy of the File Error, see the [File Error](#) command.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), handle(MSB), handle(LSB)

0xFF, 0x11, 0x00, 0x05, 0x00, 0x05, 0x0E, 0x9B

// This will display the image which has the file handle of 3739 (0x0E, 0x9B) at position
// X=5 (0x00, 0x05), Y=5 (0x00, 0x05)

// The response will be 0x06, 0x00, 0x00 if the command was successful and there was no
// error associated with this command.
```

#### See also

The [File Mount](#) command, to initially mount the file system. [File Seek](#) command to access another image from the same file, if required. [File Error](#) command for retrieving any error which may have occurred.

## 5.6.18. Screen Capture

The **Screen Capture** command saves an image of the screen shot to file at the current file position.

The image can later be displayed with the **Display Image (FAT)** command. The file may be opened in append mode to accumulate multiple images. Later, the images can be displayed with the **File Seek** command. The image is saved from x, y (with respect to top left corner), and the capture area is determined by "width" and "height".

**Library Function:** `file_ScreenCapture`

**Syntax:** `cmd (word), x (word), y (word), width (word), height (word), handle (word)`

Commands	Description
cmd	0xFF10
x	X-position of the image to be captured.
y	Y-position of the image to be captured.
width	Width of the area to be captured.
height	Height of the area to be captured.
handle	The handle that references the file to store the image(s).

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: **0**: If the operation was successful

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), width(MSB), width(LSB), height(MSB),
// height(LSB), handle(MSB), handle(LSB)

0xFF, 0x10, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x64, 0x00, 0x64, 0x0C, 0x4E

// This will capture from X=0 (0x00, 0x00), Y=0 (0x00, 0x00) across 100 pixels (0x00, 0x64)
// and down 100 pixels (0x00, 0x64), and save the image inside that region to the file
with
// handle 3150 (0x0C, 0x4E)

// The response will be 0x06, 0x00, 0x00 if the command was successful (0x06) and the
// operation was successful (0x00, 0x00)
```

#### **See also**

The **File Mount** command, to initially mount the file system. **Display Image (FAT)** command for displaying the image from File. **File Seek** command to access another image from the same file, if required.

### 5.6.19. Write Character to the File

This function writes the byte specified by "char" to the file, at the position indicated by the associated file-position pointer (set by the [File Seek](#) or [File Index](#) commands) and advances the pointer appropriately (incremented by 1). The file must be previously opened with 'w' (write) or 'a' (append) modes.

**Library Function:** `file_PutC`

**Syntax:** `cmd (word), char (word), handle (word)`

Commands	Description
cmd	0x001F
char	Data byte (in the LSB) about to be written.
handle	The handle that references the file to be written to.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: Returns the number of bytes written successfully.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char(MSB), char(LSB), handle(MSB), handle(LSB)

0x00, 0x1F, 0x00, 0x58, 0x0B, 0x31

// This will write the character 'X' (0x00, 0x58) to the file with handle 2865 (0x0B, 0x31)

// The response will be 0x06, 0x00, 0x01 if the command was successful (0x06)
// and the operation successfully wrote the 1 byte (0x00, 0x01)
```

#### See also

The [File Mount](#) command, to initially mount the file system. [File Seek](#) and [File Index](#) commands to access another image from the same file, if required.



## 5.6.20. Read Character from the File

The **Read Character from the File** command reads a byte from the file, at the position indicated by the associated file-position pointer (set by the **File Seek** or **File Index** commands) and advances the pointer appropriately (incremented by 1). The file must be previously opened with 'r' (read) mode.

**Library Function:** `file_GetC`

**Syntax:** `cmd (word), handle (word)`

Commands	Description
<code>cmd</code>	0xFF0E
<code>handle</code>	The handle that references the file to be read from.

**Returns:** `acknowledge (byte), char (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *char*: Returns the data byte read from the file in the LSB.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0xFF, 0x0E, 0x0B, 0x31

// This will read the character from the file with the point of 2865 (0x0B, 0x31) based on
// the position of the pointer determined previously by the "File Seek" or "File Index"
// commands.

// The response will be 0x06, 0x00, 0x74 assuming the command was successful and the
// pointer
// was pointing at the position of the file which contained the character 't' (0x00, 0x74)
```

#### **See also**

The **File Mount** command, to initially mount the file system. **File Seek** and **File Index** commands to access another image from the same file, if required.

### 5.6.21. Write Word to the File

This function writes word sized (2 bytes) data specified by 'word' to the file, at the position indicated by the associated file-position pointer (set by the [File Seek](#) or [File Index](#) commands) and advances the pointer appropriately (incremented by 2). The file must be previously opened with 'w' (write) or 'a' (append) modes.

**Library Function:** `file_PutW`

**Syntax:** `cmd (word), word (word), handle (word)`

Commands	Description
cmd	0xFF0D
word	Word about to be written.
handle	The handle that references the file to be written to.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: Returns the number of bytes written successfully.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), word(MSB), word(LSB), handle(MSB), handle(LSB)

0xFF, 0x0D, 0x01, 0xBB, 0x0B, 0x31

// This will write the word 443 (0x01, 0xBB) to the file with handle 2865 (0x0B, 0x31)

// The response will be 0x06, 0x00, 0x02 assuming the command was successful and the
// operation was successful at writing the 2 bytes (0x00, 0x02).
```

#### See also

The [File Mount](#) command, to initially mount the file system. [File Seek](#) and [File Index](#) commands to access another image from the same file, if required.

## 5.6.22. Read Word from the File

This function reads a word (2 bytes) from the file, at the position indicated by the associated file-position pointer (set by the [File Seek](#) or [File Index](#) commands) and advances the pointer appropriately (incremented by 2). The file must be previously opened with 'r' (read) mode.

**Library Function:** `file_GetW`

**Syntax:** `cmd (word), handle (word)`

Commands	Description
<code>cmd</code>	0xFF0C
<code>handle</code>	The handle that references the file to be read from.

**Returns:** `acknowledge (byte), word (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *word*: Returns the word read from the file.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0xFF, 0x0E, 0x0B, 0x31

// This will read the character from the file with the point of 2865 (0x0B, 0x31) based
// on the position of the pointer determined previously by the "File Seek" or "File Index"
// commands.

// The response will be 0x06, 0x00, 0x74 assuming the command was successful and the
// pointer
// was pointing at the position of the file which contained the word 25972 (0x65, 0x74)
```

#### See also

The [file Mount](#) command, to initially mount the file system. [File Seek](#) and [File Index](#) commands to access another image from the same file, if required.

### 5.6.23. Write String to the File

This function writes a null terminated string to the file, at the position indicated by the associated file-position pointer (set by the [File Seek](#) or [File Index](#) commands) and advances the pointer appropriately. The file must be previously opened with 'w' (write) or 'a' (append) modes.

**Library Function:** `file_PutS`

**Syntax:** `cmd (word), data (string), handle (word)`

Commands	Description
cmd	0x0020
data	A Null terminated string to be written to the file.
handle	The handle that references the file to be written to.

**Returns:** `acknowledge (byte), count (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *count*: Returns the number of characters written (excluding the null terminator).

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, char5, char6, char7, char8,
// handle(MSB), handle(LSB)

0x00, 0x20, 0x34, 0x44, 0x20, 0x53, 0x79, 0x73, 0x74, 0x65, 0x6D, 0x73, 0x00, 0x0B, 0x31

// This will write the string "4D Systems" (0x34, 0x44, 0x20, 0x53, 0x79, 0x73, 0x74, 0x65,
// 0x6D, 0x73) followed by a Null (0x00) to the file which has a handle of 2865 (0x0B, 0x31)

// The response will be 0x06, 0x00, 0x0A assuming the command was successful and the 10
// characters (0x00, 0x0A) were written
```

#### See also

The [File Mount](#) command, to initially mount the file system.  
[File Seek](#) and [File Index](#) commands to access another image from the same file, if required.

### 5.6.24. Read String from the File

This function reads a line of text from a file at the current file position indicated by the associated file-position pointer (set by the [File Seek](#) or [File Index](#) commands) and advances the pointer appropriately. Characters are read until either a newline or an EOF is received or until the specified maximum "**size**" is reached. In all cases, the string is null terminated. The file must be previously opened with 'r' (read) mode.

**Library Function:** `file_GetS`

**Syntax:** `cmd (word), size(word), handle (word)`

Commands	Description
cmd	0x0007
size	The maximum number of bytes to be read from the file.
handle	The handle that references the file to be read from.

**Returns:** `acknowledge (byte), word (word), data (string)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *count*: Returns the number of characters read from file (excluding the null terminator).
- *data*: Returns the string read from the file excluding the Null terminator.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), size(MSB), size(LSB), handle(MSB), handle(LSB)

0x00, 0x07, 0x00, 0x05, 0x0B, 0x31

// This will read the string from the file with handle 2865 (0x0B, 0x31) up to the
// maximum of 5 characters (0x00, 0x05) in length.

// The response will be 0x06, 0x00, 0x04, 0x74, 0x65, 0x73, 0x74 assuming the command was
// successful and the file contained only 4 characters (0x00, 0x04) at the pointer
// location,
// and the string was "test" (0x74, 0x65, 0x73, 0x74)
```

#### See also

The [File Mount](#) command, to initially mount the file system.  
[File Seek](#) and [File Index](#) commands to access another image from the same file, if required.

## 5.6.25. File Erase

This function erases a file on the disk.

### Note

If the function fails, the appropriate error number is set in the [File Error](#) command and will usually be error 19, "failure during FILE search".

**Library Function:** `file_Erase`

**Syntax:** `cmd (word). filename (string)`

Commands	Description
<code>cmd</code>	0x0003
<code>filename</code>	Name of the file to be erased (passed as a string). Filename must be 8.3 format.  char0, char1, char2, ..., charN, NULL

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, char5, char6, char7, NULL
0x00, 0x03, 0x74, 0x65, 0x73, 0x74, 0x2E, 0x74, 0x78, 0x74, 0x00

// This will erase the file called "test.txt" (0x74, 0x65, 0x73, 0x74, 0x2E, 0x74, 0x78,
// 0x74) followed by NULL (0x00)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful and the
// operation was successful.
```

### See also

The [File Mount](#) command, to initially mount the file system.  
[File Seek](#) and [File Index](#) commands to access another image from the same file, if required.

## 5.6.26. File Rewind

The **File Rewind** command resets the file pointer to the beginning of a file that has been opened in '**r**' (read), '**w**', or '**a**' (append) mode.

**Library Function:** `file_Rewind`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFF08
<code>handle</code>	The handle that references the file.

**Returns:** `acknowledge (byte), word (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0xFF, 0x08, 0x0B, 0x31

// This will reset the file point to the beginning of the file with file pointer 2865
// (0x0B, 0x31)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful and the
// operation was successful
```

#### See also

The **File Mount** command, to initially mount the file system.

## 5.6.27. File Load Function

The **File Load Function** command allocates the RAM area to the 4FN or 4XE program, load it from the uSD card in to the RAM and return a function pointer to the allocation.

The function can then be invoked just like any other function would be called via a function pointer using the **File Call Function** commands. The 4FN or 4XE program may be discarded at any time when no longer required, thus freeing its memory resources.

The loaded function can be discarded with the **Memory Free** command.

### Note

A 4FN or a 4XE file is an executable file generated when a 4DGL file is compiled. 4DGL file refers to the program files developed under "Designer" or "ViSi" Environments in the 4D Workshop4 IDE.

.4FN file is generated when the 4DGL program has 'main' with arguments.

.4XE file is generated when the 4DGL program has a 'main', with no arguments.

**Library Function:** `file_LoadFunction`

**Syntax:** `cmd (word), filename (string)`

Commands	Description
cmd	0x0008
filename	Name of the 4DGL function (filename.4FN) or application program (filename.4XE) that is about to be loaded into RAM. Filename must be 8.3 format. char0, char1, char2, ..., charN, NULL

**Returns:** acknowledge (byte), pointer (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *pointer*: Returns a pointer to the memory allocation where the function has been loaded from file which can be then used as a function call.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, char5, char6, char7, char8,
// char9, char10, char11, NULL

0x00 0x08 0x34 0x46 0x4E 0x2D 0x50 0x52 0x4F 0x47 0x2E 0x34 0x46 0x4E 0x00

// This will load the "4FN-Prog.4FN" (0x34 0x46 0x4E 0x2D 0x50 0x52 0x4F 0x47 0x2E
// 0x34 0x46 0x4E 0x00) file, followed by a NULL.

// The response will be 0x06, 0x0D, 0x8B assuming the command was successful and the
// pointer in memory where the function call has been loaded is 3467 (0x0D, 0x8B)
```



**See also**

The **File Mount** command, to initially mount the file system.  
**File Call Function** command to invoke a loaded function.  
**Memory Free** command to discard a loaded function

## 5.6.28. File Call Function

Call the function previously loaded through [File Load Function](#).

Parameters may be passed to it in a conventional way except the strings which needs to be loaded in to memory location separately through [Load String for 4XE/4FN File](#) command and the string handle is given to the File Call Function. The 4FN function or 4XE application may be discarded at any time when no longer required, thus freeing its memory resources.

The loaded function can be discarded with the [Memory Free](#) command.

### Note

A 4FN or a 4XE file is an executable file generated when a 4DGL file is compiled.  
 .4FN file is generated when the 4DGL program has 'main' with arguments.  
 .4XE file is generated when the 4DGL program has a 'main', with no arguments.

**Library Function:** `file_CallFunction`

**Syntax:** `cmd (word), handle(word), Argcount(word), Arg0(word), Arg1(word), ..., ArgN(word)`

Commands	Description
cmd	0x0019
handle	The file handle that was created by the <a href="#">File Load Function</a> command which is now used as reference 'handle' for the filename, for further file functions such as in this function to close the file.
Argcount	Number of arguments to be passed to the File Run command. Maximum 6 arguments.
Arg0	Argument 0 to be passed. (optional)
Arg1	Argument 1 to be passed. (optional)
ArgN	Argument N to be passed. (optional)

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns the value from main in the called function.

## Examples

### 4DGL Program

```
// This program "**4FN-Prog.4FN**" when compiled under the "Designer Environment"
// generates the .4FN file.

#platform "uLCD-32PTU"

#inherit "4DGL_16bitColours.fnc"

/* A 4DGL program without 'main'. When compiled, a .4FN extension file is generated
at the root folder where the 4DGL program resides. Copy the 4FN file to the Fat16
(aka FAT) formatted uSD card.*/

func messagebox(var line, var col, var txt)
    var txts ;
    gfx_Cls();
    gfx_ScreenMode(PORTRAIT) ;           // Change Orientation
    print("I am the Child Program\n");   // Print text on screen
    print("line=", line, "\n");         // Print the 1st parameter
    print("column=", col, "\n");        // Print the 2nd parameter
    txt_MoveCursor(line, col);          // Move cursor to line, col
    txts := txt ;                       // because str_Printf changes txt
    str_Printf(&txt, "%s");              // Print the 3rd parameter
    pause(3000);                        // Pause for 3 sec.
    str_Copy(txts, "I have returned");
    return;
endfunc
```

### File Mount command

```
// cmd(MSB), cmd(LSB)
0xFF, 0x03
// Response:
0x06 0x15 0x43 ( ACK, Status(MSB), Status(LSB) )
```

### File Load command

```
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, char5, char6, char7,
// char8, char9, char10, char11, NULL
0x00 0x08 0x34 0x46 0x4E 0x2D 0x50 0x52 0x4F 0x47 0x2E 0x34 0x46 0x4E 0x00
// Response:
0x06 0x95 0x52 ( ACK, Pointer(MSB), Pointer(LSB) )
```

### Load String command

```
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), char0, char1, char2, char3,
// char4, char5, char6, char7, char8, char9, char10, NULL
0x00 0x21 0x00 0x00 0x48 0x65 0x6C 0x6C 0x6F 0x20 0x57 0x6F 0x72 0x6C 0x64 0x00
```

```
// Response:
0x06 0x01 0x0E ( ACK, pointer(MSB), pointer(LSB) )
```

*File Call command (Arg0 = 10, Arg1 = 10, Arg2 = String Pointer)*

```
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), Argcount(MSB), Argcount(LSB),
// Arg0(MSB), Arg0(LSB), Arg1(MSB), Arg1(LSB), Arg2(MSB), Arg2(LSB)
0x00 0x19 0x95 0x52 0x00 0x03 0x00 0x0A 0x00 0x0A 0x01 0x0E
// Response:
0x06 0x00 0x00 ( ACK, value(MSB), value(LSB) )
```

*Read String command*

```
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)
0x00 0x22 0x01 0x0E
// Response:
0x49 0x20 0x68 0x61 0x76 0x65 0x20 0x72 0x65 0x74 0x75 0x72 0x6E 0x65 0x64
// ( ACK, char0, char1, char2, char3, char4, char5, char6, char7, char8, char9,
// char10, char11, char12, char13, char14, char15, char16 )

// Response = "I have returned"
```

#### See also

- The [File Mount](#) command, to initially mount the file system.
- [File Load Function](#) command to load a function.
- [Memory Free](#) command to discard a loaded function.
- [Load String for 4XE/4FN File](#) command to pass a string to the Function.

## 5.6.29. File Run

The **File Run** command will load the 4FN or 4XE program from the uSD card in to the RAM and execute it. Once the program is called, the Host must wait until the program finished execution. Any attempt to send further commands while the 4FN or 4XE file is executing can cause the module to reset or respond with erroneous data.

The 4FN or 4XE program may be discarded at any time when no longer required, thus freeing its memory resources.

Parameters may be passed to it in a conventional way except the strings which needs to be loaded in to memory location separately through **Load String** command and the string handle is given to the File Call Function. The 4FN function or 4XE application may be discarded at any time when no longer required, thus freeing its memory resources.

The loaded function can be discarded with the **Memory Free** command.

### Note

- A 4FN or a 4XE file is an executable file generated when a 4DGL file is compiled.
- .4FN file is generated when the 4DGL program has 'main' with arguments.
- .4XE file is generated when the 4DGL program has a 'main', with no arguments.

Any memory allocations in the main FLASH program are released; however, the stack and globals are maintained. func 'main' in the called program accepts the arguments, if any. If Argcount is 0, no arguments are passed; else Arg0-ArgN contains argument 0 to argument N.

The disk does not need to be mounted; File Run automatically mounts the drive.

**Library Function:** `file_Run`

**Syntax:** `cmd (word), filename (string), Argcount (word), Arg0(word), Arg1(word), ..., ArgN(word)`

Commands	Description
cmd	0x000D
filename	A 4FN or a 4XE file is an executable file generated when a 4DGL file is compiled. Filename must be 8.3 format. char0, char1, char2, ..., charN, NULL
Argcount	Number of arguments to be passed to the File Run command.
Arg0	Argument 0 to be passed. (optional)
Arg1	Argument 1 to be passed. (optional)
ArgN	Argument N to be passed. (where N is Argcount-1, optional)

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns the value from main in the called function.

## Examples

### 4DGL Program

```
// This program "4FN-Prog.4FN" when compiled under the "Designer Environment"
// generates the .4FN file.

#platform "uLCD-32PTU"
#inherit "4DGL_16bitColours.fnc"

/* A 4DGL program without 'main'. When compiled, a .4FN extension file is generated
at the root folder where the 4DGL program resides. Copy the 4FN file to the Fat16
(aka FAT) formatted uSD card.*/

func messagebox(var line, var col, var txt)
    var txts ;
    gfx_Cls();
    gfx_ScreenMode(PORTRAIT) ;           // Change Orientation
    print("I am the Child Program\n") ;   // Print text on screen
    print("line=", line, "\n");          // Print the 1st parameter
    print("column=", col, "\n");         // Print the 2nd parameter
    txt_MoveCursor(line, col);           // Move cursor to line, col
    txts := txt ;                        // because str_Printf changes txt
str_Printf(&txt, "%s");                   // Print the 3rd parameter
    pause(3000);                          // Pause for 3 sec.
    str_Copy(txts,"I have returned");
    return;
endfunc
```

### File Mount command

```
// cmd(MSB), cmd(LSB)
0xFF, 0x03
// Response:
0x06 0x15 0x43 ( ACK, Status(MSB), Status(LSB) )
```

### Load String command

```
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), char0, char1, char2, char3,
// char4, char5, char6, char7, char8, char9, char10, NULL
0x00 0x21 0x00 0x00 0x48 0x65 0x6C 0x6C 0x6F 0x20 0x57 0x6F 0x72 0x6C 0x64 0x00
// Response:
0x06 0x01 0x0E ( ACK, pointer(MSB), pointer(LSB) )
```

### File Run command (Arg0 = 10, Arg1 = 10, Arg2 = String Pointer)

```
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, char5, char6, char7,
// char8, char9, char10, char11, Argcount(MSB), Argcount(LSB), Arg0(MSB), Arg0(LSB),
// Arg1(MSB), Arg1(LSB), Arg2(MSB), Arg2(LSB)
0x00 0x0D 0x34 0x46 0x4E 0x2D 0x50 0x52 0x4F 0x47 0x2E 0x34 0x46 0x4E 0x00 0x00 0x03 0x00
```

```
0x0A 0x00 0x0A 0x01 0x0E
// Response:
0x06 0x80 0x24
```

### *Read String command*

```
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)
0x00 0x22 0x01 0x0E
// Response:
0x49 0x20 0x68 0x61 0x76 0x65 0x20 0x72 0x65 0x74 0x75 0x72 0x6E 0x65 0x64
// (ACK, char0, char1, char2, char3, char4, char5, char6, char7, char8, char9,
// char10, char11, char12, char13, char14, char15, char16)

// Response = "I have returned"
```

### 5.6.30. File Execute

The **File Execute** command will load the 4FN or 4XE program from the uSD card in to the RAM and execute it. Once the program is called, the Host must wait until the program finished execution. Any attempt to send further commands while the 4FN or 4XE file is executing can cause the module to reset or respond with erroneous data.

The 4FN or 4XE program may be discarded at any time when no longer required, thus freeing its memory resources.

Parameters may be passed to it in a conventional way except the strings which needs to be loaded in to memory location separately through **Load String** command and the string handle is given to the File Call Function. The 4FN function or 4XE application may be discarded at any time when no longer required, thus freeing its memory resources.

The loaded function can be discarded with the **Memory Free** command.

#### Note

- A 4FN or a 4XE file is an executable file generated when a 4DGL file is compiled.
- .4FN file is generated when the 4DGL program has 'main' with arguments.
- .4XE file is generated when the 4DGL program has a 'main', with no arguments.

This function is similar to **File Run**, however, the main program in FLASH retains all memory allocations (eg file buffers, memory allocated with mem\_Alloc etc)

**Library Function:** file\_Exec

**Syntax:** cmd (word), filename (string), Argcount (word), Arg0(word), Arg1(word), ..., ArgN(word)

Commands	Description
cmd	0x0004
filename	A 4FN or a 4XE file. 4FN or a 4XE file is an executable file generated when a 4DGL file is compiled. Filename must be 8.3 format. char0, char1, char2, ..., charN, NULL
Argcount	Number of arguments to be passed to the File Run command.
Arg0	Argument 0 to be passed. (optional)
Arg1	Argument 1 to be passed. (optional)
ArgN	Argument N to be passed. (where N is Argcount - 1, optional)

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns the value from the called program.



## Examples

### 4DGL Program

```
// This program "4FN-Prog.4FN" when compiled under the "Designer Environment" generates
// the .4FN file.

#platform "uLCD-32PTU"
#inherit "4DGL_16bitColours.fnc"

/* A 4DGL program without 'main'. When compiled, a .4FN extension file is generated at
the root folder where the 4DGL program resides. Copy the 4FN file to the Fat16 (aka FAT)
formatted uSD card.*/

func messagebox(var line, var col, var txt)
    var txts ;
    gfx_Cls();
    gfx_ScreenMode(PORTRAIT) ;           // Change Orientation
    print("I am the Child Program\n") ;  // Print text on screen
    print("line=", line, "\n");         // Print the 1st parameter
    print("column=", col, "\n");       // Print the 2nd parameter
    txt_MoveCursor(line, col);          // Move cursor to line, col
    txts := txt ;                       // because str_Printf changes txt
    str_Printf(&txt, "%s");              // Print the 3rd parameter
    pause(3000);                         // Pause for 3 sec.
    str_Copy(txts,"I have returned");
    return;
endfunc
```

### File Mount command

```
// cmd(MSB), cmd(LSB)
0xFF, 0x03
// Response:
0x06 0x15 0x43 ( ACK, Status(MSB), Status(LSB) )
```

### Load String command

```
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), char0, char1, char2, char3, char4,
// char5, char6, char7, char8, char9, char10, NULL
0x00 0x21 0x00 0x00 0x48 0x65 0x6C 0x6C 0x6F 0x20 0x57 0x6F 0x72 0x6C 0x64 0x00
// Response:
0x06 0x01 0x0E ( ACK, pointer(MSB), pointer(LSB) )
```

### File Execute command (Arg0 = 10, Arg1 = 10, Arg2 = String Pointer)

```
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, char5, char6, char7, char8,
char9,
// char10, char11, Argcount(MSB), Argcount(LSB), Arg0(MSB), Arg0(LSB), Arg1(MSB),
Arg1(LSB),
```

```
// Arg2(MSB), Arg2(LSB)
0x00 0x04 0x34 0x46 0x4E 0x2D 0x50 0x52 0x4F 0x47 0x2E 0x34 0x46 0x4E 0x00 0x00 0x03 0x00
0x0A 0x00 0x0A 0x01 0x0E
// Response:
0x06 0x80 0x24
```

### *Read String command*

```
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)
0x00 0x22 0x01 0x0E
// Response:
0x49 0x20 0x68 0x61 0x76 0x65 0x20 0x72 0x65 0x74 0x75 0x72 0x6E 0x65 0x64
// ( ACK, char0, char1, char2, char3, char4, char5, char6, char7, char8, char9, char10,
// char11, char12, char13, char14, char15, char16 )

// Response = "I have returned"
```

### 5.6.31. Load Image Control

Reads a control file to create an image list. The GCI file may contain images, videos or animations built through the Graphics Composer Software tool.

The GCI file is created by selecting the **GCI – FAT Selected Folder** option in the Built Option type. See the [Graphics Composer User Guide](#) for further details on the Graphics Composer.

**Library Function:** `file_LoadImageControl`

**Syntax:** `cmd (word), filename1 (string), filename2 (string), mode (word)`

Commands	Description
cmd	0x0009
filename1	The control list filename "*.dat". Created from Graphics Composer. Filename must be 8.3 format.  char0, char1, char2, ..., charN, NULL
filename2	The image filename "*.gci". Created from Graphics Composer. Filename must be 8.3 format.  char0, char1, char2, ..., charN, NULL
mode	<p><b>mode 0:</b> It is assumed that there is a graphics file with the file extension "fname2.gci". In this case, the images have been stored in a FAT16 file concurrently, and the offsets that are derived from the "fname1.dat" file are saved in the image control so that the <b>Load Image Control</b> command can open the file (*.gci) and use the <b>File Seek</b> command to get to the position of the image which can then automatically be displayed using the <b>Display Image (FAT)</b> command. Mode 0 builds the image control quickly as it only scans the *.dat file for the file offsets and saves them in the relevant entries in the image control. The penalty is that images take longer to find when displayed due to the <b>File Seek</b> command overheads.</p> <p><b>mode 1:</b> It is assumed that there is a graphics file with the file extension "fname2.gci". In this case, the images have been stored in a FAT16 file concurrently, and the offset of the images are saved in the image control so that image file (*.gci) can be mapped to directly. The absolute cluster/sector is mapped so file seek does not need to be called internally. This means that there is no seek time penalty, however, the image list takes a lot longer to build, as all the seeking is done at control build time.</p> <p><b>mode 2:</b> In this case, the images have been stored in a in a RAW partition of the uSD card, and the absolute address of the images are saved in the DAT file. This is the fastest operation of the image control as there is no seeking or other disk activity taking place.</p>

**Returns:** acknowledge (byte), handle (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *handle*: Returns a handle (pointer to the memory allocation) to the image control list that has been created.  
Returns NULL if function fails.

## Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), charA0, charA1, charA2, ..., charA12, NULL, charB0, charB1, charB2,
// ..., char12, NULL, mode(MSB), mode(LSB)
0x00, 0x09, 0x47, 0x46, 0x58, 0x32, 0x44, 0x45, 0x4D, 0x4F, 0x2E, 0x44, 0x41, 0x54, 0x00,
0x47, 0x46, 0x58, 0x32, 0x44, 0x45, 0x4D, 0x4F, 0x2E, 0x47, 0x43, 0x49, 0x00, 0x00, 0x01

// This will load the Image Control System using the 2 specified files (GFX2DEMO.DAT and
// GFX2DEMO.GCI)

// The response will be 0x06 0x0D 0x6A assuming the command is successful and the handle
// that is returned is 3434 (0x0D, 0x6A)
```

### **See also**

The [File Mount](#) command, to initially mount the file system. [File Seek](#) command to access another image from the same file, if required. [Display Image \(FAT\)](#) command for displaying the image from File.

### 5.6.32. File Mount

Starts up the FAT16 disk file services and allocates a small 32 byte control block for subsequent use. When you open a file using the **File Open** command a further 512 + 44 = 556 bytes are attached to the FAT16 file control block. When you close a file using the **File Close** command, the 556 byte allocation is released leaving the 32 byte file control block. The **File Mount** command must be called before any other FAT16 file related functions can be used. The control block and all FAT16 file resources are completely released with the **File Unmount** command.

**Library Function:** file\_Mount

**Syntax:** cmd (word)

Commands	Description
cmd	0xFF03

**Returns:** acknowledge (byte), value (word)

- **acknowledge:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- **status:**
  - **Non-zero:** If the operation successful.
  - **0:** if the attempt failed.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0xFF, 0x03
// This will mounts the file system

// The response will be 0x06 followed by a non-zero number (such as 0x00, 0x01) if the
// command is successful, or zero (0x00, 0x00) if unsuccessful.
```

#### See also

The **File Unmount** command, to unmount the file system.

### 5.6.33. File Unmount

The **File Unmount** command releases any buffers for FAT16 and unmount the Disk File System. This function is to be called to close the FAT16 file system.

**Library Function:** `file_Unmount`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0xFF02</code>

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0xFF, 0x02  
  
// This will unmounts the file system  
  
// The response will be 0x06 if the command is successful
```

#### See also

The **File Mount** command, to initially mount the file system.

### 5.6.34. Play WAV File

Open the wav file, decode the header to set the appropriate wave player parameters and set off the playing of the file as a background process. See "Sound Control Commands" for additional play control functions.

#### Note

Wave files should be mono to keep data bandwidth to a minimum, and should be 'canonic' format. Lots of windows formats will not work. Use something like 'Cool Edit' or similar to tailor the wav files to a suitable format. The ideal sample rate of the WAV file is 16Khz-Mono and the maximum should be 22Khz. Any higher sample rate will extremely slow down the system. Sample rates below 12Khz, the PWM will cause aliasing (filtering is a bare minimum). If you only hear noise or random snippets of sound remember, the Speed and Capacity of the memory card are important, most 2Gb cards should be fine, 64mb cards fail all but the most-simple sounds.

**Library Function:** file\_PlayWAV

**Syntax:** cmd (word), filename.WAV (string)

Commands	Description
cmd	0x000B
filename.WAV	Name of the wav file to be opened and played. Filename must be 8.3 format. char0, char1, char2, ..., charN, NULL

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: If there are no errors, returns number of blocks to play (1 to 32767).

If errors occurred, the following is returned

6 : can't play this rate

5 : no data chunk found in first sector

4 : no format data

3 : no wave chunk signature

2 : bad wave file format

1 : file not found

## Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), char0, char1, char2, char3, char4, char5, char6, char7, char8,
// char9, char10

0x00, 0x0B, 0x43, 0x48, 0x49, 0x4D, 0x45, 0x53, 0x2E, 0x57, 0x41, 0x56, 0x00

// This will open the "CHIMES.WAV" file (0x43, 0x48, 0x49, 0x4D, 0x45, 0x53, 0x2E, 0x57,
// 0x41, 0x56) and play it, the string is appended with a Null (0x00)

// The response will be 0x06, 0x00, 0x1E assuming the command was successful, and it
// returned there are 30 blocks (0x00, 0x1E) of the WAV file to play.
```

### See also

The [File Mount](#) command, to initially mount the file system.  
All [Sound Control Commands](#)



### 5.6.35. To Load String for 4XE/4FN File

Load the Memory space with the string to be used by the **File Call Function**, **File Run** and **File Execute** commands as an argument.

The Memory Space for the **Read String for 4XE/4FN File** command or **Load String for 4XE/4FN File** command is pre-allocated memory, 512 bytes in size. It doesn't need to be released.

**Library Function:** `writeString`

**Syntax:** `cmd (word), handle (word), string (string)`

Commands	Description
cmd	0x0021
handle	A string pointer to the memory area where the string is to be loaded. The first string would start with handle = 0, next one would use the handle = string pointer returned from the execution of the Write string earlier.
string	A Null terminated string which is to be passed to the Child (4XE or 4FN) program.

**Returns:** acknowledge (byte), pointer (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *pointer*: Returns a pointer to the memory allocation where the string has been loaded.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), char0, char1, char2, char3, char4, NULL
0x00, 0x21, 0x11, 0xA9, 0x48, 0x65, 0x6C, 0x6C, 0x6F, 0x00

// This will Load the String "Hello" (0x48, 0x65, 0x6C, 0x6C, 0x6F) which has been NULL
// terminated (0x00) into the designated string pointer location 4521 (0x11, 0xA9)
// The response will be 0x06, 0x01, 0x0E assuming the command was successful and the
// pointer where the string was loaded was 4522 (0x11, 0xAA)
```

#### See also

The **File Mount** command, to initially mount the file system.  
**File Call Function**, **File Run** and **File Execute** commands to invoke a loaded function.  
**Read String for 4XE/4FN File** to read the string from the invoked function

### 5.6.36. Read String for 4XE/4FN File

Allocate and read the string from the Memory space returned by [File Call Function](#), [File Run](#) and [File Execute](#) functions as an argument.

The Memory Space for the **Read String for 4XE/4FN File** and [Load String for 4XE/4FN File](#) commands is pre-allocated memory, 512 bytes in size. It doesn't need to be cleared.

#### Note

You have to write to a string first using the [Load String for 4XE/4FN File](#) command to get a handle, you pass that to the program, the handle will be used by the child program to write to what it intends to return, then you use the same handle to read what is being returned by the child program.

If you only have one string then you can write anything to it, if you have 2 and the first one is written to by the child program then the initial write must be longer than the maximum returned string.

See the examples listed under the [File Run](#), [File Execute](#) and [File Call Functions](#) commands.

**Library Function:** `readString`

**Syntax:** `cmd (word), handle (word)`

Commands	Description
cmd	0x0022
handle	A string pointer to the memory area where the string is returned from the child (4FN or 4XE) program. The first string would start with handle = 0, next one would use the handle = string pointer returned from the execution of the Write string earlier.

**Returns:** acknowledge (byte), string (string)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *string*: A string without NULL terminator.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0x00, 0x22, 0x01, 0x0E

// This will read the string from the memory space with the handle 270 (0x01, 0x0E), and
// return the string from that memory space, without the NULL terminator.

// The response will be 0x06, 0x49, 0x20, 0x68, 0x61, 0x76, 0x65, 0x20, 0x72, 0x65, 0x74,
// 0x75, 0x72, 0x6E, 0x65, 0x64 assuming the command was successful and the string that was
// returned was "I have returned" (0x49, 0x20, 0x68, 0x61, 0x76, 0x65, 0x20, 0x72, 0x65,
0x74,
// 0x75, 0x72, 0x6E, 0x65, 0x64)
```

**See also**

The **File Mount** command, to initially mount the file system.


**File Call Function**, **File Run** and **File Execute** commands to invoke a loaded function.

**Load String for 4XE/4FN File** to load the string into the invoked function.

## 5.7. Sound Control Commands

The following is a summary of the commands available to be used for Sound Control:

- Sound Volume
- Sound Pitch
- Sound Buffer
- Sound Stop
- Sound Pause
- Sound Continue
- Sound Playing

 **Note**

All these commands are used in conjunction with **Play WAV file** command.

### 5.7.1. Sound Volume

Set the sound playback volume. Var must be in the range from 8 (min volume) to 127 (max volume). If var is less than 8, volume is set to 8, and if var > 127 it is set to 127.

**Library Function:** `snd_Volume`

**Syntax:** `cmd (word), level (word)`

Commands	Description
<code>cmd</code>	0xFF00
<code>level</code>	Sound playback volume level. 0 - 127

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), level(MSB), level(LSB)

0xFF, 0x00, 0x00, 0x64

// This will set the volume to be 100 (0x00, 0x64) out of the possible 127

// The response will be 0x06 if the command was successful
```

#### See also

The [File Mount](#) command, to initially mount the file system.  
The [Play WAV File](#) command, to open the WAV file to be played.

## 5.7.2. Sound Pitch

Sets the samples playback rate to a different frequency. Setting pitch to zero restores the original sample rate.

**Library Function:** `snd_Pitch`

**Syntax:** `cmd (word), pitch (word)`

Commands	Description
<code>cmd</code>	0xFEFF
<code>pitch</code>	Sample's playback rate. Minimum is 4KHz. Range is, 4000 – 65535.

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns sample's original sample rate.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), pitch(MSB), pitch(LSB)

0xFE, 0xFF, 0x50, 0x14

// This will set the pitch to be 20500 (0x40, 0x14) out of the possible 65535

// The response will be 0x06 if the command was successful
```

#### See also

- The [File Mount](#) command, to initially mount the file system.
- [Play WAV File](#) command, to open the WAV file to be played.

### 5.7.3. Sound Buffer

Specify the memory chunk size for the wavfile buffer, default size 1024 bytes. Depending on the sample size, memory constraints, and the sample quality, it may be beneficial to change the buffer size from the default size of 1024 bytes.

This command is for control of a wav buffer, see the [Play WAV File](#) command

**Library Function:** `snd_BufSize`

**Syntax:** `cmd (word), buffersize (word)`

Commands	Description
cmd	0xFEFE
buffersize	Specifies the buffer size. 0 = 1024 bytes (default) 1 = 2048 bytes 2 = 4096 bytes

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), buffersize(MSB), buffersize(LSB)

0xFE, 0xFE, 0x00, 0x01

// This will set the sound buffer size to be 2048 bytes (0x00, 0x01)

// The response will be 0x06 if the command was successful
```

#### See also

The [File Mount](#) command, to initially mount the file system.  
[Play WAV File](#) command, to open the WAV file to be played.

## 5.7.4. Sound Stop

Stop any sound that is currently playing, releasing buffers and closing any open WAV file.

This command is for control of a wav buffer, see the [Play WAV File](#) command

**Library Function:** `snd_Stop`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFEFD

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0xFE, 0xFD

// This will stop any currently playing sound

// The response will be 0x06 if the command was successful
```

#### See also

The [File Mount](#) command, to initially mount the file system.  
[Play WAV File](#) command, to open the WAV file to be played.



## 5.7.5. Sound Pause

Pause any sound that is currently playing.

This command is for control of a wav buffer, see the [Play WAV File](#) command

**Library Function:** `snd_Pause`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFEFC

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0xFE, 0xFC

// This will pause any currently playing sound

// The response will be 0x06 if the command was successful
```

#### See also

The [File Mount](#) command, to initially mount the file system.  
[Play WAV File](#) command, to open the WAV file to be played.

## 5.7.6. Sound Continue

Resume any sound that is currently paused by the [Sound Pause](#) command.

This command is for control of a wav buffer, see the [Play WAV File](#) command.

**Library Function:** `snd_Continue`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFEFB

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0xFE, 0xFB  
  
// This will continue any currently paused sound  
  
// The response will be 0x06 if the command was successful
```

#### See also

The [File Mount](#) command, to initially mount the file system.  
[Play WAV File](#) command, to open the WAV file to be played.

### 5.7.7. Sound Playing

Returns 0 if sound has finished playing, else return number of 512 byte blocks to go.

This command is for control of a wav buffer, see the [Play WAV File](#) command

**Library Function:** `snd_Playing`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	0xFEFA

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Number of 512 byte blocks to go.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0xFE, 0xFA

// This command will return the number of 512 byte blocks remaining on the currently
// playing sound file.
// The response will be 0x06, 0x26, 0x2A assuming the command was successful and the
// currently playing WAV file
// had 9770 blocks (0x26, 0x2A) of 512 bytes remaining to play.
```

#### See also


The [File Mount](#) command, to initially mount the file system.  
[Play WAV File](#) command, to open the WAV file to be played.

---

## 5.8. Touch Screen Commands

The following is a summary of the commands available to be used for Touch Screens:

- Touch Detect Region
- Touch Set
- Touch Get

 **Note**

All these commands do not apply for the uVGA-II or uVGA-III.

### 5.8.1. Touch Detect Region

Specifies a new touch detect region on the screen. This setting will filter out any touch activity outside the region and only touch activity within that region will be reported by the status poll **Touch Get** command.

**Library Function:** touch\_DetectRegion

**Syntax:** cmd (word), x1 (word), y1 (word), x2 (word), y2 (word)

Commands	Description
cmd	0xFF39
x1	Specifies the horizontal position of the top left corner of the region.
y1	Specifies the vertical position of the top left corner of the region.
x2	Specifies the horizontal position of the bottom right corner of the region.
y2	Specifies the vertical position of the bottom right corner of the region.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), line(MSB), line(LSB), column(MSB), column(LSB)

0xFF, 0x39, 0x00, 0x00, 0x00, 0x00, 0x00, 0x64, 0x00, 0x64

// This will set a touch region between X1=0 (0x00, 0x00), Y1=0 (0x00, 0x00) and
// X2=100 (0x00, 0x64), Y2=100 (0x00, 0x64)

// The response will be 0x06 if the command was successful
```

## 5.8.2. Touch Set

Sets various Sets various Touch Screen related parameters.

**Library Function:** touch\_Set

**Syntax:** cmd (word), mode (word)

Commands	Description
cmd	0xFF38
mode	<p><b>mode = 0:</b> Enables and initialises Touch Screen hardware.</p> <p><b>mode = 1:</b> Disables the Touch Screen. <b>Note:</b> Touch Screen task runs in the background and disabling it when not in use will free up extra resources for 4DGL CPU cycles.</p> <p><b>mode = 2:</b> This will reset the current active region to default which is the full screen area.</p>

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)

0xFF, 0x38, 0x00, 0x00
// This will enable and initialise the touch screen hardware, Mode = 0 (0x00, 0x00)

// The response will be 0x06 assuming the command was successful
```

### 5.8.3. Touch Get

Returns various Touch Screen parameters to caller, based on the touch detect region on the screen set by the **Touch Detect Region** command.

**Library Function:** touch\_Get

**Syntax:** cmd (word), mode (word)

Commands	Description
cmd	0xFF37
mode	<b>mode = 0</b> : Get Status. <b>mode = 1</b> : Get X coordinates. <b>mode = 2</b> : Get Y coordinates.

**Returns:** acknowledge (byte), value (word) - *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response. - *value*:

**mode = 0:**

Returns the various states of the touch screen.

0 = INVALID/NOTOUCH

1 = PRESS

2 = RELEASE

3 = MOVING

**mode = 1:**

Returns the X coordinates of the touch reported by mode 0.

**mode = 2:**

Returns the Y coordinates of the touch reported by mode 0.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB)

0xFF, 0x38, 0x00, 0x00

// This will enable and initialise the touch screen hardware, Mode = 0 (0x00, 0x00)

// The response will be 0x06 assuming the command was successful
```

**See also**


The **File Mount** command, to initially mount the file system.  
**Play WAV File** command, to open the WAV file to be played.

---

## 5.9. Image Control Commands

The following is a summary of the commands available to be used for Image Control:

- Image Set Position
- Image Enable
- Image Disable
- Image Darken
- Image Lighten
- Set Image Parameters
- Get Image Parameters
- Show Image
- Set Image Attributes
- Clear Image Attributes
- Image Touched
- Blit Com to Display

 **Note**

All these commands are used in conjunction with the file [Load Image Control](#) command.



### 5.9.1. Image Set Position

This function requires that an image control has been created with the **Load Image Control** command.

Sets the position where the image will next be displayed. Returns TRUE if index was ok and function was successful. (The return value is usually ignored).

You may turn off an image so when the **Show Image** command is called, the image will not be shown.

**Library Function:** `img_SetPosition`

**Syntax:** `cmd (word), handle (word), index (word), xpos (word), ypos (word)`

Commands	Description
cmd	0xFF4E
handle	Pointer to the Image List.
index	Index of the images in the list.
xpos	Top left horizontal screen position where image is to be displayed.
ypos	Top left vertical screen position where image is to be displayed.

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), xpos(MSB),
// xpos(LSB), ypos(MSB), ypos(LSB)

0xFF, 0x4E, 0x11, 0xB3, 0x00, 0x01, 0x00, 0x19, 0x00, 0x0A

// This will set the position of the top left corner of the image to be displayed at
// X=25 (0x00, 0x19), Y=10 (0x00, 0x0A), where the image has a file handle of 4531
// (0x11, 0xB3) and the index of the required image in that file is 1 (0x00, 0x01).

// The response will be 0x06, 0x00, 0x01 assuming the command was successful (0x06) and
// the operation was successful (0x00, 0x01)
```

## 5.9.2. Image Enable

This command requires that an image control has been created with the [Load Image Control](#) command.

Enables a selected image in the image list. Returns TRUE if index was ok and function was successful. This is the default state so when the [Show Image](#) command is called, all the images in the list will be shown. To enable all of the images in the list at the same time set index to -1. To enable a selected image, use the image index number.

**Library Function:** `img_Enable`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
cmd	0xFF4D
handle	Pointer to the Image List.
index	Index of the images in the list.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB)

0xFF, 0x4D, 0x11, 0xB3, 0x00, 0x01

// This will enable the image with index = 1 from the image which has a handle of 4531
// (0x11, 0xB3)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful (0x06) and
// the operation was successful (0x00, 0x01)
```

### 5.9.3. Image Disable

This function requires that an image control has been created with the [Load Image Control](#) command.

Disables an image in the image list. Returns TRUE if index was ok and function was successful. Use this function to turn off an image so that when the [Show Image](#) command is called the selected image in the list will not be shown. To disable all of the images in the list at the same time set index to **-1**.

**Library Function:** `img_Disable`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
cmd	0xFF4C
handle	Pointer to the Image List.
index	Index of the images in the list.

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB)

0xFF, 0x4C, 0x11, 0xB3, 0x00, 0x02

// This will disable the image with index = 2 from the image which has a handle of 4531
// (0x11, 0xB3)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful (0x06) and
// the operation was successful (0x00, 0x01)
```

### 5.9.4. Image Darken

This function requires that an image control has been created with the [Load Image Control](#) command.

Darken an image in the image list. Returns TRUE if index was ok and function was successful. Use this function to darken an image so that when the [Show Image](#) command is called the control will take effect. To darken all of the images in the list at the same time set index to **-1**.

#### Note

This feature will take effect one time only and when the [Show Image](#) command is called again the darkened image will revert back to normal.

**Library Function:** `img_Darken`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
<code>cmd</code>	0xFF4B
<code>handle</code>	Pointer to the Image List.
<code>index</code>	Index of the images in the list.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB)

0xFF, 0x4B, 0x11, 0xB3, 0xFF, 0xFF

// This will darken all of the images in the list that will next be shown by using the
// index = -1 (0xFF, 0xFF), using the image file which has a handle of 4531 (0x11, 0xB3)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful (0x06) and
// the operation was successful (0x00, 0x01)
```

### 5.9.5. Image Lighten

This function requires that an image control has been created with the [Load Image Control](#) command.

Lighten an image in the image list. Returns TRUE if index was ok and function was successful. Use this function to lighten an image so that when the [Show Image](#) command is called the control will take effect. To lighten all of the images in the list at the same time set index to **-1**.

#### Note

This feature will take effect one time only and when the [Show Image](#) command is called again the lightened image will revert back to normal.

**Library Function:** `img_Lighten`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
cmd	0xFF4A
handle	Pointer to the Image List.
index	Index of the images in the list.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB)

0xFF, 0x4A, 0x11, 0xB3, 0x00, 0x01

// This will lighten the images in the list that has the index = 1 (0x00, 0x01),
// using the image file which has a handle of 4531 (0x11, 0xB3)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful (0x06) and
// the operation was successful (0x00, 0x01)
```

## 5.9.6. Set Image Parameters

This function requires that an image control has been created with the [Load Image Control](#) command.

Set image parameters in an image entry.

### Note

The [Show Image](#) command will now show an error box for out of range video frames. Also, if frame is set to -1, just a rectangle will be drawn in background colour to blank an image. It applies to PmmC R29 or above.

**Library Function:** `img_SetWord`

**Syntax:** `cmd (word), handle (word), index (word), offset (word), value (word)`

Commands	Description
cmd	0xFF49
handle	Pointer to the Image List.
index	Index of the images in the list.
offset	Offset of the required word in the image entry.  2 - IMAGE_XPOS // WORD image location X 3 - IMAGE_YPOS // WORD image location Y 6 - IMAGE_FLAGS // WORD image flags 7 - IMAGE_DELAY // WORD inter frame delay 9 - IMAGE_INDEX // WORD current frame  <b>Note:</b> Not all Constants are listed as some are Read Only.
value	The word to be written to the entry.

**Returns:** acknowledge (byte), status (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

**Examples**

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), offset(MSB),
// offset(LSB), value(MSB), value(LSB)

0xFF, 0x49, 0x0D, 0xE4, 0x00, 0x01, 0x00, 0x04, 0x00, 0x64

// This will set the IMAGE_WIDTH parameter (0x00, 0x04) of the image with a handle of
// 3556 (0x0D, 0xE4) and image index of 1 (0x00, 0x01) to have the value of 100 (0x00, 0x64)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful (0x06) and
// the operation was successful (0x00, 0x01)
```

### 5.9.7. Get Image Parameters

This function requires that an image control has been created with the [Load Image Control](#) command.

Returns the image parameters in an image entry.

**Library Function:** `img_GetWord`

**Syntax:** `cmd (word), handle (word), index (word), offset (word)`

Commands	Description
<code>cmd</code>	0xFF48
<code>handle</code>	Pointer to the Image List.
<code>index</code>	Index of the images in the list.
<code>offset</code>	Offset of the required word in the image entry.  2 - IMAGE_XPOS // WORD image location X 3 - IMAGE_YPOS // WORD image location Y 4 - IMAGE_WIDTH // WORD image width 5 - IMAGE_HEIGHT // WORD image height 6 - IMAGE_FLAGS // WORD image flags 7 - IMAGE_DELAY // WORD inter frame delay 8 - IMAGE_FRAMES // WORD number of frames 9 - IMAGE_INDEX // WORD current frame

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: The word to be written to the entry.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), offset(MSB),
// offset(LSB)

0xFF, 0x48, 0x0D, 0xE4, 0x00, 0x06, 0x00, 0x05

// This will get the current IMAGE_HEIGHT (0x00, 0x05) value from the image, which has
// a handle of 3556 (0x0D, 0xE4), and index of 6 (0x00, 0x05)

// The response will be 0x06, 0x00, 0x49 assuming the command was successful and
// the Image Height was reported to be 73 (0x00, 0x49).
```



### 5.9.8. Show Image

This function requires that an image control has been created with the [Load Image Control](#) command.

Enable the displaying of the image entry in the image control.

Returns a non-zero value if successful but return value is usually ignored.

**Library Function:** `img_Show`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
<code>cmd</code>	0xFF47
<code>handle</code>	Pointer to the Image List.
<code>index</code>	Index of the images in the list.

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*:
  - **0**: if the attempt failed.
  - **Non 0**: If the operation was successful.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB)

0xFF, 0x47, 0x0D, 0xE4, 0x00, 0x01

// This will show the image which has a handle of 3556 (0x0D, 0xE4) and image index of
// 1 (0x00, 0x01)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful and
// the image show operation was successful (return may be any non-zero value) (0x00, 0x01)
```

### 5.9.9. Set Image Attributes

This command SETS one or more bits in the IMAGE\_FLAGS field of an image control entry. "value" refers to various bits in the image control entry (see image attribute flags above).

A '1' bit in the "value" field SETS the respective bit in the IMAGE\_FLAGS field of the image control entry.

#### Image Attribute Flags

L_ENABLED	0x8000	bit 15, set for image enabled
L_DARKEN	0x4000	bit 14, display dimmed
L_LIGHTEN	0x2000	bit 13, display bright
L_Y_LOCK	0x0800	bit 11, stop Y movement
L_X_LOCK	0x0400	bit 10, stop X movement
L_TOPMOST	0x0200	bit 9, draw on top of other images next update
L_STAYONTOP	0x0100	bit 8, draw on top of other images always
L_TOUCH_DISABLE	0x0020	bit 5, set to disable touch for this image, default=1 for movie, default=0 for image

**Library Function:** `img_SetAttributes`

**Syntax:** `cmd (word), handle (word), index (word), value (word)`

Commands	Description
cmd	0xFF46
handle	Pointer to the Image List.
index	Index of the images in the list.
value	Refer to the Image Attribute Flags in the description below.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*: TRUE or FALSE

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), value(MSB),
// value(LSB)

0xFF, 0x46, 0x11, 0xB3, 0x00, 0x01, 0x40, 0x00

// This will set the image with handle=4531 (0x11, 0xB3) with index=1 (0x00, 0x01)
// that is next shown with the "Show Image" command to be Darker (0x40, 0x00), the same
// as using the "Image Darken" command.

// The response will be 0x00, 0x00, 0x01 assuming the command was successful and
// the image attribute was successfully set (0x00, 0x01)
```

### 5.9.10. Clear Image Attributes

Clear various Image Attribute Flags in an image control entry. (see image attribute flags below)

Image Attribute Flags may be combined by adding the hex of two or more flags together, or with binary addition.

This function requires that an image control has been created with the **Load Image Control** command. Returns TRUE if index was ok and function was successful. (the return value is usually ignored).

#### Image Attributes Flags

L_ENABLED	0x8000	bit 15, set for image enabled
L_DARKEN	0x4000	bit 14, display dimmed
L_LIGHTEN	0x2000	bit 13, display bright
L_Y_LOCK	0x0800	bit 11, stop Y movement
L_X_LOCK	0x0400	bit 10, stop X movement
L_TOPMOST	0x0200	bit 9, draw on top of other images next update
L_STAYONTOP	0x0100	bit 8, draw on top of other images always
L_TOUCH_DISABLE	0x0020	bit 5, set to disable touch for this image, default=1 for movie, default=0 for image

**Library Function:** `img_ClearAttributes`

**Syntax:** `cmd (word), handle (word), index (word), value (word)`

Commands	Description
cmd	0xFF45
handle	Pointer to the Image List.
index	Index of the images in the list.
value	A '1' bit indicates that a bit should be set and a '0' bit indicates that a bit is not altered. <b>Note:</b> if index is set to -1, the attribute is altered in ALL of the entries in the image list. Refer to the Image Attribute Flags in the description below.

**Returns:** `acknowledge (byte), status (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **1**: If the operation successful.
  - **0**: if the attempt failed.

**Examples**

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), value(MSB),
// value(LSB)

0xFF, 0x45, 0x11, 0xB3, 0x00, 0x21, 0x80, 0x00

// This will clear the I_ENABLED (0x80, 0x00) attribute from the image with
// handle = 4531 (0x11, 0xB3) and index = 33 (0x00, 0x21)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful (0x06) and
// the attribute was successfully cleared (0x00, 0x01)
```

### 5.9.11. Image Touched

This command requires that an image control has been created with the [Load Image Control](#) command.

Returns index if image touched or returns -1 image not touched. If index is passed as -1 the command tests all images and returns -1 if image not touched or returns index.

**Library Function:** `img_Touched`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
<code>cmd</code>	0xFF44
<code>handle</code>	Pointer to the Image List.
<code>index</code>	Index of the images in the list.

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns image index if image touched. -1 if image not touched.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB)

0xFF, 0x44, 0x0D, 0xE4, 0x00, 0x05

// This will return if an image with handle 3556 (0x44, 0x0D) and index 5 (0x00, 0x05)
// has been touch.

// The response will be 0x06, 0x00, 0x05 assuming the command was successful and
// the image touched had the index of 5 (0x00, 0x05).
```

### 5.9.12. Blit Com to Display

This command will BLIT (Block Image Transfer) 16 bit pixel data from the Com port on to the screen.

**Library Function:** `blitComtoDisplay`

**Syntax:** `cmd (word), x (word), y (word), width (word), height (word), data (data)`

Commands	Description
cmd	0x0023
x, y	Specifies the horizontal and vertical position of the top-left corner of the image to be displayed.
width	width of the image to be displayed.
height	height of the image to be displayed.
data	pixel1...pixelN 16 bit pixel data to be plotted on the Display screen. 16 bit = 5bit Red, 6bit Green, 5bit Blue.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), width(MSB), width(LSB),
// height(MSB), height(LSB), pixel1, pixel2, ..., pixelN

0x00, 0x23, 0x00, 0x00, 0x00, 0x00, 0x01, 0xE0, 0x00, 0xBC, 0x31, 0x81, 0x63... etc

// This will displaying an image at X=0 (0x00, 0x00), Y=0 (0x00, 0x00) with
// Width = 480 (0x01, 0xE0) and height = 188 (0x00, 0xBC)

// The response will be 0x06 assuming the command was successful
```

## 5.10. Widget Control Commands

The following is a summary of the commands available to be used for Image Control:

- Create Widget Handle
- Add Widget to Handle
- Delete Widget from Handle
- Reallocate Widget Handle
- Set Widget Word
- Get Widget Word
- Set Widget Position
- Enable Widget
- Disable Widget
- Set Widget Attributes
- Clear Widget Attributes
- Widget Touched
- Initialize Widget Gradient RAM
- Call Inherent Function from Flash

### 5.10.1. Create Widget Handle

Each internal and inherent widget requires a RAM allocation with common properties for properties like X and Y position, width and height etc.

This command CREATES a widget control capable of holding count elements/RAM allocation and returns a "handle" for the control.

**Library Function:** `widget_Create`

**Syntax:** `cmd (word), count (word)`

Commands	Description
<code>cmd</code>	0xFEFE
<code>count</code>	The number of elements in the widget control.

**Returns:** `acknowledge (byte), handle (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *handle*: Returns a handle (pointer to the memory allocation) to the widget control that has been created, else returns NULL if function fails.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), count(MSB), count(LSB)

0xFE, 0xBE, 0x00, 0x03

// This will start the widget handle control with three elements.

// The response will be 0x06, 0x0D 0x6A assuming the command is successful and the handle
// that is returned is 3434 (0x0D, 0x6A)
```



### 5.10.2. Add Widget to Handle

Add a widget ram entry "**widget**" into index "**index**" of the widget control referenced by "**hdl**".

#### Note

An inherent or internal widget requires a RAM allocation for common widget properties. This is the widget ram entry discussed above.

**Library Function:** `widget_Add`

**Syntax:** `cmd (word), handle (word), index (word), widget (word)`

Commands	Description
<code>cmd</code>	0xFEED
<code>handle</code>	Handle of the widget control.
<code>index</code>	Index of element in the widget control.
<code>widget</code>	Pointer to RAM allocation of the entry widget.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), widget(MSB),
// widget(LSB)

0xFE, 0xBD, 0x11, 0xB3, 0x00, 0x01, 0x7F, 0x1B

// This will add the widget entry with RAM allocation at 0x7F1B to index=1 (0x00, 0x01)
// of the widget control handle=4531 (0x11, 0xB3).

// The response will be 0x06 assuming the command was successful
```

#### See also

The [Create Widget Handle](#) to create the image control handle. The Blit Word Array to RAM to prepare RAM allocation.

### 5.10.3. Delete Widget from Handle

Delete widget ram entry "**index**" from the widget control referenced by "**handle**".

**Library Function:** `widget_Delete`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
<code>cmd</code>	0xFEBC
<code>handle</code>	Handle of the widget control.
<code>index</code>	Index of element in the widget control.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB)

0xFE, 0xBC, 0x11, 0xB3, 0x00, 0x01

// This will delete the widget entry with index=1 (0x00, 0x01) from the widget
// control handle=4531 (0x11, 0xB3).

// The response will be 0x06 assuming the command was successful
```

#### See also

The [Create Widget Handle](#) to create the image control handle. The [Add Widget to Handle](#) to add a widget to image control handle

### 5.10.4. Reallocate Widget Handle

Resizes a widget control "**handle**" to contain **n** entries, allowing it to be expanded or condensed. Doing this unnecessarily can lead to RAM fragmentation. It is much better to allocate widget controls once with the desired number of entries.

**Library Function:** `widget_Realloc`

**Syntax:** `cmd (word), handle (word), n (word)`

Commands	Description
<code>cmd</code>	0xFEB9
<code>handle</code>	Handle of the widget control.
<code>n</code>	New number of entries.

**Returns:** `acknowledge (byte), handle (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *handle*: Returns a handle (pointer to the memory allocation) to the widget control that has been created, else returns NULL if function fails.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), n(MSB), n(LSB)

0xFE, 0xB9, 0x11, 0xB3, 0x00, 0x05

// This will reallocate the widget control with handle=4531 (0x11, 0xB3) with a new size of
// entries=5 (0x00, 0x05).

// The response will be 0x00, 0x11, 0xB4 assuming the command was successful, and a new
// handle
// was created at (0x11, 0xB4)
```

#### See also

The [Create Widget Handle](#) to create the image control handle.

### 5.10.5. Set Widget Word

Set specified word in a widget entry. This function requires that a widget control has been created with the `widget_Create()` function.

WIDGET_XPOS	0	RAM xpos
WIDGET_YPOS	1	RAM ypos
WIDGET_WIDTH	2	RAM width, needed for touch
WIDGET_HEIGHT	3	RAM height, needed for touch
WIDGET_XOTHER	4	RAM xpos 'other' (Non Flash widgets only)
WIDGET_LO_WORD	4	Flash offset low word (Flash widgets only)
WIDGET_YOTHER	5	RAM ypos 'other' (Non Flash widgets only)
WIDGET_HI_WORD	5	Flash offset high word (Flash widgets only)
WIDGET_FLAGS	6	RAM flags
WIDGET_TAG	7	RAM tag (user or FORM#)
WIDGET_TAG2	8	RAM tag2 (user or object << 8)
WIDGET_VAL1	9	RAM current value
WIDGET_DELAY	10	Inter frame delay (Flash widgets only)
WIDGET_FRAMES	11	Number of frames (Flash widgets only)

**Library Function:** `widget_SetWord`

**Syntax:** `cmd (word), handle (word), index (word), offset (word), value (word)`

Commands	Description
cmd	0xFEB4
handle	Handle of the widget control.
index	Index of element in the widget control.
offset	Offset of the required word in the widget entry.
value	The word to be written to the entry.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

## Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), offset(MSB),
// offset (LSB), value(MSB), value(LSB)

0xFE, 0xB4, 0x11, 0xB3, 0x00, 0x01, 0x00, 0x00, 0x00, 0x0F

// This will set the value=15 (0x00, 0x0F) at the offset Widget X position = 0 (0x00, 0x00)
// of the widget having the index=1 (0x00, 0x01) under the handle=4531 (0x11, 0xB3).

// The response will be 0x06 assuming the command was successful
```

### See also

The [Create Widget Handle](#) to create the image control handle.

### 5.10.6. Get Widget Word

Returns specified word from a widget entry. Refer to widget control entry offsets. This function requires that a widget control has been created with the `widget_Create()` function.

WIDGET_XPOS	0	RAM xpos
WIDGET_YPOS	1	RAM ypos
WIDGET_WIDTH	2	RAM width, needed for touch
WIDGET_HEIGHT	3	RAM height, needed for touch
WIDGET_XOTHER	4	RAM xpos 'other' (Non Flash widgets only)
WIDGET_LO_WORD	4	Flash offset low word (Flash widgets only)
WIDGET_YOTHER	5	RAM ypos 'other' (Non Flash widgets only)
WIDGET_HI_WORD	5	Flash offset high word (Flash widgets only)
WIDGET_FLAGS	6	RAM flags
WIDGET_TAG	7	RAM tag (user or FORM#)
WIDGET_TAG2	8	RAM tag2 (user or object << 8)
WIDGET_VAL1	9	RAM current value
WIDGET_DELAY	10	Inter frame delay (Flash widgets only)
WIDGET_FRAMES	11	Number of frames (Flash widgets only)

**Library Function:** `widget_GetWord`

**Syntax:** `cmd (word), handle (word), index (word), offset (word)`

Commands	Description
cmd	0xFEB8
handle	Handle of the widget control.
index	Index if element in the widget control.
offset	Offset of the required word in the widget entry.

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns the value of the specified word.

## Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), value(MSB),
// value(LSB)

0xFE, 0xB8, 0x11, 0xB3, 0x00, 0x01, 0x00, 0x00

// This will query the widget with index=1 (0x00, 0x01) under the handle=4531 (0x11, 0xB3),
// for its word at the offset Widget X position = 0 (0x00, 0x00).

// The response will be 0x06, 0x00, 0x01 assuming the command was successful,
// and the returned word was 1 (0x00, 0x01)
```

### See also

The [Create Widget Handle](#) to create the image control handle.

### 5.10.7. Set Widget Position

Set the position of an entry in the widget control. This function requires that a widget control has been created with the `widget_Create()` function.

**Library Function:** `widget_SetPosition`

**Syntax:** `cmd (word), handle (word), index (word), xpos (word), ypos (word)`

Commands	Description
<code>cmd</code>	0xFEB7
<code>handle</code>	Pointer to the Image List.
<code>index</code>	Index of the images in the list.
<code>xpos</code>	x-coordinate of position.
<code>ypos</code>	y-coordinate of position.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), xpos(MSB),
// xpos(LSB), ypos(MSB), ypos(LSB)

0xFE, 0xB7, 0x11, 0xB3, 0x00, 0x01, 0x00, 0x0F, 0x00, 0x0F

// This will set the widget with handle=4531 (0x11, 0xB3) and index=1 (0x00, 0x01) to a
// new position (15, 15)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful
```

#### See also

The [Create Widget Handle](#) to create the image control handle.



### 5.10.8. Enable Widget

Enable an item in a widget control. This function requires that a widget control has been created with the `widget_Create()` function.

**Library Function:** `widget_Enable`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
<code>cmd</code>	0xFEB6
<code>handle</code>	Handle of the widget control.
<code>index</code>	Index of element in the widget control.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), value(MSB),
// value(LSB)

0xFE, 0xB6, 0x11, 0xB3, 0x00, 0x01

// This will enable the widget with handle=4531 (0x11, 0xB3) with index=1 (0x00, 0x01)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful.
```

#### See also

The [Create Widget Handle](#) to create the image control handle.

### 5.10.9. Disable Widget

Disable an item in a widget control. This function requires that a widget control has been created with the `widget_Create()` function.

**Library Function:** `widget_Disable`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
<code>cmd</code>	0xFEB5
<code>handle</code>	Handle of the widget control.
<code>index</code>	Index of element in the widget control.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), value(MSB),
// value(LSB)

0xFE, 0xB5, 0x11, 0xB3, 0x00, 0x01

// This will disable the widget with handle=4531 (0x11, 0xB3) with index=1 (0x00, 0x01)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful
```

#### See also

The [Create Widget Handle](#) to create the image control handle.

### 5.10.10. Set Widget Attributes

This function SETS one or more bits in the widget flags field of a widget control entry. "**value**" refers to various bits in the widget control entry (see widget attribute flags). A '1' bit in the "value" field SETS the respective bit in the widget flags field of the widget control entry.

Widget attribute flags to be used and maintained by widgets and touch processing:

WIDGET_F_TOUCH_ENABLE	0x8000	Set to disable touch for this image, (default=1 for movie, 0 for image)
WIDGET_F_INTERNAL	0x4000	Internal use only (force redraw on next write)
WIDGET_F_INITIALISED	0x2000	Flag when 'base gauge needle, etc.' is done
WIDGET_F_UNDRAW_ONLY	0x1000	Set if this is an input (Used only with the IDE)
WIDGET_F_INPUT	0x0800	set if this is a flash-based widget
WIDGET_F_FLASH	0x0400	set if this is a flash-based widget
WIDGET_F_RESERVED	0x03c0	bits 9-6 reserved

**Library Function:** `widget_SetAttributes`

**Syntax:** `cmd (word), handle (word), index (word), bits (word)`

Commands	Description
cmd	0xFEB3
handle	Handle of the widget control.
index	Index of element in the widget control.
bits	The bits to be set in widget flags.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), bits(MSB),
// bits(LSB)

0xFF, 0x46, 0x11, 0xB3, 0x00, 0x01, 0x40, 0x00

// This will set the image with handle=4531 (0x11, 0xB3) with index=1 (0x00, 0x01) that
// is next shown with the "Show Image" command to be Darker (0x40, 0x00), the same as using
// the "Image Darken" command.

// The response will be 0x00, 0x00, 0x01 assuming the command was successful, and the
// image attribute was successfully set (0x00, 0x01)
```

#### **See also**

The [Create Widget Handle](#) to create the image control handle.

### 5.10.11. Clear Widget Attributes

This function CLEARS one or more bits in the widget flags field of an image control entry. "**value**" refers to various bits in the widget control entry (see widget attribute flags). A '1' bit in the "value" field CLEARS the respective bit in the widget flags field of the image control entry.

Widget attribute flags to be used and maintained by widgets and touch processing:

WIDGET_F_TOUCH_ENABLE	0x8000	Set to disable touch for this image, (default=1 for movie, 0 for image)
WIDGET_F_INTERNAL	0x4000	Internal use only (force redraw on next write)
WIDGET_F_INITIALISED	0x2000	Flag when 'base gauge needle, etc.' is done
WIDGET_F_UNDRAW_ONLY	0x1000	Set if this is an input (Used only with the IDE)
WIDGET_F_INPUT	0x0800	set if this is a flash-based widget
WIDGET_F_FLASH	0x0400	set if this is a flash-based widget
WIDGET_F_RESERVED	0x03c0	bits 9-6 reserved

**Library Function:** `widget_ClearAttributes`

**Syntax:** `cmd (word), handle (word), index (word), bits (word)`

Commands	Description
cmd	0xFEB2
handle	Handle of the widget control.
index	Index if element in the widget control.
bits	The word to be written.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB), bits(MSB),
// bits(LSB)

0xFF, 0xB2, 0x11, 0xB3, 0x00, 0x01, 0x40, 0x00

// This will set the image with handle=4531 (0x11, 0xB3) with index=1 (0x00, 0x01)
// that is next shown with the "Show Image" command to be Darker (0x40, 0x00),
// the same as using the "Image Darken" command.

// The response will be 0x00, 0x00, 0x01 assuming the command was successful,
// and the image attribute was successfully set (0x00, 0x01
```

#### See also

The [Create Widget Handle](#) to create the image control handle.

### 5.10.12. Widget Touched

This function requires that a widget control has been created with the `widget_Create()` function.

Returns index of the widget touched or returns -1 if no widget was touched.

If index is passed as **-1** or **ALL** the function tests all widgets.

**Library Function:** `widget_Touched`

**Syntax:** `cmd (word), handle (word), index (word)`

Commands	Description
<code>cmd</code>	0xFEB1
<code>handle</code>	Handle of the widget control.
<code>index</code>	Index of element in the widget control.

**Returns:** `acknowledge` (byte), `value` (word)

- `acknowledge`: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- `value`: Index of the widget touched.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), index(MSB), index(LSB)  
  
0xFE, 0xB1, 0x11, 0xB3, 0xFF, 0xFF  
  
// This will query the widget control with handle=4531 (0x11, 0xB3) for any (0xFF, 0xFF)  
// widget in the handle that was touched.  
  
// The response will be 0x06, 0x00, 0x01 assuming the command was successful,  
// and the widget touched has an index of 1 (0x00, 0x01)
```

#### See also

The [Create Widget Handle](#) to create the image control handle.

### 5.10.13. Initialize Widget Gradient RAM

This function initializes the widget to use the SPE's allocated Gradient RAM.

**Library Function:** `widget_InitGradRAM`

**Syntax:** `cmd (word), widget(word)`

Commands	Description
<code>cmd</code>	0x002B
<code>widget</code>	Pointer to RAM allocation of the entry widget.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), widget(MSB), widget(LSB)

0x00, 0x2B, 0xFF, 0xFF

// This will query the widget control with handle=4531 (0x11, 0xB3) for any (0xFF, 0xFF)
// widget in the handle that was touched.

// At the time of writing, this is required for "Media" inherent widgets.

// This will set the widget with RAM allocation at ram to use the SPE gradient RAM.
```

#### See also

The **blitWordArrayToRAM** function to transfer the parameters and allocate RAM

### 5.10.14. Call Inherent Function from Flash

This function requires that an image file control has been created with the `file_LoadImageControl(...)` function under **Mode 3**.

This function loads and calls the Function found at **index** in the Flash GCI filesystem identified by **hndl**. This sets a new **value** to the function and performs its designed tasks based on common function parameters (**funcRam**) and function specific parameters (**funcDef**).

The **argCount** constant is copied into a RAM array and passed to the Function.

The parameter **argStringMap** is a bit array of the indexes containing single and multiple strings that are offset by 8. e.g. 0x0100 means parameter 8 is a single string, 0x0002 means parameter 9 is an array of strings with parameter 8 containing the count.

Any function called this way is loaded into RAM and then left there. RAM is managed using a Least Recently Used (LRU) mechanism wherein the least recently used entry is freed if there is not enough Heap to load the desired function.

**Library Function:** `img_FunctionCall`

**Syntax:** `cmd (word), hndl (word), index (word), value (word), funcRam (word), funcDef (word), argCount(word), argStringMap(word)`

Commands	Description
cmd	0xFE6F
hndl	Pointer to the image file control.
index	Index of the entry in the handle.
value	Value passed to update function state.
funcRam	Pointer to the function RAM allocation for common widget parameters, See Get Widget Word or Set Widget Word.
funcDef	Pointer to the function RAM allocation for function-specific definitions.
argCount	Function argument count in funcDef.
argStringMap	String address array, see discussion below.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

## Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), x(MSB), x(LSB), y(MSB), y(LSB), width(MSB), width(LSB),  
// height(MSB), height(LSB), pixel1, pixel2, ..., pixelN  
  
0x00, 0x23, 0x00, 0x00, 0x00, 0x00, 0x01, 0xE0, 0x00, 0xBC, 0x31, 0x81, 0x63... etc  
  
// This will display an image at X=0 (0x00, 0x00), Y=0 (0x00, 0x00)  
// with Width = 480 (0x01, 0xE0) and height = 188 (0x00, 0xBC)  
  
// The response will be 0x06 assuming the command was successful
```

### See also

The [Get Widget Word](#) for the discussion of common widget parameters



## 5.11. System Commands

The following is a summary of the commands available to be used for System:

- Memory Allocation
- Memory Release
- Memory Status
- Send Word Array to RAM
- Send Byte Array to RAM
- Get Display Model
- Get SPE Version
- Get PmmC Version
- Peek Memory
- Poke Memory

### 5.11.1. Memory Allocation

The 'memory allocate' command allocates a memory space for use with other functions.

**Library Function:** mem\_Alloc

**Syntax:** cmd (word), size (word)

Commands	Description
cmd	0xFF28
size	Size of memory block to be allocated.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), size(MSB), size (LSB)

0xFF, 0x28, 0x00, 0x03

// This will allocate memory with size of 3 (0x00, 0x03).

// The response will be 0x06, 0x00, 0x01 assuming the command was successful,
// and the memory allocated with its handle located at 1 (0x00, 0x01).
```

## 5.11.2. Memory Release

The **memory release** command releases the memory space used by the the **Load Image Control** and **file Load Function** commands.

**Library Function:** `mem_Free`

**Syntax:** `cmd (word), handle (word)`

Commands	Description
<code>cmd</code>	<code>0xFF24</code>
<code>handle</code>	Pointer to the memory block.

**Returns:** `acknowledge (byte), value (word)`

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *status*:
  - **0**: If the attempt failed.
  - **Non-0**: If the operation successful.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB)

0xFF, 0x24, 0x11, 0xB3

// This will release the memory utilized by the handle 4531 (0x11, 0xB3)

// The response will be 0x06, 0x00, 0x01 assuming the command was successful and the
// operation was successful.
```

### 5.11.3. Memory Status

Returns byte size of the largest chunk of memory available in the heap.

**Library Function:** `mem_Heap`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0xFF23</code>

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns the largest available memory chunk of the heap.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0xFF, 0x23

// This will return the largest available chunk of memory in the heap

// The response will be 0x06, 0x26, 0x86 assuming the command was successful and
// the display reported back 9862 (0x26, 0x86) bytes of available memory in its
// largest chunk
```

### 5.11.4. Send Word Array to RAM

This command sends an array of word sized data to a memory block allocated by mem\_Alloc.

**Library Function:** SendWordArrayToRAM

**Syntax:** cmd (word), handle (word), length (word), data(data)

Commands	Description
cmd	0x0029
handle	Pointer to an allocated memory block.
length	Length of word array.
data	Word array to be stored.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), length(MSB), length(LSB), word1(MSB),  
// word1(LSB), ..., wordN  
  
0x00, 0x29, 0x01, 0xB3, 0x00, 0x05, 0x00, 0x00, 0x00... etc  
  
// This will send a word array with length= 5 (0x00, 0x05) to a memory block with  
// handle = 435 (0x01, 0xB3).  
  
// The response will be 0x06 assuming the command was successful
```

#### See also

The `mem_Alloc` function to allocate memory block.

### 5.11.5. Send Byte Array to RAM

This command sends an array of byte sized data to a memory block allocated by mem\_Alloc.

**Library Function:** SendByteArrayToRAM

**Syntax:** cmd (word), handle (word), length (word), bytes (data)

Commands	Description
cmd	0x002A
handle	Pointer to allocated memory block.
length	Size of byte array.
bytes	Pointer to byte array.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), handle(MSB), handle(LSB), byte1, byte2, ..., etc.  
  
0x00, 0x2A, 0x01, 0xB3, 0x00, 0x05, 0x01, 0x02, ... etc.  
  
// This will send a byte array with length= 5 (0x00, 0x05) to a memory block with  
// handle = 435 (0x01, 0xB3).  
  
// The response will be 0x06 assuming the command was successful
```

#### See also

The `mem_Alloc` function to allocate memory block.

### 5.11.6. Get Display Model

Returns the Display Model in the form of a string without Null terminator.

**Library Function:** `sys_GetModel`

**Syntax:** `cmd (word)`

Commands	Description
cmd	0x001A

**Returns:** acknowledge (byte), count (word), model (string)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *count*: Number of characters in the model name to return.
- *model*: Display Module's model name. Without NULL terminator.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB)

0x00, 0x1A

// This will request the display to return its model name as a string of characters
// without the NULL.

// The response will be 0x06, 0x00, 0x0A, 0x75, 0x4C, 0x43, 0x44, 0x2D, 0x33, 0x32,
// 0x50, 0x54, 0x55 assuming the command was successful and the display returned 10
// characters (0x00, 0x0A) and the display model was "uLCD-32PTU" (0x75, 0x4C, 0x43,
// 0x44, 0x2D, 0x33, 0x32, 0x50, 0x54, 0x55)
```

### 5.11.7. Get SPE Version

Returns the SPE Version installed on the module.

**Library Function:** `sys_GetVersion`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0x001B</code>

**Returns:** acknowledge (byte), version (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *version*: SPE Version installed on the module.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0x00, 0x1B  
  
// This will return the version of the SPE Application loaded into the display  
  
// The response will be 0x06, 0x01, 0x00 assuming the command was successful and  
// the version of the SPE Application was 256 (0x01, 0x00)
```



### 5.11.8. Get PmmC Version

Returns the PmmC Version installed on the module.

**Library Function:** `sys_GetPmmC`

**Syntax:** `cmd (word)`

Commands	Description
<code>cmd</code>	<code>0x001C</code>

**Returns:** acknowledge (byte), version (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *version*: PmmC Version installed on the module.

#### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB)  
  
0x00, 0x1C  
  
// This will return the version of the PmmC loaded into the display  
  
// The response will be 0x06, 0x03, 0x03 assuming the command was successful and  
// the PmmC loaded was version 771 (0x03, 0x03)
```

### 5.11.9. Peek Memory

Returns the word contents of a specified memory address. This command would normally be used to read the contents of File and/or ImageControl handles.

**Library Function:** peekM

**Syntax:** cmd (word), address(word)

Commands	Description
cmd	0x0027
address	The address to be peeked.

**Returns:** acknowledge (byte), contents (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *contents*: The contents of the specified memory address.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), address(MSB), address(LSB)

0x00, 0x27, 0x14, 0x3C

// This example assumed a file had been opened and the handle returned was at 0x142A.
// Offset 18 from this (0x143C) is the FILE_ATTRIBUTES word.

// The response will be 0x06, 0x00, 0x20 assuming the command was successful and the
// file had the Archive bit set.
```

### 5.11.10. Poke Memory

Sets the word contents of a specified memory address. This command would normally be used to alter the contents of File and/or ImageControl handles.

**Library Function:** pokeM

**Syntax:** cmd (word), address (word), wordvalue (word)

Commands	Description
cmd	0x0028
address	The address to be poked.
wordvalue	The data to be poked into the address.

**Returns:** (0x06) ACK byte if successful. Anything else implies mismatch between command and response.

#### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), address(MSB), address(LSB)

0x00, 0x27, 0x14, 0x3C, 0x00, 0x00

// This example assumed a file had been opened and the handle returned was at 0x142A.
// Offset 18 from this (0x143C) is the FILE_ATTRIBUTES word.


// The response will be 0x06 assuming the command was successful. This example would
// clear the Archive bit.
```

---

## 5.12. I/O Commands

The following is a summary of the commands available to be used for I/O Control:

- Pin HI
- Pin LO
- Pin Read
- Pin Set

 **Note**

Refer to the display module datasheet to check for pin availability. Not all GPIO are available on every display module, and if using the PIXXI processor in a custom module, check the mode you are using and what GPIO is available for use first.

### 5.12.1. Pin HI

Outputs a "High" level (logic 1) on the appropriate pin that was previously selected as an Output. If the pin is not already set to an output, it is automatically made an output.

I/O pins should be set as OUTPUT first, using the Pin Set commands.

Pin Constants able to be used with the Pin HI, Pin LO and Pin Read commands:

I01_PIN	1
I02_PIN	2
I03_PIN	3
I04_PIN	4
I05_PIN	5
I06_PIN	6
I07_PIN	7
I08_PIN	8
I09_PIN	9
I010_PIN	10
I011_PIN	11
I012_PIN	12
I013_PIN	13
I014_PIN	14
I015_PIN	15
I016_PIN	16
I017_PIN	17
I018_PIN	18
I019_PIN	19

#### Note

Not all IO Pins are available on every module, in fact only a couple are typically available for User applications. Please check with your display module datasheet to see what is available. If using the PIXXI in a custom application, check your mode and what GPIO is available for the User.

Constant variables available for use when using a 4D Labs Serial library.

**Library Function:** `pin_Hi`

**Syntax:** `cmd (word), pin (word)`

Commands	Description
<code>cmd</code>	0xFFD6
<code>pin</code>	A value specifying the pin number.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns 1 if the pin value was a legal number.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), pin(MSB), pin(LSB)  
  
0xFF, 0xD6, 0x00, 0x04  
  
// This will set Pin 4 (I04) to output HI  
  
// The response could be 0x06, 0x00, 0x01 assuming the command was successful,  
// and the pin number was legal (0x00, 0x01)
```

#### See also

[Pin Set](#) command, to determine if the pin is an INPUT or an OUTPUT.

### 5.12.2. Pin LO

Outputs a "Low" level (logic 0) on the appropriate pin that was previously selected as an Output. If the pin is not already set to an output, it is automatically made an output.

I/O pins should be set as OUTPUT first, using the Pin Set commands.

I/O pins should be set as OUTPUT first, using the Pin Set commands.

Pin Constants able to be used with the Pin HI, Pin LO and Pin Read commands:

I01_PIN	1
I02_PIN	2
I03_PIN	3
I04_PIN	4
I05_PIN	5
I06_PIN	6
I07_PIN	7
I08_PIN	8
I09_PIN	9
I010_PIN	10
I011_PIN	11
I012_PIN	12
I013_PIN	13
I014_PIN	14
I015_PIN	15
I016_PIN	16
I017_PIN	17
I018_PIN	18
I019_PIN	19

#### Note

Not all IO Pins are available on every module, in fact only a couple are typically available for User applications. Please check with your display module datasheet to see what is available. If using the PIXXI in a custom application, check your mode and what GPIO is available for the User.

Constant variables available for use when using a 4D Labs Serial library.

**Library Function:** `pin_Lo`

**Syntax:** `cmd (word), pin (word)`

Commands	Description
<code>cmd</code>	0xFFD5
<code>pin</code>	A value specifying the pin number.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns 1 if the pin value was a legal number.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), pin(MSB), pin(LSB)

0xFF, 0xD5, 0x00, 0x05

// This will set Pin 5 (I05) to output HI

// The response could be 0x06, 0x00, 0x01 assuming the command was successful,
// and the pin number was legal (0x00, 0x01)
```

#### See also

[Pin Set](#) command, to determine if the pin is an INPUT or an OUTPUT.



### 5.12.3. Pin Read

Returns a "Low" level (logic 0) or a "High" level (logic 1) based on the value of the selected pin.

I/O pins can be set as either INPUT or OUTPUT, using the Pin Set/Bus Set commands.

Pin Constants able to be used with the Pin HI, Pin LO and Pin Read commands:

I01_PIN	1
I02_PIN	2
I03_PIN	3
I04_PIN	4
I05_PIN	5
I06_PIN	6
I07_PIN	7
I08_PIN	8
I09_PIN	9
I010_PIN	10
I011_PIN	11
I012_PIN	12
I013_PIN	13
I014_PIN	14
I015_PIN	15
I016_PIN	16
I017_PIN	17
I018_PIN	18
I019_PIN	19

#### Note

Not all IO Pins are available on every module, in fact only a couple are typically available for User applications. Please check with your display module datasheet to see what is available. If using the PIXXI in a custom application, check your mode and what GPIO is available for the User.

Constant variables available for use when using a 4D Labs Serial library.

**Library Function:** `pin_Read`

**Syntax:** `cmd (word), pin (word)`

Commands	Description
<code>cmd</code>	0xFFD4
<code>pin</code>	A value specifying the pin number.

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns a 0 or 1 depending on the state of the pin.

### Examples

```
// Byte Stream:
// cmd(MSB), cmd(LSB), pin(MSB), pin(LSB)

0xFF, 0xD4, 0x00, 0x01

// This will read the value of Pin 1

// The response could be 0x06, 0x00, 0x01 assuming the command was successful,
// and the I/O pin was set HI (0x00, 0x01)
```

#### See also

[Pin Set](#) command, to determine if the pin is an INPUT or an OUTPUT.

### 5.12.4. Pin Set

There are pre-defined constants for **mode** and **pin**:

#### MODE:

CONSTANT	VALUE	DESCRIPTION
OUTPUT	0	Pin is set as an output.
INPUT	1	Pin is set as an input.

#### PIN:

I01_PIN	1
I02_PIN	2
I03_PIN	3
I04_PIN	4
I05_PIN	5
I06_PIN	6
I07_PIN	7
I08_PIN	8
I09_PIN	9
I010_PIN	10
I011_PIN	11
I012_PIN	12
I013_PIN	13
I014_PIN	14
I015_PIN	15
I016_PIN	16
I017_PIN	17
I018_PIN	18
I019_PIN	19

#### Note

Not all IO Pins are available on every module, in fact only a couple are typically available for User applications. Please check with your display module datasheet to see what is available. If using the PIXXI in a custom application, check your mode and what GPIO is available for the User.

**Library Function:** `pin_Set`

**Syntax:** `cmd (word), mode (word), pin (word)`

Commands	Description
<code>cmd</code>	0xFFD7
<code>mode</code>	A value specifying the pin mode.
<code>pin</code>	A value specifying the pin number.

---

**Returns:** acknowledge (byte), value (word)

- *acknowledge*: (0x06) ACK byte if successful. Anything else implies mismatch between command and response.
- *value*: Returns 1 if the pin value was a legal number.

### Examples

```
// Byte Stream:  
// cmd(MSB), cmd(LSB), mode(MSB), mode(LSB), pin(MSB), pin(LSB)  
  
0xFF, 0xD7, 0x00, 0x01, 0x00, 0x03  
  
// This will set Pin 3 (I03) as an Input  
  
// The response could be 0x06, 0x00, 0x01 assuming the command was successful,  
// and the I/O pin specified was a valid pin number (0x00, 0x01)
```

## 6. Revision History

Document Revision		
Revision Number	Date	Description
1.0	26/03/2020	Initial Release Version.
1.1	20/07/2020	Fixed issues with section 5.10 as well as its subsections. Moved blit Word Array to RAM to section 5.11 and Renamed it to Send Word Array to RAM Moved blit Byte Array to RAM to section 5.11 and Renamed it to Send Byte Array to RAM Added mode 3 in file_LoadImageControl Added word parameter option instead of string for dat and gci filename, this is for mode 3 Added img_FunctionCall.
1.2	31/01/2022	Fixed 2 typos in this document where gfx_Scale and gfx_Panel2 incorrectly shared the same hex ID as gfx_Slider.
1.3	30/05/2024	Converted for resource centre.

---

## 7. Legal Notice

### 7.1. Proprietary Information

The information contained in this document is the property of 4D Systems Pty. Ltd. and may be the subject of patents pending or granted, and must not be copied or disclosed without prior written permission. 4D Systems endeavours to ensure that the information in this document is correct and fairly stated but does not accept liability for any error or omission. The development of 4D Systems products and services is continuous and published information may not be up to date. It is important to check the current position with 4D Systems. 4D Systems reserves the right to modify, update or makes changes to Specifications or written material without prior notice at any time.

All trademarks belong to their respective owners and are recognised and acknowledged.

### 7.2. Disclaimer of Warranties & Limitations of Liabilities

4D Systems makes no warranty, either expressed or implied with respect to any product, and specifically disclaims all other warranties, including, without limitation, warranties for merchantability, non-infringement and fitness for any particular purpose.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications.

Images and graphics used throughout this document are for illustrative purposes only. All images and graphics used are possible to be displayed on the 4D Systems range of products, however the quality may vary.

In no event shall 4D Systems be liable to the buyer or to any third party for any indirect, incidental, special, consequential, punitive or exemplary damages (including without limitation lost profits, lost savings, or loss of business opportunity) arising out of or relating to any product or service provided or to be provided by 4D Systems, or the use or inability to use the same, even if 4D Systems has been advised of the possibility of such damages.

4D Systems products are not fault tolerant nor designed, manufactured or intended for use or resale as on line control equipment in hazardous environments requiring fail - safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines or weapons systems in which the failure of the product could lead directly to death, personal injury or severe physical or environmental damage ('High Risk Activities'). 4D Systems and its suppliers specifically disclaim any expressed or implied warranty of fitness for High Risk Activities.

Use of 4D Systems' products and devices in 'High Risk Activities' and in any other application is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless 4D Systems from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any 4D Systems intellectual property rights.